

Installation Guide

100-240V Redundant Power Supply Module

TL-MCRP100




For technical support and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code


7106508299 REV2.0.0

Panel Layout


Front Panel

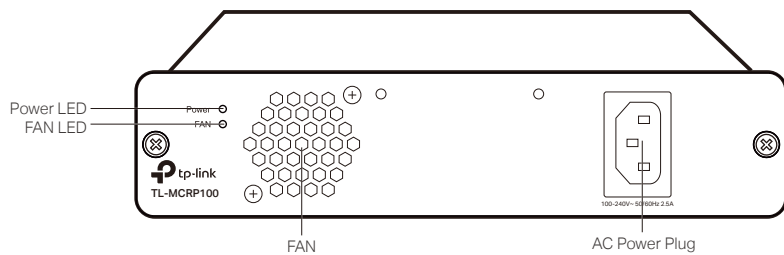


Rear Panel

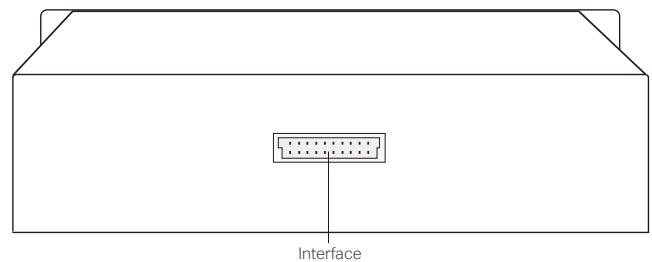


LED Explanation

 **Power**
 On: Power on
 Off: Power off

 **FAN**
 On: The fans are working properly.
 Off: The fans are working abnormally.


Installation

Remove the protective cover on the power supply module slot of TL-MC1400. Then gently push in the module and plug it solidly into the connector.

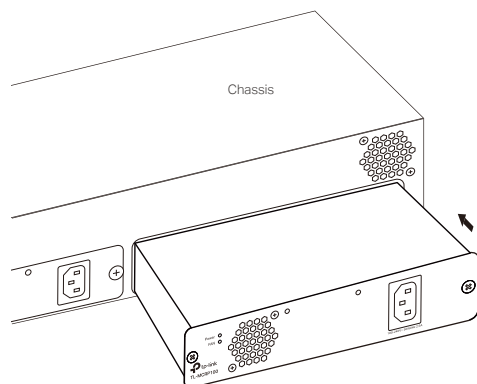

Power On

Plug the negative connector of the AC power cord into the power socket of TL-MCRP100, and the positive connector into a power outlet as the following figure shows. After TL-MCRP100 is powered on normally, the Power LED and FAN LED indicators on its front panel will keep on.

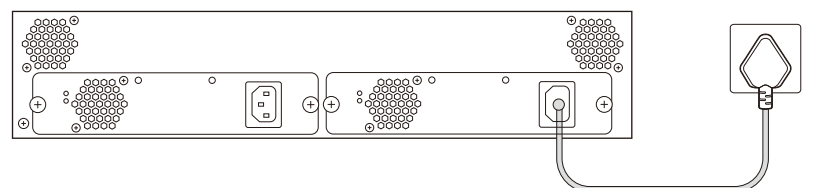

Note: TL-MCRP100 v2.0 supports TL-MC1400 v3.0, while TL-MCRP100 v1.0 supports TL-MC1400 v1.0/2.0.