


## **D-LINK USB** **Installation Manual**

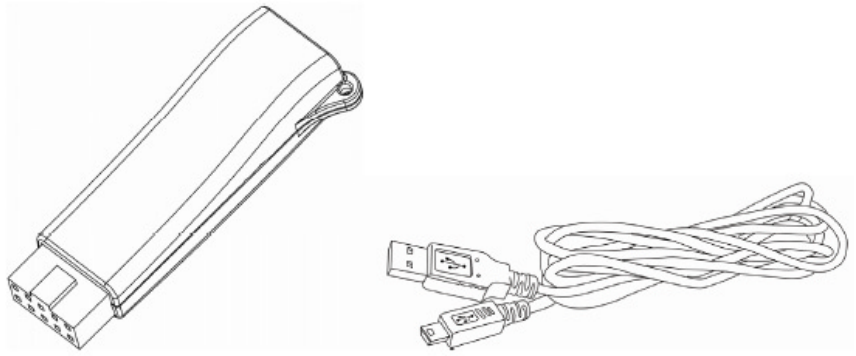

### **General**

The D-LINK USB adaptor use for direct connection between the CROW control panels (PowerWave, Runner) and a PC computer with Upload/Download Program (ULD/XLD).

### **Driver Installation**

Before first time using the D-LINK USB, install the USB Driver on your PC computer.

Follow these steps for the USB's Driver installation.

- Use the Internet connection and download into your PC the USB driver from the following link:

**<http://www.thecrowgroup.com/support-download.asp>**

- Save the file to your Desktop.

- Open the file into the default path:

**C:\SiLabs\MCU\CP210x\Windows\_2K\_XP\_S2K3**

- From the folder named:

**C:\SiLabs\MCU\CP210x\Windows\_2K\_XP\_S2K3**

- Run the file: (It might take about 60sec. to install)

**CP210xVCPInstaller**

- After the installation is complete, connect the USB device.

- The computer automatically will find and install the device.

- If program does not start automatically look for the driver in the following folder:

**C:\Program Files\Silabs\MCU\CP210x\**

### **Control Panel Connection**

In order to connect the D-LINK USB to the control panel follow the following steps:

1. Unscrew the 2 holding screws and remove the cover.
2. Plug the adaptor to the control panel.
3. Connect the small USB connector of the cable into the D-LINK USB adaptor.
4. Plug the USB cable into the PC USB Socket.
5. Start the Upload / Download program on the PC computer.
6. On the tool bar open Communications >>Source and choose the right COM port.

