



USER / INSTALLER MANUAL





00. CONTENT

INDEX

01. SAFETY INSTRUCTIONS	1B
02. THE PRODUCT	
RAP50	4A
LED INDICATION	4A
TECHNICAL CHARACTERISTICS	4B
DESCRIPTION	4B
DIMENSIONS	4B
03. INSTALLATION	
INSTALLATION AND CONNECTIONS	5
04. CONFIGURATION	
DIP SWITCH SETTINGS	6A
ORIENTATION DETECTION	6A
PRESENCE TIMER	6B
RELAY CONTACT TYPE	6B
05. PROGRAMMING	
DETECTION AREA ADJUSTMENT	7A
REGULATE SENSITIVITY	7A
WIDTH ADIUSTMENT	78

06. TROUBLESHOOTING

INSTRUCTIONS FOR CONSUMERS AND SPECIALIZED TECHNICIANS	_8

01. SAFETY INSTRUCTIONS

ATTENTION:

X

23

CE This product is certified in accordance with European Community (EC) safety standards.

RoHS This product complies with Directive 2011/65/EU of the European Parliament and of the Council, of 8 June 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment and with Delegated Directive (EU) 2015/863 from Commission.

(Applicable in countries with recycling systems).

This marking on the product or literature indicates that the product and electronic accessories (eg. Charger, USB cable, electronic material, controls, etc.) should not be disposed of as other household waste at the end of its useful life. To avoid possible harm to the environment or human health resulting from the uncontrolled disposal of waste, separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Home users should contact the dealer where they purchased this product or the National Environment Agency for details on where and how they can take these items for environmentally safe recycling. Business users should contact their vendor and check the terms and conditions of the purchase agreement. This product and its electronic accessories should not be mixed with other commercial waste.

This marking indicates that the product and electronic accessories (eg. charger, USB cable, electronic material, controls, etc.) are susceptible to electric shock by direct or indirect contact with electricity. Be cautious when handling the product and observe all safety procedures in this manual.





GENERAL WARNINGS

- •This manual contains very important safety and usage information. Read all instructions carefully before beginning the installation/ usage procedures and keep this manual in a safe place that it can be consulted whenever necessary.
- •This product is intended for use only as described in this manual. Any other enforcement or operation that is not mentioned is expressly prohibited, as it may damage the product and put people at risk causing serious injuries.
- This manual is intended firstly for specialized technicians, and does not invalidate the user's responsibility to read the "User Norms" section in order to ensure the correct functioning of the product.
- •The installation and repair of this product may be done by qualified and specialized technicians, to assure every procedure are carried out in accordance with applicable rules and norms. Nonprofessional and inexperienced users are expressly prohibited of taking any action, unless explicitly requested by specialized technicians to do so.
- Installations must be frequently inspected for unbalance and the wear signals of the cables, springs, hinges, wheels, supports and other mechanical assembly parts.
- Do not use the product if it is necessary repair or adjustment is required.
- When performing maintenance, cleaning and replacement of parts, the product must be disconnected from power supply. Also including any operation that requires opening the product cover.
- •The use, cleaning and maintenance of this product may be carried out by any persons aged eight years old and over and persons whose physical, sensorial or mental capacities are lower, or by persons without any knowledge of the product, provided that these are supervision and instructions given by persons with experienced in terms of usage of the product in a safe manner and who understands the risks and dangers involved.

• Children shouldn't play with the product or opening devices to avoid the motorized door or gate from being triggered involuntarily.

WARNINGS FOR TECHNICIANS

- Before beginning the installation procedures, make sure that you have all the devices and materials necessary to complete the installation of the product.
- You should note your Protection Index (IP) and operating temperature to ensure that is suitable for the installation site.
- Provide the manual of the product to the user and let them know how to handle it in an emergency.
- If the automatism is installed on a gate with a pedestrian door, a door locking mechanism must be installed while the gate is in motion.
- Do not install the product "upside down" or supported by elements do not support its weight. If necessary, add brackets at strategic points to ensure the safety of the automatism.
- Do not install the product in explosive site.
- Safety devices must protect the possible crushing, cutting, transport and danger areas of the motorized door or gate.
- Verify that the elements to be automated (gates, door, windows, blinds, etc.) are in perfect function, aligned and level. Also verify if the necessary mechanical stops are in the appropriate places.
- •The central must be installed on a safe place of any fluid (rain, moisture, etc.), dust and pests.
- •You must route the various electrical cables through protective tubes, to protect them against mechanical exertions, essentially on the power supply cable. Please note that all the cables must enter the central from the bottom.
- If the automatism is to be installed at a height of more than 2,5m from the ground or other level of access, the minimum safety and health requirements for the use of work equipment workers at the work of Directive 2009/104/CE of European Parliament and of the Council of 16

September 2009.

- Attach the permanent label for the manual release as close as possible to the release mechanism.
- Disconnect means, such as a switch or circuit breaker on the electrical panel, must be provided on the product's fixed power supply leads in accordance with the installation rules.
- If the product to be installed requires power supply of 230Vac or 110Vac, ensure that connection is to an electrical panel with ground connection.
- The product is only powered by low voltage satefy with central (only at 24V motors)

WARNINGS FOR USERS

- Keep this manual in a safe place to be consulted whenever necessary.
- If the product has contact with fluids without being prepared, it must immediately disconnect from the power supply to avoid short circuits. and consult a specialized technician.
- Ensure that technician has provided you the product manual and informed you how to handle the product in an emergency.
- If the system requires any repair or modification, unlock the automatism, turn off the power and do not use it until all safety conditions have been met.
- In the event of tripping of circuits breakers of fuse failure, locate the malfunction and solve it before resetting the circuit breaker or replacing the fuse. If the malfunction is not repairable by consult this manual. contact a technician.
- Keep the operation area of the motorized gate free while the gate in in motion, and do not create strength to the gate movement.
- Do not perform any operation on mechanical elements or hinges if the product is in motion.

RESPONSABILITY

- Supplier disclaims any liability if:
 - Product failure or deformation result from improper installation use or maintenance!
 - ·Safety norms are not followed in the installation, use and maintenance of the product.
 - Instructions in this manual are not followed.
 - Damaged is caused by unauthorized modifications
 - In these cases, the warranty is voided.

MOTORLINE ELECTROCELOS SA.

Travessa do Sobreiro. nº29 4755-474 Rio Côvo (Santa Eugénia) Barcelos, Portugal

SYMBOLS LEGEND:




 Important safety notices



Useful information



 Programming information

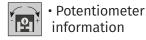





information



02. THE PRODUCT

RAP50


The **RAP50** is a small microwave radar ideal for glass and pedestrian doors, and can be installed up to 4m high. It has long-distance technology for unidirectional detection of people or objects.

TECHNICAL CHARACTERISTICS


• Power supply	12-30 Vdc, 12-24Vac
Detection method	Microwave Technology
Maximum installation height	4.0[m]
Consumption	< 1,4 W
Contact capacity	0,5A /125 V AC, 1A /24V DC
Detection area	5 m (W) x 3 m (D) x 2.2 m (H)
Working frequency	24.125 GHz
• Relay wait time	1.2 seconds
Operating temperature	-20°C to +60°C (-40F to 1400F)
Operating humidity	Below 90%
Protection class	IP54
• Weight	320g (without cable), 650g (with cable)
• Dimensions	120mm (width) x 41.5mm (height) x 70mm (depth)

02. THE PRODUCT

DESCRIPTION

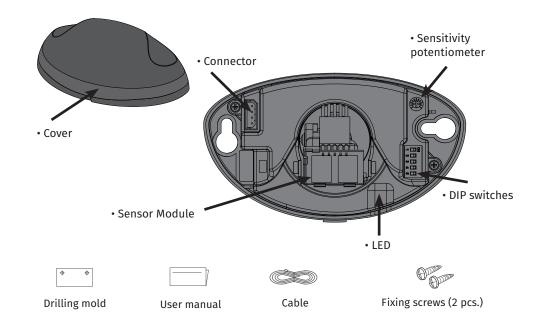

DIMENSIONS

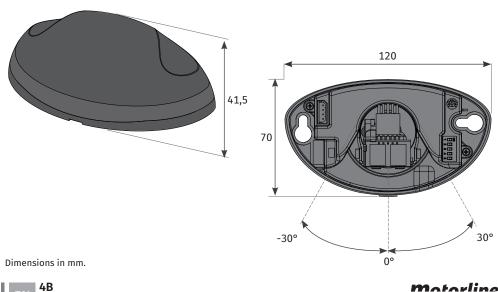

LED INDICATION

 Green
 On hold.

 Blue
 Microwave detection

Motorline




EN




03. INSTALLATION

INSTALLATION AND CONNECTIONS

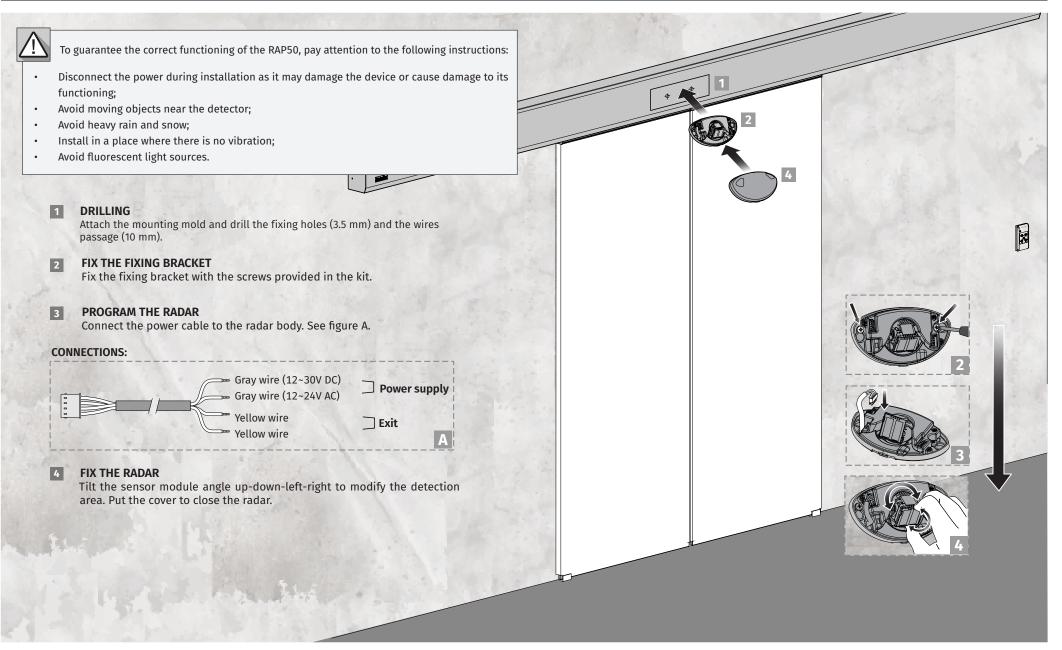


04. CONFIGURATION

DIP SWITCH SETTINGS

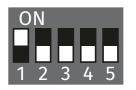

ORIENTATION DETECTION

This setting is used to define the orientation of the flow direction of people or objects.

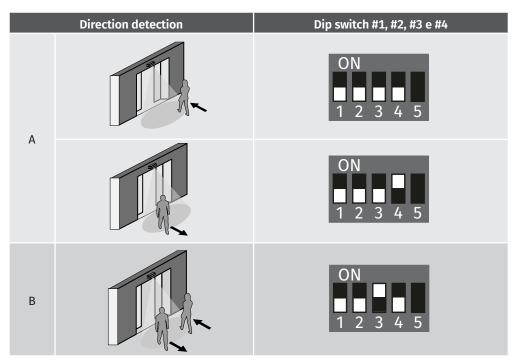


In the next table "Presence timer" you can set the time according to the option previously chosen for the orientation.

04. CONFIGURATION

PRESENCE TIMER

	Time	Dip switch #1, #2, #3 e #4
A	1s (factory set)	ON 1 2 3 4 5
	35	ON 1 2 3 4 5
	5s	ON 1 2 3 4 5
В	1s	ON 1 2 3 4 5
	35	ON 1 2 3 4 5
	5s	ON 1 2 3 4 5

RELAY CONTACT TYPE

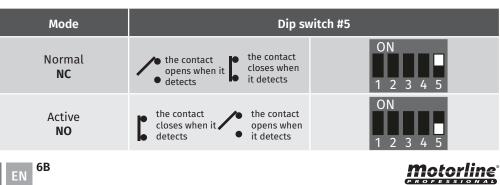




6B EN

05. PROGRAMMING

DETECTION AREA ADJUSTMENT

Adjust the detection module up or down to determine how close the detection area is to the door.


Adjust the detection module to the left or right to obtain the desired side detection area.

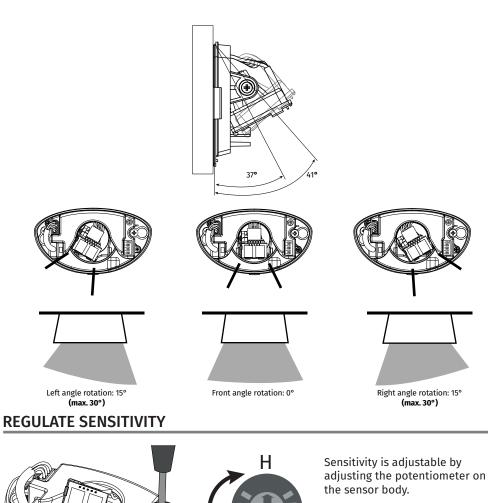


When shipped from the factory, the sensor is at the maximum sensitivity value.

05. PROGRAMMING


WIDTH ADJUSTMENT

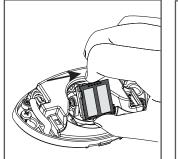

01 • Rotate the sensor module in the direction of the arrow while holding the module support with the other hand.

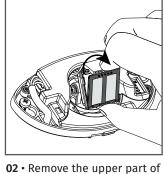

the sensor towards you.

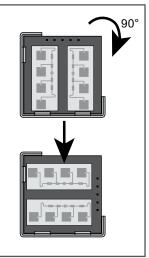

03 • Rotate the sensor module by 90° and insert it back into the support.

Ex: In the diagram below, a detection field is shown at a mounting height of 2.2 meters in the two width adjustment modes.





Vertical angle of the sensor module



Horizontal angle of the sensor module

3 25 2 15 1 05 0 05 1 15 2 25 3m

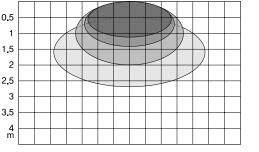

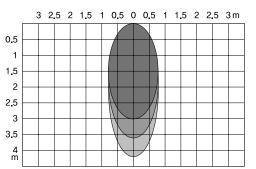

Motorline[®]

ΕN





06. TROUBLESHOOTING

INSTRUCTIONS FOR CONSUMERS AND SPECIALIZED TECHNICIANS

FAILURE	CAUSE / RESOLUTION
No LED on	 There is no current supplying the device; The device is defective (send to technical services).
The door is detected	 Tilt the sensor housing out of the door; Lower the sensitivity setting;
Object is detected too late	• Increase sensitivity.