

TouchKey Bluetooth Access Controller

User Manual

Introduction

The device is TouchKey Access Controller with Bluetooth enabled. People can install the Bluetooth APP to easily access the door with their smartphones. The APP supports 100 mobile apps, and can manage 255 users (Fingerprint / PIN / Card) (maximum by the APP).
It is compatible with type iOS 7.0 (8 above) and Android (4.3 above) (based on Bluetooth version 4.0 above).

APP Operation

Here are just a few steps to get you started.

1. Free APP Downloading: Search "TouchKey" on Google Play or APP Store.
2. Make sure turning on the Bluetooth on your mobile phone.

1. Register & Login

(Make sure the registered email is legal and valid, so that you can receive your password once forgotten. Mobile Number is for China Mobile ONLY)

You will get a verification code in your mailbox.

2. Add Device

You can add device by clicking "+" or "Add Device" on the top.

Note: To better manage the devices and family members, you will need to create a HOME before you begin to manage this device.

3. Set Member Management

Note: The first to add the device is the Home Owner (Super Master)

Authority	Home Owner (Super Master)	Administrator	Common Users
Open the Door	✓	✓	✓
Member Management	✓	✓	✗
User Management	✓	✓	✗
View All Records	✓	✓	✗
Set Relay Time	✓	✓	✗

3.1 Add Family Member (Family Member enjoys the Permanent Permission)

3.2 Add Other Member

Note: If family members or other members will also need to register the account before accessing the controller from Family Owner.

Please note: When adding other members, you can choose to authorize them Permanent or Limited Grant and also permissions. For Limited Grant and also permissions, you will request to choose the limited time period for the user.

After the above operations, "Add Other Member" is not finished yet, please follow below steps to finish.

3.3 Delete Members

4. User Management

The APP supports to Add / Delete Fingerprint / PIN / Card users. Home Owner can add/delete users to anyone (includes family members). Family members can add/delete users to themselves.

4.1 Add Fingerprint Users

(Only available for device supports fingerprint access)

4.2 Add Password Users (PIN length for APP is 6 digits only)

You will need to press your Fingerprint 3 times on the device and then you will be requested to name the trigger.

4.2.1 Hijack Password (Also call Panic Users)

When you Add a new password, you can also set it as Hijack Password. This is for the situation when you're forced to open the door, you can use the Hijack Password to open the door, at the same, it will trigger the alarm.

4.3 Add Card Users (Card type: 125KHz EM Card / 13.56MHz Mifare Card)

4.4 Delete Fingerprint / PIN / Card Users

Click the user that you would like to delete, then you can delete specific users.

5. Set Pulse / Latch Mode

Automatic Lock Switch: ON, Pulse Mode
Automatic Lock Switch: OFF, Latch Mode
Default is ON.

6.1 Set Relay Time (Relay time is 0-110s, default is 5s)

6.2 Set Magnetic Door Alarm (Default is OFF)

After turn on, it will trigger the alarm if the door forced to open.

6.3 Set Alarm Time (Alarm time is 0-3 minutes, default is 1 minute)

6. Open Record

Only the Home Owner and Administrator can view all the records. Common users can view their own records only.

7. Remove Device

Note: If a Home Owner removed the device, all the family members and other members "Reset" any permission to operate the device.

8. Others

8.1 Record of Alarm (Invalid User Open Record)

8.2 Dynamic Password

Swipe left to enter into the Dynamic Password interface. Every dynamic password will be expired after 3 minutes. Usually used for Visitor.

8.3 Add APP to Home Screen

After adding to Home Screen, it will be easier to enter into the APP to access the door.

8.4 Support Gateway (Optional)

With the Gateway, you can remotely open the door or manage your Bluetooth Device.