


HD 1080P Table Clock Security Wi-Fi Camera

User Manual

Version: May, 2016

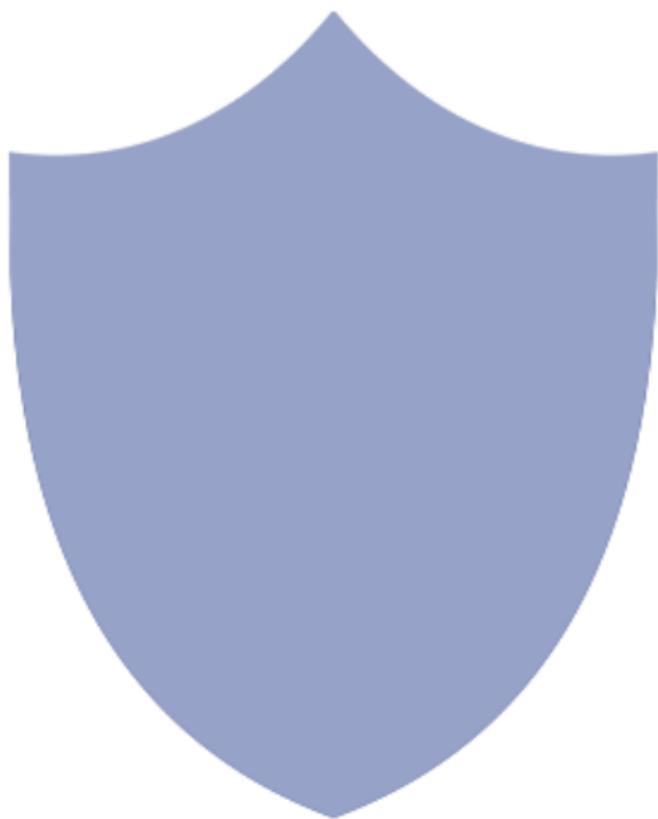

Content

Quick Guide.....	P2
Overview.....	P3
Packing List.....	P3
Product Instruction.....	P4
Clock Part Setting.....	P5
Camera Part Setting.....	P5
Camera name and password setting.....	P9
APP Introduction.....	P10
PC Setting(LAN).....	P12
PC Setting(WAN).....	P14
Specification.....	P15
FAQ.....	P15



Quick guide of Wi-Fi camera function

1. Download Free App **Pro iCam** from App Store or Google Play.
2. Plug in power → Turn on device's backside ON/OFF button, wait for 2 minutes (Front blue light blink slowly.);
3. Enter smartphone setting → Search and connect device's wifi named: YM....., wait till phone status bar appear Wi-Fi  symbol;
4. Enter APP,  press top right "+" icon → Add new online camera → Search(LAN) → Select camera → Press Ok → Camera Online then;
TIPS: 1. Please select **【Change】** to change device password for security default: 8888 ;
2. This step = P2P mode, can check video locally when without Wi-Fi.
5. Press gear icon after camera → Device Settings → WiFi Config → Select your Wi-Fi → Input password → Press Ok;
6. Quit APP, wait 30 seconds. Device will restart automatically and connect to your setted Wi-Fi (Front blue light always on);
7. Enter APP to check live video locally or remotely anywhere.

P.S.: Contact local dealer for video guide setting up.

Overview

The HD 1080P Table Clock Wi-Fi Camera is a totally new design, firm housing table clock with an integrated smart & powerful 1080P Wi-Fi Camera.

First, it is a super simple table clock with time display only (12 /24 hour);

Second, it can be easily connected to Wi-Fi and watch live video, or remotely take photo and video by APP in smartphone anywhere in the world; Also, it supports Point to Point (P2P) function, connected by APP to smartphone for local live video without Wi-Fi.


Third, the item also support motion detect alarm function, cycle recording and work when charging.

Usages:Nanny camera, Home/ Shop/ Office/ Warehouse surveillance camera.


In the box

- 1x Table clock camera
- 1x USB cable
- 1x AC power adapter
- 1x CD driver
- 1x User manual

Product instruction

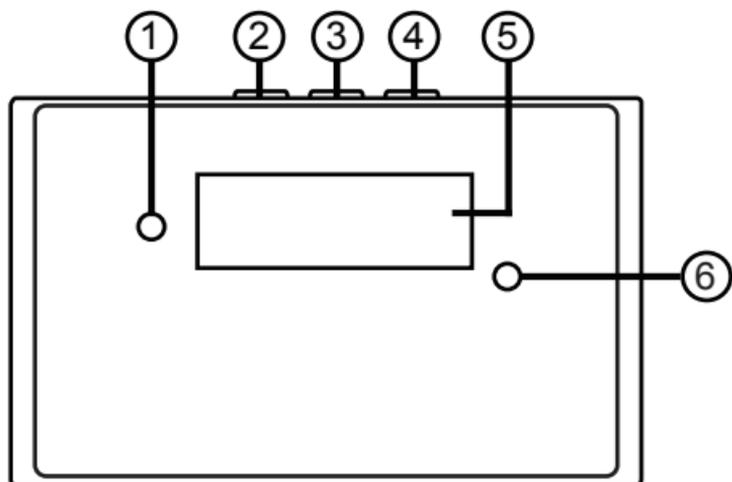

- | | |
|-------------------------|----------------|
| ① Wi-Fi indicator light | ④ Down |
| ② SET | ⑤ Time display |
| ③ UP | ⑥ Camera |

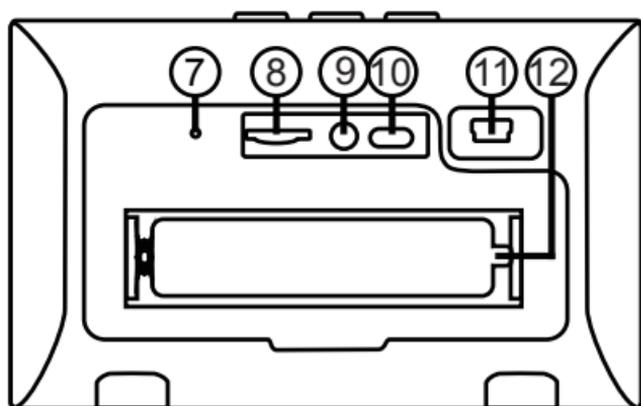

- | | |
|----------------------------|----------------------------|
| ⑦ Charging indicator light | ⑩ ON/OFF(For wi-fi Camera) |
| ⑧ Micro SD card slot | ⑪ USB port |
| ⑨ Reset key | ⑫ Battery |

Getting started of clock part

Open back cover, remove the protective seal from the battery and plug it into AC power using the included adapter; Time display will be lighted on.

Press SET to set hour/minutes;
Press UP to set 12/24 hour format.


Getting started of Wi-Fi camera part

Step1: Download and install APP

Scan below QR code or search and download free APP named “**Pro iCam**” in Apple APP store, Google play or Electronic market, and install it.



[Pro iCam] APP QR code

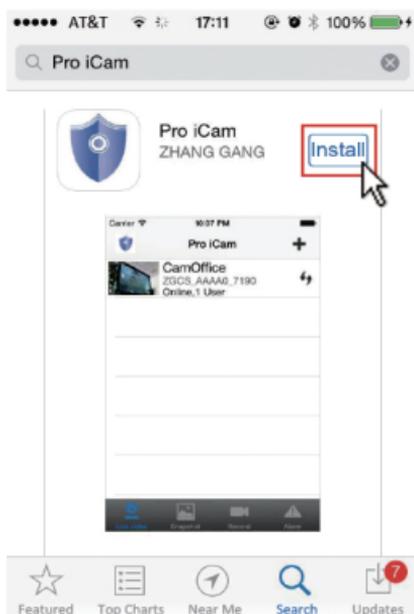

Step2: Connect power and turn on device

Remove the protective seal from the battery and plug it into AC power using the included adapter; Turn on backside switch, and wait for 2 minutes.


(Front blue light blink slowly.)

Step 3:Connect Wi-Fi



1. Open smartphone setting, search and connect mobile Wi-Fi to the wireless signal named “YM.....”, wait Wi-Fi connected, and phone status bar appear Wi-Fi  symbol.





2. Open APP, press symbol + at the top right corner, select "Add new online camera"; Search for new camera and press ok. Then back to the first page to see the live video of camera and do the following setting.

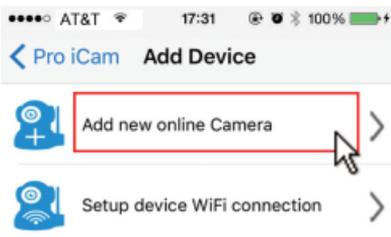

- TIPS:** 1. Please select **【Change】** to change device password for security **【default: 8888】** ;
2. This step = P2P mode, can check video locally when without Wi-Fi.

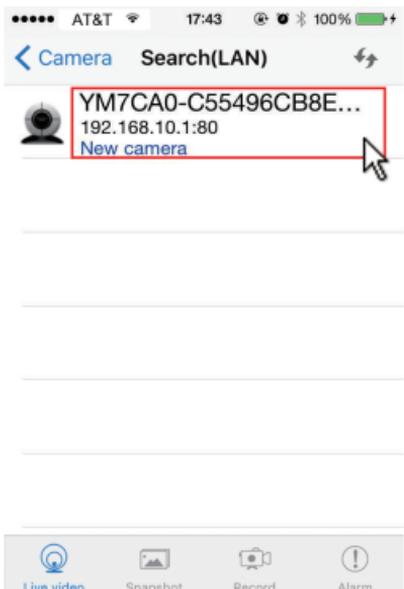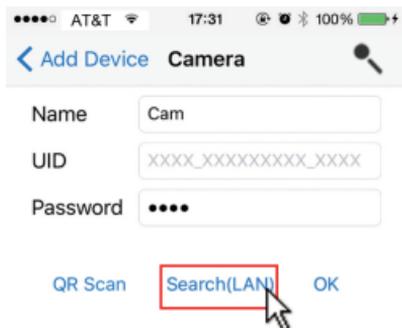

3. Press the gear icon  after the camera or long press the camera and select Device Settings, select Wi-Fi Config.

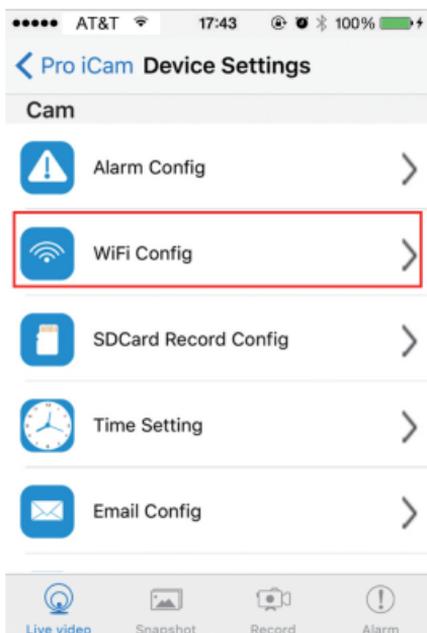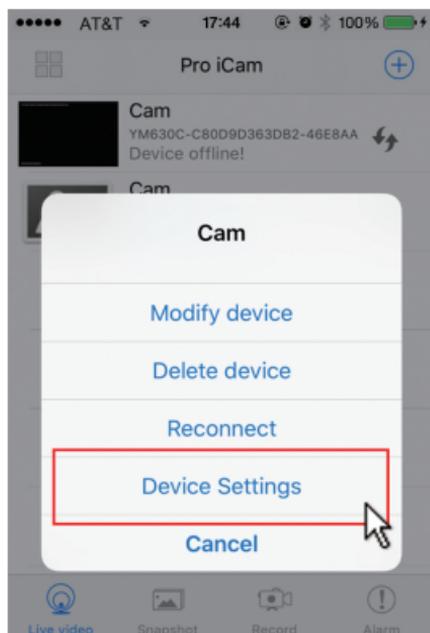

4. Select your Wi-Fi and input passcode, camera will be connected to your Wi-Fi. Your smartphone will disconnect the signal from device and connect to your Wi-Fi.

5. Quit APP, and device restart automatically and ready again in 30 seconds.




6. Enter APP and check live video locally or remotely.(back red light always on) (Front blue light always on).




Set camera name and private code

Set name: Press the  after the camera or long press the camera, select Modify device, select Name and revise name like Office, Room.....


Set code: Long press the camera and select Device Settings, select Change password. Current one is 8888.

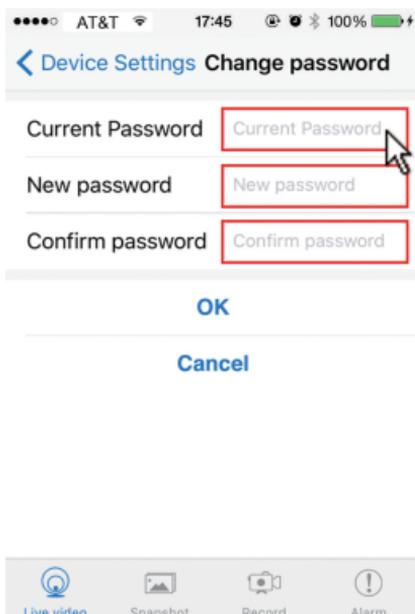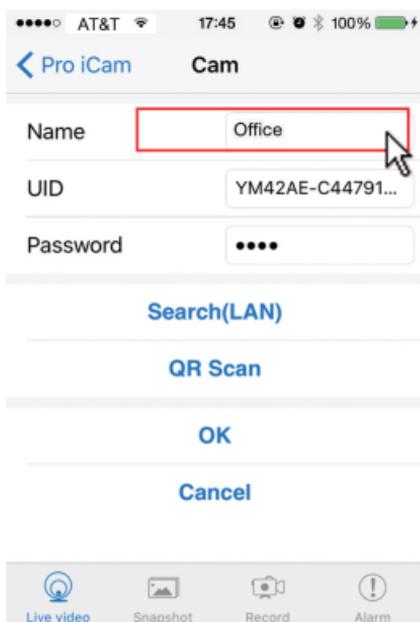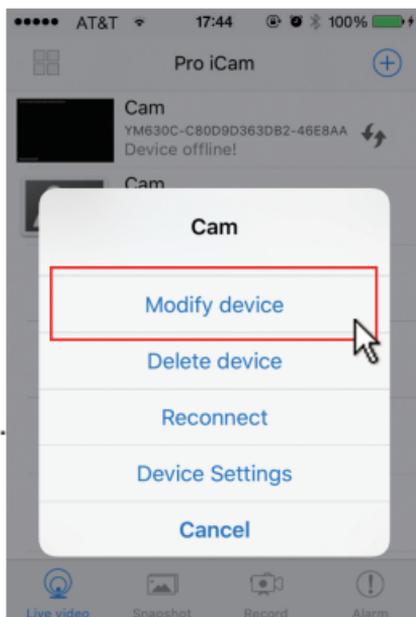

APP introduction

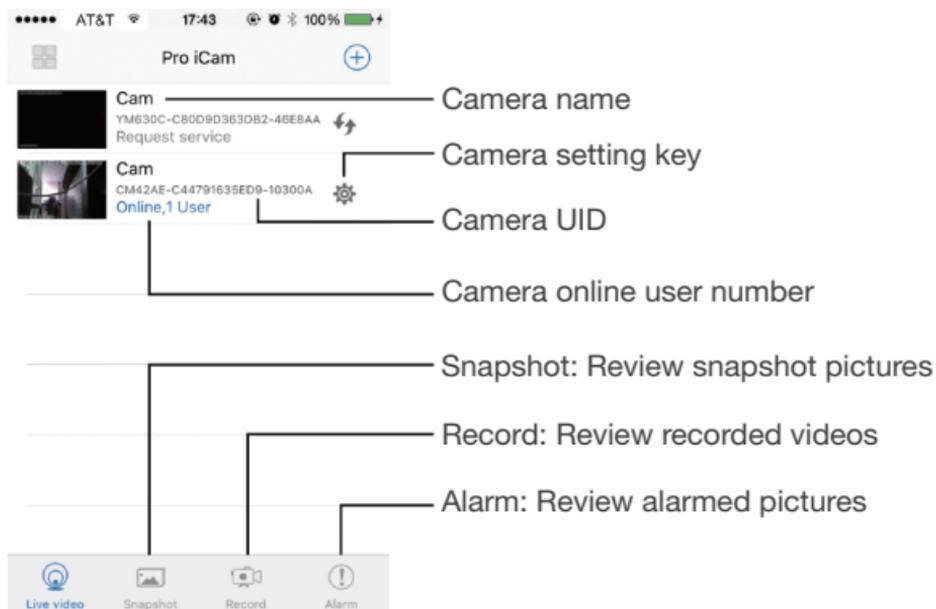

Live video page - Click camera to check

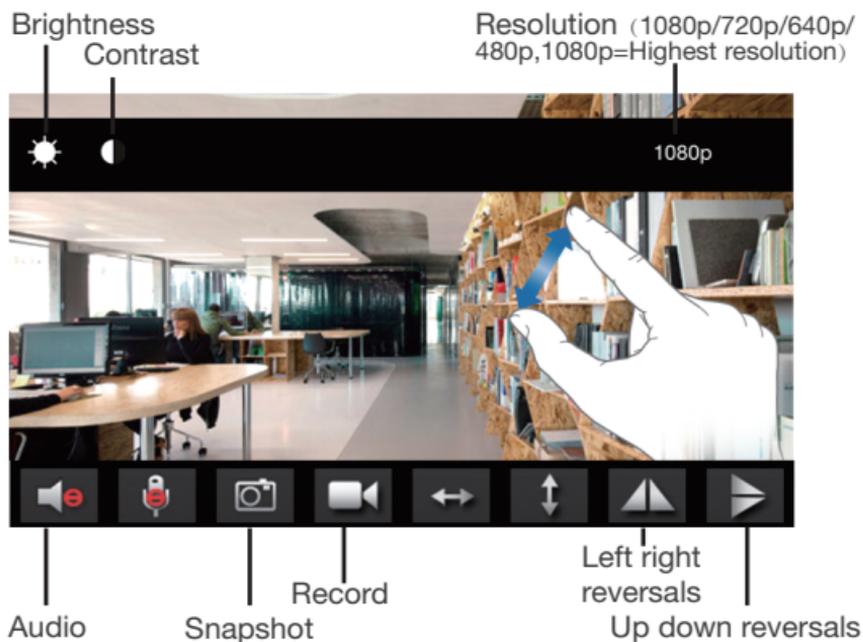

< Pro iCam Device Settings

Cam



Alarm Config

> Alarm Config: Set motion detection sensitivity / Alarm interval



WiFi Config

> Wi-Fi Config: Set camera to other Wi-Fi



SDCard Record Config

> SD Card Record Config: Set SD card record mode / Resolution / File length ...



Time Setting

> Set time



Email Config

> Set motion alarm with email (Need turn on Email Alert first in Alarm Config)



Change password

> Change password: Set camera new password



Device reboot

> Camera reboot: Restore to factory default setting



Live video



Snapshot



Record




Alarm


TIPS: Each setting in Device Settings, please scroll down and press ok to save the setting.

Set and watch by PC in LAN

1. Once camera connected well with Wi-Fi, install software “IPCamera” from included CD and open software to find the connected device’s IP address.

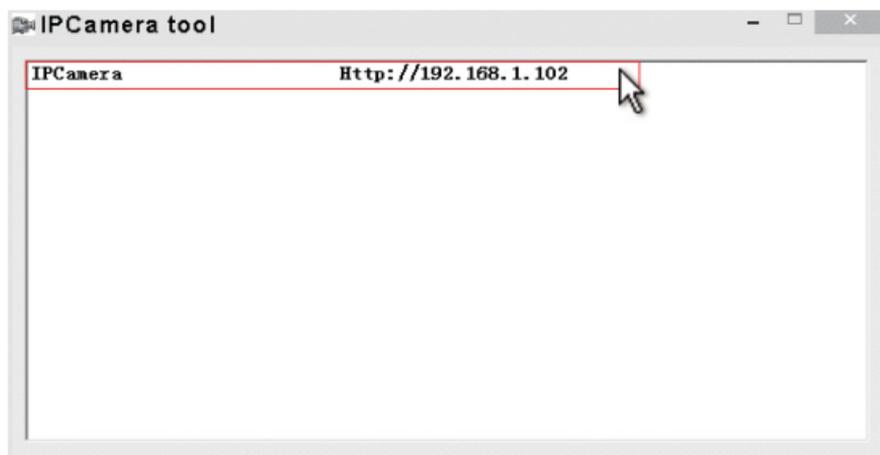

2. Double click the IP address, insert name “admin” (no password) and press ok.

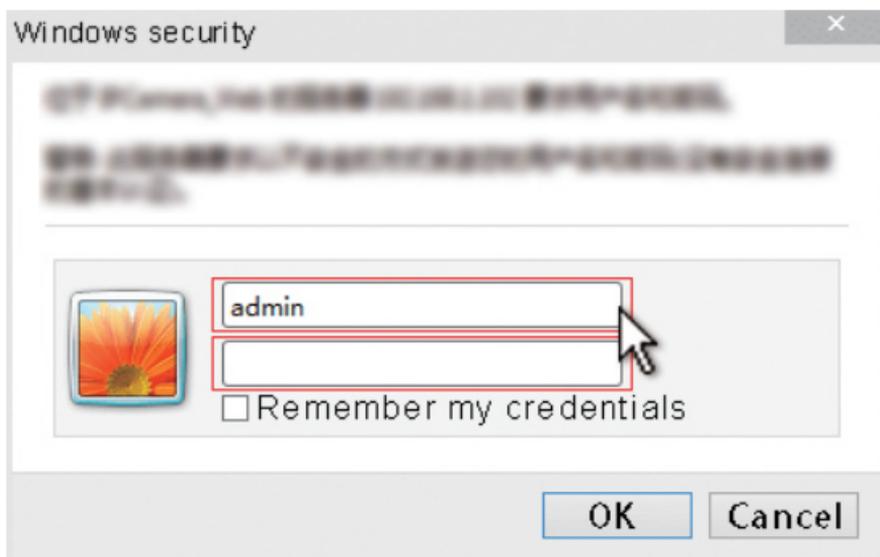

3. After above steps, you can insert setting interface. For first use, please choose language, then click  to download and install plug-in.

IPCam | 2014

Ver 1.7.23.23 HD

Welcome to Use IP Camera



Browser plug-ins

Recommended browser plug-in, support for real-time video and audio playback, compatible with Windows platforms common browsers



iPhone, iPod touch and iPad



Mobile Phone (such as Android...)

Browser that supports Javascript.




IE ActiveX Plug-in. Click to download




Language : English



4. Click  to go to the final setting interface.

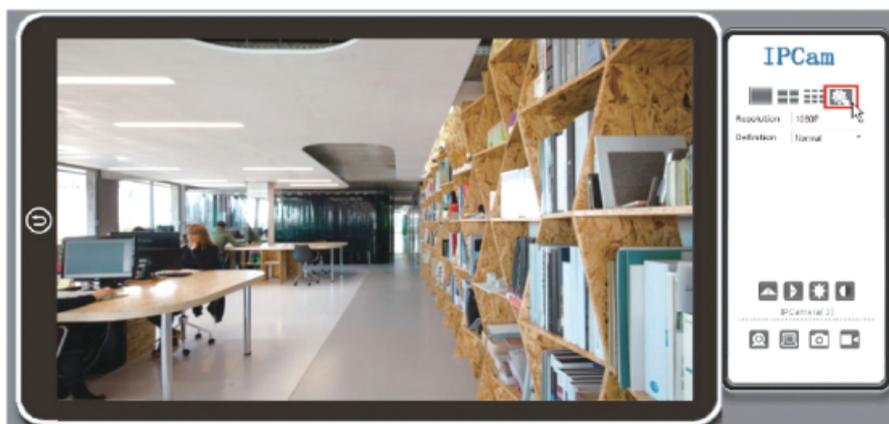

5. Click left options to set other needed functions.

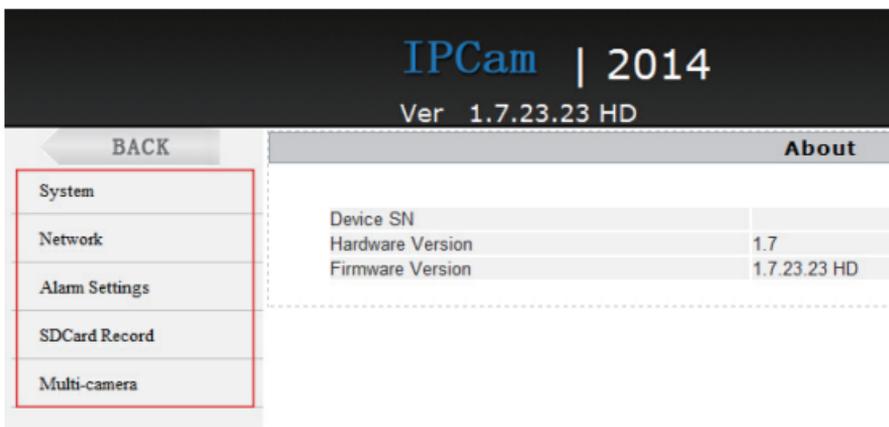

Set and watch by PC remotely (Not in LAN)

Please check details in included CD for instructions and software.

Specification

Video in phone	Max 1920 * 1080
Video in card	Max 1080 * 720
Frames	Max 25fps
Compressed format	H.264
Video format	AVI
View angle	90°
Type of memory card	TF card>=Class 4/10 and HC marked
Maximum capacity of memory card	64GB
PC operation system	Windows 7, 8 / Mac OS X
Play software	VLCPlayer/SMPlayer
Mobile phone operation system	Android/iOS
Web browser	IE7 and above,chrome,firefox
Power consumption	300MA/3.7V
Battery capacity	2400MA
Recording	1 minute/ around 20MB
Working time	2-3 hours
Charging time	4-5 hours
Power adapter	5V 2A

FAQ

1. Q: Can working when charging for long time use?
A: Yes, please use included 5V 2A adapter to plug in power for long time use.
2. Q: Time display is not stable, always blinking?
A: It's with low battery, please charge it.

3. Q: Can't get device Wi-Fi signal? (Five solutions FYI).
A: 1). Please confirm the power adaptor connected;
2). Take out battery, then plug in power and wait 2 mins;
3). Press reset key for 5 seconds and wait 2 mins;
4). Turn off camera backside, then turn on again;
5). Turn off smartphone Wi-Fi for a while, then turn on to search again.
4. Q: Can't add or set camera after connected with camera Wi-Fi?
A: Please wait phone status bar appear Wi-Fi  symbol, then to do follow settings.
5. Q: Why live video screen shows up black and a searching circle spins in center but nothing ever displays?
A: 1). If camera's connected Wi-Fi speed is slow, please wait 10-30 seconds for live video appear;
2). One click middle of screen, select top right 480p resolution to check.
- TIPS:** If local Wi-Fi speed is slow, please choose lower resolution for good video and audio.
6. Q: Live video not smooth and clear?
A: Select suitable resolution according to the real time network environment.
7. Q: How many cameras can be added to APP?
A: No limit.

8. Q: How many visitors support to check live video?

A: 1-2

9. Q: Only 1 user, but show 2 or more users?

A: 1). If login in very often, last record is still in. If check every 2-5 mins, surely will be the exact numbers of users;

2). To be safer , please change camera's password when first use (Page 9).

10. Q: Motion detect set and alarm?

A: 1). Set motion detect sensitivity in Device Settings - Alarm Config, and scroll down press OK;

2). When motion detected, camera will push a alarm message to your phone and take 3 pictures for checking in the APP [Page 10 - Alarm - ].



11. Q: Micro SD card instruction?

A: 1). Format card before inserting;

2). When backside switch is on, every time you insert micro SD card, it will record automatically;

3). Once connected, can set SD management in app [Device Settings - SD Card Record Config] .

12. Q: How to play micro SD card video?

A:1). Use a card reader to read and play;

2). Use APP to play back [Page 10 - Record - ];

3). Play back in good speed network.




13. Q: After connected to Wi-Fi, how is the status of camera when Wi-Fi off?
- A: 1). If modem off, camera can still check local view as it is connected directly to wireless router;
2). If both modem and router off, camera will keep searching the connected Wi-Fi and connect again;
3). If above point 2, not connect; Just turn off and on backside switch again to connect Wi-Fi.
14. Q: Camera can't hold set Wi-Fi, lost contact and offline?
- A: 1). Make sure camera inside the range of good Wi-Fi signal;
2). Low battery, check if power adapter connected properly for long time use.
3). Make sure your phone network(4G/Wi-Fi) work well in remote area when checking the camera;
4). Please try to add with another phone which with good network.
15. Q: Forget camera password, or item goes abnormal?
- A: Plug in power, turn on camera and wait for 2 minutes, press reset key around 5 seconds till front blue light off to restore factory default. Camera restarts and get ready again in 2 minutes.

16. Q: Connect camera with wifi by micro SD card setting?

A: Steps: (Format micro SD card first.)

- a, Create a txt file named wifi on the micro SD card
- b, Input below format to the file
wifi:xxxxxx (Your local wifi name)
pwd:xxxxxx (Both are case-sensitive)
- c, Insert the micro SD card when camera is OFF
- d, Turn on camera, it will connect with your wifi in 10-15 seconds.

TIPS:Can also copy the txt file from camera's CD to the micro SD card,change wifi name and password.

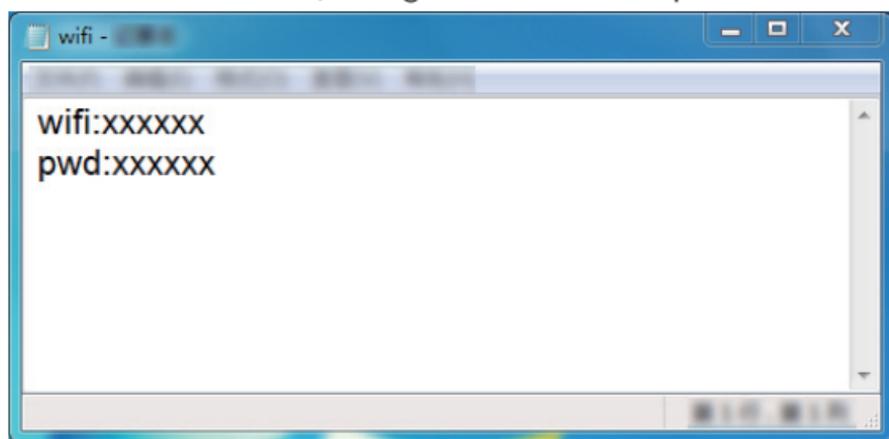

17. Q: App content similar but not exact same as in manual?

A: App is always being optimized with better interface and functions

18. Q: Any operation video demo of the camera for setting up?

A: Please contact local dealer for video guide.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The End!

