



CEI 79-2
EN 50131-3
EN 50131-6
CEB T01



Ness Smart Living
Anti-intrusion Control Panels & Security Systems
USER MANUAL



GameOver



Innovative Electronic Solutions



www.nesscorporation.com

National Customer Service Centre
Ph: 1300 551 991
customerservice@ness.com.au

Ness Smartliving
User Manual

Document Part No: 890-444



SMARTLIVING

CEI 79-2
EN 50131-3
EN 50131-6
CEB T01



All rights reserved. No part of this publication may be reproduced, transmitted or stored in a retrieval system in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Ness.

Ness reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

© 2014 Ness Corporation Pty Ltd ABN 28 069 984 372

Table of contents

Warranty	2
Limited warranty	2
Copyright	2
European Directive compliance.	2
State-of-the-art installations (DM 37/08)	2
Table of contents	3
Chapter 1 General information	5
1-1 Manufacturer's details	5
1-2 Description of the product and various models	5
1-3 Environmental Conditions	6
1-4 Products certified and conforming to directives	6
1-5 Manuals	7
1-6 Operator Qualifications.	7
1-7 Access Levels	8
1-8 Conventions – Glossary	8
Chapter 2 The SmartLiving System.	9
2-1 Introduction	9
2-2 The Technologies.	10
2-3 Keypads	10
2-4 Reader - nBy.	17
2-5 User Codes	19
2-6 Keys	20
2-7 Multi-system access.	21
2-8 Telephone functions.	21
2-9 WEB / e-mail functions.	22
2-10 AlienMobile Application.	22
2-11 Arming scenarios.	22
Chapter 3 Shortcuts	24
3-1 Keypad shortcuts.	24
3-2 Shortcut with code.	25
3-3 Key and Reader shortcuts.	25
3-4 Shortcut list	26
Chapter 4 Voice functions	27
Chapter 5 Using the system.	28
5-1 Managing alarms	28
5-2 Arming and disarming partitions	29
5-3 Voice box and intercom functions	31
5-4 Activations	32
5-5 View.	34
5-6 Activating/Deactivating outputs.	37
5-7 Change date and time	38
5-8 Keypad settings.	38
5-9 Change PIN.	39
5-10 Change telephone numbers.	40

5-11	Teleservice request	40
5-12	Overtime request	41
5-13	Thermostat	42
5-14	Teleservice via Nexus	43
5-15	Codes	43
5-16	Listen-in	45
5-17	Partition status enquiry	45
5-18	Commands over-the-phone	46
5-19	Alien function keys	47
5-20	Using the SmartLAN/G	49
5-21	Using AlienMobile application	50
5-22	Photo frame	51
Appendix A	Technical terminology and Glossary	52
Appendix B	Shortcuts at default	56
Appendix C	Fault signals	57
	Notes	59

Chapter 1

GENERAL INFORMATION

Manufacturer's details 1-1

Supplier: Ness Corporation
 Address: 4/167 Prospect Hwy,
 Seven Hills, NSW, 2147, Australia
 Tel: +61 2 8825 9222
 e-mail: customerservice@ness.com.au
 Web: www.nesscorporation.com

The persons authorized by the manufacturer to repair or replace the parts of this system, hold authorization to work on Ness brand devices only.

Description of the product and various models 1-2

Description: Intrusion control panel
 Models: SmartLiving 505
 SmartLiving 515
 SmartLiving 1050
 SmartLiving 1050L
 SmartLiving 10100L
 Applied Normative: CEI 79-2:1998+Ab:2000, CEI EN 50131-3:2009 and CEI EN 50131-6:2008
 Certification agency: IMQ - Security systems
 Security rating: 2



The following table describes the main features of the various models of the control panels:

Table 1: Control panel - Main Features

SmartLiving intrusion control panels	505	515	1050	1050L	10100L
Total terminals	5	15	50		100
Terminals on panel	5		10		
Terminals on panel configurable as inputs	5		10		
Terminals on panel configurable as Rollerblind/Shock	2				
Terminals on panel configurable as outputs	0		5		
Total zones	10	30	100		200
Relay outputs on control-panel motherboard	1				
Open-collector outputs on panel motherboard	2 (150mA)		2 (500mA)		
Partitions	5		10		15
Keypads (Joy, nCode/G, Concept/G, Alien)	5		10		15
nBy Readers	10		20		30
Digital keys and keyfobs	50		100		150
Possible key combinations	4294967296				
Codes	30		50		100
Scenarios	30				
Timer			10		20
Recordable Events			500		1000

Environmental Conditions

1-3

The Joy/GR, Joy/MAX, nCode/G, ccode/G, Alien/S, Alien/G, IB100, FLEX5, Nexus and nBy/X peripheral devices are for indoor installation only and operate best under the following environmental conditions:

- **Temperature:** from -10° to +40°C
- **Maximum humidity:** 75% (without condensation)
- **Environmental class:** II

The nBy/S reader is suitable for outdoor installation and operates best under the following conditions:

- **Temperature:** from -25° to +70°C
- **Maximum humidity:** 93% (without condensation)
- **Protection grade:** IP34
- **Environmental class:** IV

Products certified and conforming to directives

1-4

When duly programmed, the SmartLiving intrusion control panel and the devices described in this manual have been certified by the IMQ - Security Systems agency as compliant with CEI 79-2:1998+Ab:2000, CEI EN 50131-3:2009 and CEI EN 50131-6:2008.



The Control panel enclosure houses the following certified devices:

- INIM Electronics switching-power supply
- Motherboard (IN082 or IN088)
- SmartLogos30M voice board (accessory item)
- FLEX5/U input/output expansion board (accessory item)
- AUXREL32 relay board (accessory item)
- SmartLAN/SI and SmartLAN/G LAN interface boards (accessory items)
- IB100/RU BUS isolator board (accessory item)
- ProbeTH thermal-probe kit for battery-charge optimization (accessory item)
- TamperNO tamper-protection kit (accessory item)
- Backup battery, 12 V @ 17 Ah
- Motherboard (IN082 and IN088) integrated Type B notification apparatus

The control panel compliancy is also guaranteed when connected to the following certified devices:

- FLEX5/P input/output expansion boards
- Joy/MAX, Joy/GR, Concept/G, nCode/G keypads
- nBy/S outdoor-mount proximity readers
- nBy/X universal-mount proximity readers
- IB100/RP BUS isolator
- Self-powered IB100/A BUS isolator
- nCard access-control card for proximity readers
- Tag for nKey or nBoss proximity readers
- Self-powered sounderflashers for outdoor installation: Ivy, Ivy-F, Ivy-M, Ivy-FM, Ivy-B, Ivy-BF, Ivy-BM, Ivy-BFM
- Wireless system devices: AIR2, AIR2-BS100 (transceiver), Air2-IR100 (PIR detector), Air2-MC100 (magnetic contact)

ATS2 notification apparatus (refer to EN50131-1:2008-02, paragraph 8.6 Notification, Table 10, page 46, Grade 2 and EN50136) characterized by:

- Transmission time - classification D2 (60 seconds)
- Transmission time - max. values M2 (120 seconds)
- Classification time - classification T2 (25 hours)
- S0 Substitution security (no detection of device substitution)
- I0 Information security (no detection of message substitution)

TYPE B NOTIFICATION APPARATUS

Manuals 1-5

Installer's manual 1-5-1

This manual (not included in the package) can be purchased from your retailer. You (the installer) should read carefully through it in order to become familiar with all the components and operating procedures of the SmartLiving system.

In order to provide adequate protection, the installer must adhere to all the manufacturer's guidelines relating to the active and passive security devices of this system.

Installation and programming guide 1-5-2

This guide is included in the control panel package and provides all the instructions and illustrations necessary for fast installation and programming of the SmartLiving system. It provides step by step descriptions of the procedures required for the system wiring, the various connections and first powerup. It also provides a table for the peripheral addressing process and a quick guide indicating default parameters and values and how to programme/change them directly from the keypad.

User's Manual (this manual) 1-5-3

DCMUINE0SLIVINGE 5.10 **MANUAL CODE REVISION**

The installer should read carefully through the user's manual (supplied with each control panel). Once the system has been installed, you must ensure that the User's Manual is available to the users for consultation, and that they fully understand how the system works and are aware of all the functions, settings and procedures.

It is the installer's responsibility to inform the system users that, regardless of its capabilities, an intrusion alarm system is not a substitute for the necessary precautions building occupants must take to prevent intrusion.

Operator Qualifications 1-6

Installer 1-6-1

The installer is the person (or group of persons) who sets up and programs the entire security system in accordance with the purchaser's requirements and in respect of the security & safety laws in force. As the only individual in contact with system users, it is the installer's responsibility to instruct the end user (you) on how to use the security system properly.

Under normal circumstances, the installer is not allowed to arm/disarm the system without previous authorization from the user. All the system partitions must be disarmed before accessing the parameter programming phase.

The access code of the installer is a level 3 access code.

User 1-6-2

The users are the occupants of the building where this intrusion control panel is installed. Only authorized users can access and operate the system.

Thanks to the extreme flexibility of the system, the most common operations can be carried out without authorization. This operating method must be expressly requested by the main user, as it considerably lowers the security level of the system and may cause false alarms, accidental arm/disarm operations, etc.

A system access code can be associated with each user. The programming process allows you to define the code hierarchy:

- **User**
- **Manager**
- **Master**

The system codes can carry out, in accordance with their assigned level in the system hierarchy (the "User" being the lowest level), the following operations on all other codes that are inferior hierarchically:

- enable/disable
- change PIN
- change the programming parameters

If the system programming complies with security grade 3 of EN 50131, some partition arming or delete memory operations, requested from a keypad, may be authorized by the entry of a level 3 code (installer code) as well as by a user code.

Access Levels 1-7

The normative defines the following system-access levels, regardless of system-access limitations:

- **Level 1** - access by any person (e.g. passer-by)
- **Level 2** - user access
- **Level 3** - installer or maintenance operator access (authorized by user - level 2)
- **Level 4** - manufacturer access

Conventions – Glossary 1-8

In order to understand the terminology used in this manual and improve your knowledge of this system and its operating procedures, read carefully through the Glossary (refer to *Appendix A, Technical terminology and Glossary*).

The appendix contains the definitions of technical terms commonly used in the field of security, therefore, relevant to the SmartLiving system.

Chapter 2

THE SMARTLIVING SYSTEM

Introduction

2-1

Ness Corporation wishes to thank you for choosing this SmartLiving intrusion control system. Its advanced technology and user-friendly operations provide an extremely high level of protection combined with ease-of use.

Ness Corporation recommends that all parts of this manual be read thoroughly before starting up SmartLiving system. Once you have become accustomed to the day-to-day operations, your installer will explain and if required, program the advanced functions provided by the system.

A typical system comprises:

- SmartLiving control panel
- intrusion detection devices (PIR or microwave detectors, magnetic contacts, linear beam detectors, etc.)
- system control peripherals: proximity readers, keypads
- alarm signaling devices which generally signal the events detected by the system (sounders, flashers, etc.)

The keypad (Joy/GR, Joy/MAX, nCode/G, cCode/G, Alien/S or Alien/G) is an extremely flexible peripheral device which allows users to manage the system with ease. The graphic display shows all the necessary information and provides an advanced user-interface based on icons for instant and clear indications relating to the operations to be performed. All users have PINs which allow them to access and control the system via the keypad in accordance with their permitted access level.

nBy readers (2 versions available: nBy/S wall-mount and By/X flush-mount) allow you to access and control the system. Although these devices are not as flexible as keypads, they provide a quick and easy way of carrying out day-to-day operations such as arming and disarming the system. Authorized digital-key users can operate the system in accordance with their programmed access level (enabled functions, etc.) by holding the key in front of the proximity key reader.

All SmartLiving control panels are capable of managing Ness's "Air2" two-way wireless system. This system integrates wireless devices (detectors, keyfobs, etc.) into the hardwired environment.

SmartLiving control panels are capable of managing various event types (alarms, faults, tamper, code/key identification, arm/disarm operations, etc.) and event-response actions (audible/visual signaling, telephone calls, SMS text messages over the GSM network and, with the addition of the optional SmartLAN/G board, e-mails with attachments). The calls can be:

1. report calls to alarm receiving centres - via the most widely used reporting protocols.
2. voice calls to contact numbers - using advanced voice technology to inform contact persons of the active alarm condition.

Events can also be announced on JOY/MAX and Alien keypads.

The SmartLiving intrusion control panel also provides automatic features, such as:

- arm and disarm operations set up on a weekly basis
- simple yet useful access-control functions which allow the system to deny access to specific keys/codes at certain times
- pre-set activation/deactivation of household devices (building automation) such as courtesy lights
- other similar automatic facilities.



The Technologies

2-2

Expertise in the arena of total security and a commitment to precision and high quality allow Ness professionals to deliver excellence in design technology and dependability through time.

EASY4U

2-2-1

This user-friendly tool provides an interesting array of graphic features and functions. All SmartLiving intrusion control panels are controlled by keypads equipped with 96x32 pixel graphic displays. The four-line alphanumeric display screen (16 characters per line) can be edited or used to view the icons associated with various customized user-operations. The keypad shortcuts allow time-consuming sequences to be transformed into simple keystroke actions. They can be used for a variety of tasks and make operations less tedious and less error-prone. In this way, INIM has eliminated the repetitive sequences of keystrokes required by other systems available on the market. The use of customizable graphic-objects, which indicate the system status, helps users to understand what is happening on the system.



Besides accepting various commands (Away Arm, Stay Arm, Disarm, etc.), the nBy reader also allows users to manage the "shortcuts" programmed on the keypad.

The Joy/MAX and Alien keypads both have built-in nBy proximity readers.

VOIB

2-2-2

This is an acronym for **Voice Over I-Bus**. VOIB technology allows the system to manage end-to-end digitized voice transmissions at extremely high-speed over the IBUS. Voice transmissions can be carried to all points of the IBUS. The JOY/MAX and Alien keypads have built-in microphones and speakers for message recording and playback. The 30 minute capacity voice board allows each event to be associated with a message. Voice digitizing and compression allow the signal to be transmitted in data packets over the bus to recipient keypads where it is announced. Voice digitizing and the characteristics of the I-BUS allow end-to-end "noise-immune" voice transmissions without the need of any additional wiring.



Keypads

2-3

The keypad allow users to manage all aspects of the security system. SmartLiving control panels support JOY/GR, JOY/MAX, nCode/G, cCode/G, Alien/S and Alien/G keypads. The features of these keypads are described in the following table:







Table 2: **Keypads - functions**

Models	Joy/MAX	Joy/GR	nCode/G	cCode/G	Alien/S	Alien/G	
Graphic display	Monochromatic 96x32				65536 colour touch screen		
					4.3 inches 480x272	7 inches 800x480	
Keys	23 (in soft rubber)			23 (touch)	No		
Signaling LEDs	4				No		
Buzzer	Yes						
Terminals	2		1		No	2	
Microphone	Yes	No				Yes	
Speaker	Yes	No				Yes	
Built-in proximity reader	Yes	No				Yes	
Temperature sensor	Yes	No				Yes	
Backlight activated by proximity sensor	No			Yes	No		
Keypad lock-out	No			Yes	Yes		
USB port	No				Yes		
SD card	No				Max. 32 GByte		

The various keypad models have different functions, casings and key access. The keys on Joy keypads are protected a flip-cover which protects them from accidental pressing and dust; whereas, the keys of the nCode/G and Concept/G keypads are on view. The cCode/G is a touch-screen keypad. Alien keypads are not equipped with keys but instead have a colour touch screen that allows access to the system via touch or touch-screen pen (supplied with Alien/G).

The installer assigns the partitions and portions/sections of the system that users, with assigned codes, will have access to via the keypad in use.

It is possible to extend the use of some of the system shortcuts to users without assigned codes. In this way, SmartLiving control panels add further operating modes to that of the traditional user menu which is only accessible after code entry.

It is possible to use the shortcuts at the keypads (refer to "Shortcuts" in the Glossary) associated with keys **F1** , **F2** , **F3** , **F4** . Generally, intrusion control panels do not allow access to the system via keypad without code entry. However, by means of the shortcuts associated with keys **F1** , ..., **F4**  it is possible to enable building occupants to access and operate on the system without code entry.





The Alien touch screen user interface provides shortcuts such as the activation of scenarios, and also applications such as device settings, which can be activated by the buttons displayed on the screen without code entry.


The installer must program the shortcuts to suit the system requirements and explain how they are used. For example, it may be useful to allow all the building occupants to arm the system without code entry, as this operation increases the level of system security. However, operations which lower the level of system security should be reserved for code users only (thus allowing identification of users who disarm the system). Under normal circumstances, operations which increase system security can be allowed without valid-code entry whereas, operations which lower system security (Disarm, Delete Alarm/Tamper memory, Deactivate Alarm/Tamper outputs) should be allowed only after valid-code entry.

JOY/MAX and Alien keypads also provide a programmable chronothermostat function. This function allows you to set up zone management (one zone per keypad) of the heating/air-conditioning system.

The temperature is gauged by a built-in temperature sensor. The hysteresis is fixed at 0.4°C.

The cCode/G keypad provides a further two options relating to direct user access.

A special feature allows activation of the backlight of the display and keys when users approach the keypad. This is achieved through a proximity sensor which can be activated by pressing keys **1**  and **#**  simultaneously and deactivated by pressing **1**  and **#** .

The other option, block/unblock keypad, can be achieved by pressing key **#**  for 3 seconds. If the block keypad option is enabled, the display will show the icon opposite.

The Joy, nCode and cCode keypad display

The brightness and contrast of the backlit-graphic LCD (96 x 32 pixel) can be adjusted by way of the respective options on the user menu (refer to *paragraph 5-8 Keypad settings*).

It is divided into four lines which continually provide information regarding the status of the system and control panel, without need of user-code entry.

- 1° line:
- 2° line:
- 3° line:
- 4° line:

The following table describes the messages which are shown on the keypad display, in accordance with the actual status of the control panel:

- Standby - shown when the control panel is functioning normally and there are no alarm, tamper or fault events present on the system.
- Zone alarm or tamper - shown when the control panel detects or signals violation on a zone, both in the event of intrusion or detection of a lost device
- Maintenance - shown when the control panel is in service mode for or maintenance or programming purposes

KEYS



SHORTCUTS



CHRONOTHERMOSTAT










cCode/G ACCESS



2-3-1



Table 3: Display visualization

Display line	Control panel status		
	Standby	Alarm or tamper	Maintenance
1	<p>18:23 01/02/2014</p> <p>The first line of the display shows the date and time.</p>	<p>Panel T03</p> <p>If at least one of the keypad partitions has saved an alarm or tamper event to the memory, the first line of the screen will flash the descriptions of the zones concerned every 3 seconds.</p> <p>Note</p> <p>Open zones are signaled by blinking on the red LED .</p>	<p>K03 Service</p> <p>If the control panel is in Service mode, a string will be shown indicating the address of the keypad in use (in the figure, the keypad is at address 3).</p>
	<p>18:23 PM 25.4 C °</p> <p>If you are using a JOY/MAX keypad, the date and room temperature will alternate on the screen every 3 seconds.</p>		<p>Mainten K03 P05</p> <p>If you are using a Joy/MAX keypad, the string will also show the address of its built-in proximity reader (in the figure, the reader is at address 5).</p>
	<p>Panel T03</p> <p>If the "View open zones" control-panel option is enabled, the descriptions of zones that are not in standby status when the keypad partitions disarm will be shown in sequential order approximately every 3 seconds.</p> <p>Panel T03</p> <p>Any auto-bypassable zones will be shown in white on black background.</p>	<p>Panel T03</p> <p>Mainten K03 P05</p> <p>If the control panel is in Service mode and at least one of the keypad partitions has saved an alarm or tamper event to the memory, the above-described strings will alternate on the display.</p>	
2 left	<p>DASIDASI--</p> <p>The left side of the second line shows the characters that indicate the current status of the partitions the keypad is assigned to:</p> <ul style="list-style-type: none"> • D = partition disarmed • A = partition armed in Away mode (interior and perimeter zones armed) • S = partition armed in Stay mode (perimeter zones armed) • I = partition armed in Instant mode (perimeter zones armed with no delay) • - = partition does not belong to the keypad <p>In the case of the SmartLiving 505 or 515, 5 characters indicating the status of partitions 1 to 5 will be shown.</p> <p>In the case of the SmartLiving 1050 or 1050L, 10 characters indicating the status of partitions 1 to 10 will be shown.</p> <ul style="list-style-type: none"> • The display of the SmartLiving 10100L model, alternates at 3 second intervals, between 10 characters, indicating the status of partitions 1 to 10, and 5 characters indicating the status of partitions 11 to 15. 	<p>DASIDASI--</p> <p>D SIDASI--</p> <p>In the event of a partition alarm or tamper memory, the red LED  on the keypad and the characters corresponding to the partitions concerned will blink.</p>	<p>The line is the same as when the control panel is in standby condition.</p>
	<p>SCENARIO 001</p> <p>If the "Show scenario" control panel parameter is active, the left side of the second line on the screen will display the current scenario.</p>		
2 right	<p>DASIDASI--   T</p> <p>The right side of the second line allows you to view several icons which provide visual information regarding the system. For a detailed description of these icons refer to <i>Table 4: Information icons</i>.</p>		
3	<p>    </p> <p>Lines three and four on the display are occupied by the icons which correspond to the shortcuts assigned to the function keys F1 <small>Fn</small>, ..., F4 <small>POS</small>.</p> <p>If no shortcuts are programmed on the keypad function keys, the respective spaces on the display will remain empty.</p>		
4			

The icons which appear on the right side of the second line, provide information regarding the system, therefore, their presence or status (fixed or flashing) depends on the status they must signal:

Table 4: Information icons







Keypads	Alien	Name	Not present	On solid	Blinking or interchanging icons
		Telephone line		Telephone line busy	Telephone line down
		Peripheral Loss	All the peripherals in the system configuration are responding properly (Present).	At least one peripheral (keypad, reader, expansion) is not responding properly.	All the peripherals in the system configuration are responding properly, however, loss of a peripheral has been detected and cleared (Peripheral Loss memory).
		Answerphone	Answerphone function disabled	Answerphone function enabled	

Table 4: Information icons

Keypads	Alien	Name	Not present	On solid	Blinking or interchanging icons
		Teleservice	Teleservice disabled	Teleservice enabled	
		Key			False key
		Peripheral tamper	All peripherals are properly placed and all enclosure covers are closed.	At least one peripheral (keypad, reader, expansion) is in tamper status (enclosure open or device dislodged).	All peripherals are properly placed and all enclosure covers are closed, however, tamper was previously detected and cleared (Tamper memory).
		Control panel Tamper	The Control panel is properly placed and the enclosure is closed.	The Control panel is in tamper status (enclosure open or device dislodged).	The Control panel is properly placed and the enclosure is closed, however, panel tamper has been detected and cleared (Panel tamper memory).
		Call on Nexus		The Nexus/G communicator is engaged in a call	
		Sending SMS		The Nexus/G dialer is sending an SMS text message	
		LAN		A SIA-IP event report is being sent through the LAN	The LAN board cannot be found
		SIA-IP on Nexus		An event is being transmitted through the Nexus/G in SIA-IP reporting format or a teleservice request is being sent over the GPRS network.	
		Thermostat: Winter mode	The thermostat option is disabled.	The keypad thermostat option is enabled in Winter mode (Heating).	
		Thermostat: Summer mode		The keypad thermostat option is enabled in Summer mode (Air-conditioning).	
		Thermostat: Heating/Air-conditioning	Heating/Air-conditioning Off	Heating/Air-conditioning On	

If duly programmed by the installer, the icon will be shown when Teleservice is enabled.

Note

Using the keypad 2-3-2

The following section describes how the keys are normally used. Some of the keys may have specific functions which will be indicated when necessary.

Table 5: The keypad keys

Keys	Name	Typical application
	Number keys	Used to type in User PINs
	OK	Confirms the selected item (parameter, etc.)
	UP, DOWN	These keys allow you to scroll the menu lists and/or adjust graphically displayed parameters (for example, keypad or volume adjustment).
	LEFT, RIGHT	These keys allow you to scroll along the parameters or data being viewed (for example, when viewing partitions in the events log or when selecting partitions in the arm/disarm menu).
	C	This key allows you to step back on the open menu without confirming any selected items (parameters, etc.), or after entering a user PIN and pressing , to run through the 3 user-menus (refer to <i>paragraph 2-5 User Codes</i>).
	ESC	This key exits the user menu definitely without confirming any selected items (parameters, etc.).
	ENABLE	Enables options (refer to <i>paragraph 5-4 Activations</i>)
	DISABLE	Disables options
	F1, F2, F3, F4 or function keys	Activate the shortcuts which correspond to the associated icons. Can be used also as Emergency keys (refer to <i>paragraph 2-3-3 Emergency functions</i>).

Emergency functions 2-3-3










The control panel provides 3 special functions which can be activated from the keypad:

- Fire Emergency
- Ambulance Emergency
- Police Emergency

Activation of these keys will generate the associated events and actions (e.g. activation of outputs and calls).

To activate an emergency request, press and hold for 3 seconds the required key combination and wait for the confirmation beep, as follows:

Table 6: Emergency keys

Emergency	Combination keys on Joy, NCode, Concept	Alien keys
Fire	F1  + F2 	
Ambulance	F1  + F3 	
Police	F1  + F4 	





If any two function keys are pressed at the same time, the functions relating to the icons associated with the keys will not be activated.


Note


Visual signals on the keypad LEDs 2-3-4

The following table describes the signals on the LEDs of the Joy, nCode and cCode keypads, or the icons which represent them on the display of the Alien keypad.

Table 7: Keypad LEDs

LED/Icon activation	Red 	Yellow 	Blue 	Green 
OFF Icon not present	All the keypad partitions are disarmed.	No faults present.	Open zones on the keypad partitions.	Primary power failure (230V a.c.)
ON Icon on solid	At least one of the keypad partitions is armed.	At least one fault is present.	All the zones on the keypad partitions are in standby status: Ready to arm.	Primary power OK (230V a.c.)
Slow blinking (ON: 0.5sec OFF: 0.5sec)	All the keypad partitions are disarmed. Memory of alarm/tamper on at least one of the keypad partitions or memory of a system alarm is present.	No faults present. At least one of the zones belonging to the keypad partitions is either disabled (inhibited) or is in Test status	All the zones belonging to the keypad partitions are in standby status. An unplayed voice message is present in the memo box.	
Fast blinking (ON: 0.15sec OFF: 0.15sec)	At least one of the keypad partitions is armed. Memory of alarm/tamper on at least one of the keypad partitions or memory of a system alarm is present.	At least one fault is active and at least one zone belonging to the keypad partitions is either disabled (inhibited) or is in Test status.	Open zones on the keypad partitions. An unplayed voice message is present in the memo box.	

The list of faults signaled on the yellow fault LED  can be found in the table in Appendix C, Fault signals.

Following is the list of events which cause the Red System Alarm LED  to blink:

- Open panel tamper
- Dislodged panel tamper
- Expansion tamper
- Keypad Tamper
- Reader Tamper
- Expansion Loss
- Keypad Loss
- Reader Loss
- False key

If the "False key" event is configured as a "Silent event", the red LED will not blink.

If this option is enabled, the status of the partitions will be hidden. If a valid code is entered at a keypad, the real-time status will be indicated on the keypad concerned for 30 seconds. Additionally:

- If the partitions are armed, the status of the system will be hidden from non-authorized users.
 - Red keypad LED Off
 - Yellow keypad LED Off
 - Green keypad LED On solid
 - Status icons not present
 - Alarm and Tamper memory hidden
 - If a particular event occurs more than 5 times when the partitions are armed, it will not be signaled as having occurred more than 5 times. This is due to the limitation placed on the counter of each event. The counters will reset to zero each time all the partitions are disarmed.
- If the partitions are DISARMED:
 - The LEDs will function normally.
 - Status icons present
 - Alarm and Tamper memory visible

Emergency status

In the event of a keypad configuration or communication error between the system peripherals, the display will show one of the templates opposite.


If you are using an Alien user interface, the above-mentioned information will be shown on the bottom bar on the home page.

If this occurs, you must contact your installer immediately and get the fault cleared.

"FALSE KEY"

"50131STATHIDDEN"

2-3-5

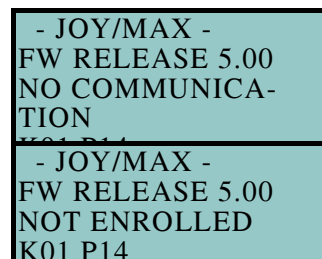

Alien keypad

Alien is a colour touch-screen user interface. Two versions are available, the 4.3 inch Alien/S model and the 7 inch Alien/G model. The Alien touch screen enables the user to interact directly with the strings and icons which indicate the functions and signal the status of the system. In each case, the Alien touch screen immediately displays the buttons necessary to react to the specific situation.

By just tapping the screen you can activate one of the scenarios (programmed by the installer on the control panel), access information relating to the various parts of the system (zones, outputs, etc.) or view the events log.

The structured graphics control provides ample room for customization, with skin and background selection and image gallery slideshow management. You can also control the screen brightness, contrast and image transparency.

The Alien keypad has a built-in microphone and speaker for voice functions.

A temperature sensor indicates the room temperature on the screen and activates the Chronthermostat functions.

The built-in proximity reader reads tags and cards and allows easy access to the system without the need of code entry.

The Alien keypad has an SD card slot (up to 32GB) for storing photos and slideshow images (in photoframe mode) and a USB interface.

2-3-6



The Alien keypad screen


2-3-7

Access to the Alien keypad functions is achieved by tapping the respective buttons displayed on the screen.

Although the functions provided by the different versions of the Alien keypads are they same, the devices differ in screen size and the layout of the icons and buttons.

Following is the description of the Alien/S screen layout; the presence of the various elements described depends on the activated functions and the accessed window:

Table 8: Alien - screen

<p>A Data and Time of the SmartLiving control panel. If the control panel is in Service status, this field will show the address of the Alien and its built-in reader.</p>	
<p>B Keypad LED icons (<i>Table 7: Keypad LEDs</i>).</p>	
<p>C Temperature read by the thermometer of the Alien user interface.</p>	
<p>D Icon which indicates the presence of an SD card in the card slot. After the entry of a valid user code, the Logout key which appears will allow you to close the session.</p>	
<p>E Section for active functions, with the buttons for access to the Alien user interface, its applications and the SmartLiving system. The home page of the Alien/S (shown in the figure) shows the function buttons indicated in <i>Table 15: Alien menu</i>. In the Alien/G, these buttons are shown in a section on the left and are always visible regardless of the active function.</p>	
<p>F String showing the arming status of the control panel, in accordance with the active scenario or status of the partitions. If a keypad partition changes its arming status in relation to the active scenario, or when the control panel is in service/maintenance mode, this string will show the characters which indicate the real arming status of the partitions, as described in <i>Table 3: Display visualization</i>.</p>	
<p>G System information icons, as described in <i>Table 4: Information icons</i>. After the entry of a valid user code, tapping this section on the display will open (for 3 seconds) a window containing a list of the active scenarios.</p>	
<p>H If you are inside a section, this field will show the following buttons which may cover the information buttons: <ul style="list-style-type: none"> • Back This key allows you to step back to the previously active function. • Home Button, present only on the Alien/S model, which allows you to go directly to the home page. </p>	

Further objects displayed on the Alien screen depend on the section/page being accessed by means of the buttons. The layout of such pages depends on the functions and buttons available and how they are used (*paragraph 5-19 Alien function keys*).

There are also alerts which the control panel activates automatically and that appear as pop-ups during the following events:

- **Zone alarm or tamper**
If any of the keypad partitions has alarm or tamper event memory, a pop-up will appear showing:
 - an "ALARM" warning and the description of the zone which generated the alarm or tamper signal
 - the **Disarm** button, to disarm all the armed partitions that the code and keypad in use have in common
 - the **Stop alarms** button, to deactivate the outputs activated by the alarm signal
 - the **Clear call queue** button, to cancel the calls in the outgoing call queue
 - the **Home** button, to provide direct access to the home page
- Activation of the **entry time**
- Activation of the **exit time**
If an entry or exit time is activated, a pop-up will appear showing:
 - a string indicating the remaining seconds of the running entry/exit time
 - the **Disarm** button, to disarm all the armed partitions that the code and keypad in use have in common
 - the **Scenarios** button, to access the scenarios available for activation
 - the **Home** button provides direct access to the home page



- icon which appears when you tap the display and the keypad is blocked due to 5 consecutive entries of an invalid code.



- icon which is shown when you tap the display and the keypad is blocked due to 5 consecutive entries of an invalid code.

Touching the "Settings" option on the home page for at least 7 seconds disables the sensitivity of the display for 20 seconds. During this interval, the "CLEAN SCREEN" message is shown to indicate that it is possible to clean the screen.

CLEANING THE DISPLAY

Touching any part of the screen for 50 seconds will restore touch screen sensitivity.

REBOOTING

Signalling on the Buzzer

2-3-8

Keypads equipped with buzzers provide you with audible signals, that is, if the sound has not been switched off.

If the keypad has voice function capacity, the buzzer will also signal incoming intercom calls from another keypad.

The buzzer signals the running entry, exit and pre-arm times (refer to *Appendix A, Technical terminology and Glossary*) of enabled partitions. The activation these signals can be set up by means of the keypad options described in *paragraph 5-8 Keypad settings*.

Table 9: Signalling and types of signal

Signalling	Type of signal
Button pressed	Single pulse (beep)
Entry time running	8 pulses + 5 second pause
Exit time running	3 pulses + 5 second pause; 4 short pulses + 5 second pause during the final 20 seconds of the exit Time
Pre-arm time running	1 pulse + 5 second pause
Activation of the output connected to terminal "T1" on the keypad	Continuous audible signal for the entire duration of output activation
Intercom call	Two-tone pulse

Reader - nBy

2-4

SmartLiving intrusion control panels can manage nBy/S and nBy/X readers and also the built-in readers of JOY/MAX and Alien keypads.

The proximity reader is the easiest way for users to interact with the SmartLiving intrusion control system.

The wall-mount nBy/S model can be attached to any flat surface by means of two screws, it is IP34 rated and therefore suitable for outdoor use.

It is equipped with a buzzer and 4 LEDs:

- **F1** - Red
- **F2** - Blue
- **F3** - Green
- **F4** - Yellow

The Universal flush-mount nBy/X (**Patent Pending**) has been especially designed to integrate with all brands of cover plates.

It is equipped with 4 LEDs (red, blue, green and yellow).

Readers do not provide the same extent of system control as keypads, however, these devices are quick and easy-to-use and are extremely useful when carrying out day-to-day operations (arm/disarm partitions, etc.).

Readers are usually located near the main entry/exit points of the protected building. These devices allow system access to valid keys only. The system readers are capable of recognizing a large number of keys, each characterized by customized parameters. Each reader is enabled to operate on specific partitions, whereas each key is enabled to operate only on the partitions the user is allowed to control. Therefore, if a key is held in the vicinity of a reader, it will be possible to control only the partitions which the two devices have in common.

Each reader can be programmed with up to 4 shortcuts (one per LED).

Each key can be programmed with up to 4 shortcuts.

Unlike most traditional readers (which generally carry out arm/disarm operations only), nBy readers also manage a series of useful shortcut commands. For example, it is possible to associate two shortcuts to the red and blue LEDs for arm and disarm operations, and a shortcut to the green LED for gate control, and yet another to the yellow LED for "Clear call queue" operations.

The buzzer signals the running Entry, Exit and Pre-arm time of the reader partitions (refer to *paragraph 2-3-8 Signalling on the Buzzer*).



2-4-1

Signaling on the reader LEDs

The LEDs have two distinct operating in modes:

1. When no key is present at the reader (refer to *Table 10: Reader LEDs with no key at reader*), the LEDs will indicate the current status of the associated shortcut.
2. When a key is present at the reader (refer to *Table 11: Reader LEDs with key at reader*), the LEDs will indicate (in rapid succession) the available shortcuts.

Table 10: Reader LEDs with no key at reader

LED	Red	Blue	Green	Yellow
OFF (All LEDs Off)	All the reader partitions are disarmed. No alarm/tamper memory on the reader partitions or system tamper memory.			
ON / OFF (in accordance with the associated shortcut)	The scenario associated with the arming-shortcut of the red LED is active/inactive. The output associated with the output-activation shortcut of the red LED is active/inactive. Faults are present/not present.	The scenario associated with the arming-shortcut of the blue LED is active/inactive. The output associated with the output-activation shortcut of the blue LED is active/inactive. Faults are present/not present.	The scenario associated with the arming-shortcut of the green LED is active/inactive. The output associated with the output-activation shortcut of the green LED is active/inactive. Faults are present/not present.	The scenario associated with the arming-shortcut of the yellow LED is active/inactive. The output associated with the output-activation shortcut of the yellow LED is active/inactive. Faults are present/not present.
Intermittent blinking (ON: 2.3sec OFF: 0.1sec)	At least one Reader-partition is armed.			
Slow blinking (ON: 0.5sec OFF: 0.5sec)	The reader partitions are disarmed. Alarm/tamper memory on at least one of the reader partitions, or system tamper memory.	The scenario associated with the last key used is active.		
Fast blinking (ON: 0.15sec OFF: 0.15sec)	At least one Reader-partition is armed. Alarm/tamper memory on at least one of the reader partitions, or system tamper memory.			

Table 11: Reader LEDs with key at reader

LED	Red	Blue	Green	Yellow
OFF (no light)	Request to arm ALL the partitions common to both the key and reader.			
ON (only one LED On)	Request to activate the shortcut associated with the red LED on the reader or the first shortcut of the key	Request to activate the shortcut associated with the blue LED on the reader or the second shortcut of the key	Request to activate the shortcut associated with the green LED on the reader or the third shortcut of the key	Request to activate the shortcut associated with the yellow LED on the reader or the fourth shortcut of the key
ON (All the LEDs On).	Request to activate the shortcut associated with the key.			
Fast blinking (ON: 0.15sec OFF: 0.15sec one LED only)	If the shortcut associated with the red LED is an arming operation, one of the partitions concerned is not-ready-to-arm due to zones which are not in standby status.	If the shortcut associated with the blue LED is an arming operation, one of the partitions concerned is not-ready-to-arm due to zones which are not in standby status.	If the shortcut associated with the green LED is an arming operation, one of the partitions concerned is not-ready-to-arm due to zones which are not in standby status.	If the shortcut associated with the yellow LED is an arming operation, one of the partitions concerned is not-ready-to-arm due to zones which are not in standby status.
Fast blinking (ON: 0.15sec OFF: 0.15sec ALL LEDs)	If the shortcut associated with the key is an arming operation, one of the partitions concerned is not-ready-to-arm due to zones which are not in standby status.			

If a key is present, all operations (arm, disarm, etc.) will apply only to the partitions common to both the key and reader.

Note

If this option is enabled and there are no keys present at the reader, the reader LEDs will be Off.

"50131READERLEDOFF"

User Codes

2-5

Each User Code comprises a PIN for identification purposes and a group of parameters which determine its rank in the system code hierarchy and the operations the user is entitled to perform.

The PIN is made up of 4, 5 or 6 digits that the user must enter in order to allow identification.

The PIN of the only user code enabled at default is 0001. The PINs of the successive codes are 0002, 0003, etc.

The PINs of user codes can be changed by the installer or by other hierarchically superior code. The installer provides the system users with default user PINs which they must change immediately to PIN codes of their choice.

Each user code has the following parameters, to be programmed by the installer or by other user codes of hierarchically superior level.

- The **partitions** the user can control.
If a user code is entered at a keypad, the user can control only the partitions which are common to both the code and keypad concerned. For example, if a code enabled on partitions 1, 2, 3, 4 and 5 is entered at a keypad which enabled on partitions 4, 5, 6 and 7, it will be able to operate on partitions 4 and 5 only.
- The **type of user code**.
Each code can be assigned a specific level in the system hierarchy:
 - User
 - Manager
 - Master


The system codes can carry out, in accordance with their assigned level in the system hierarchy (the "User" being the lowest level), the following operations on all other codes that are inferior hierarchically:

- enable/disable
- change PIN
- change the programming parameters

- The **ways of accessing the user menu**.
Each code can access its customized menu in 3 different ways (refer to *paragraph 2-5-1 Ways of accessing the user menu*).
- The **commands over the phone**.
This option enables access to the system via remote telephone. If this option is enabled, the User can send commands to the control panel over-the-phone. Commands can be sent during calls to/from the control panel. After a valid PIN entry on the telephone keypad the user can activate specific shortcuts (refer to *Chapter 3 - Shortcuts*). This method of entering commands will affect the code partitions only.
- **Timer Restriction** (codes limited to a timeframe)
If a code is associated with one of the timers, it will be able to operate the system only when the timer is On.
- The **group of outputs which can be activated/deactivated manually**
After accessing the Outputs ON/OFF section (user menu) you can activate/deactivate the duly programmed outputs.
- The **menu sections** the user can access (refer to *paragraph 2-5-1 Ways of accessing the user menu, point 1.*)
- **Customized shortcuts**.
Each code can be programmed to manage:
 - up to 12 customized (personal) shortcuts assigned to keys **F1** Fn, ..., **F4** PNL
 - up to 10 customized (personal) shortcuts assigned to keys **0** ↵, ..., **9** wxyz

These shortcuts are available to the code user only after accessing the user menu.

Note

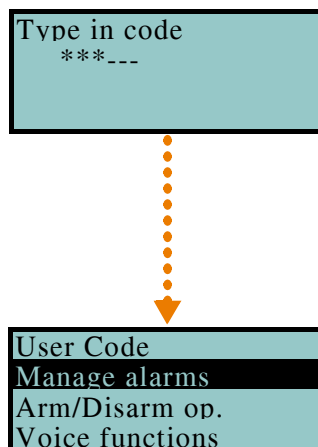

Ways of accessing the user menu

2-5-1




In order for code users to access their user menus, they must first validate their codes.

This can be done by typing-in the code PIN and pressing **OK**.







If the installer has enabled the "Fixed length" option on a user code, the user must first press **OK** and then type-in their PIN.






"FIXED LENGTH"


At this point, there are 3 different ways of allowing first-access to the user menu, depending on the system setup, as follows:


1. The user can access the menu directly, as shown in the figure opposite (1.); by means of keys  and , the user can select the desired menu section and then press  for access. Following is a the list of available user-menu sections:

- Manage alarms
- Arm/Disarm op.
- Voice functions
- Activations
- View
- Outputs ON/OFF
- Set date/time
- Keypad settings
- Change PIN
- TelephoneNumbers
- Teleservice req.
- Overtime request
- Thermostat
- Teleservice Nexus
- Codes

2. The keypad deletes the shortcut icons associated with keys , ...,  and replaces them with the customized shortcut icons associated with the code, as illustrated opposite (2.). Keys , ...,  and , ..., , will allow the user to select the desired shortcut.

3. You can access a descriptive menu of the customized shortcuts assigned to keys , ..., , as shown opposite (3.). To activate the shortcut, use keys  and  to select the description then press .

These methods, show how you can access the menu after code validation, in other words, on first access. At this point, each time you press key , 3 different objects will appear, select the one that applies to the operation concerned and then continue.

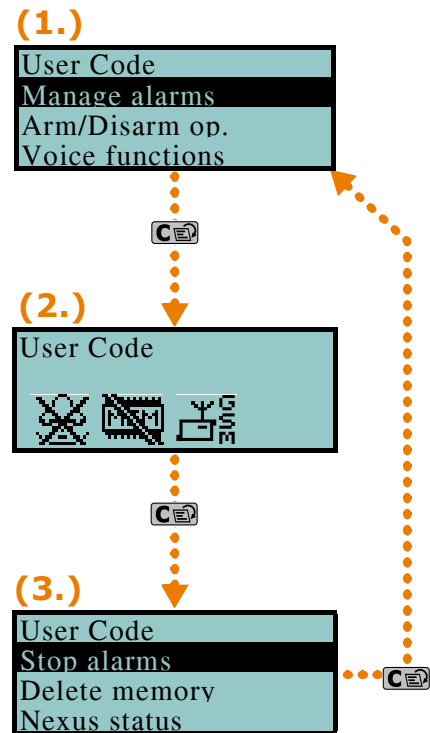

Keys 2-6

The SmartLiving system is capable of managing INIM's contact-free digital-keys, which are available in three versions:

- **nKey, nBoss** - tag fro proximity readers
- **nCard** - proximity card
- **Air2-KF100** - remote control key

Each key is unique and is identified by a random code selected from over 4 billion code combinations. During the installation phase, each key is enrolled on the system in order to allow it to operate.

Each key is characterized by the following parameters (programmed by the installer) in accordance with the requirements of the key user.

- **Partitions** - user codes can control only the partitions they are assigned to. If a key is used at a reader, it can operate only on the partitions the two devices have in common. For example, if the key controls partitions 1, 3, and 5 and the reader controls partitions 1, 2 and 6, the key can operate on partition 1 only, as it is the only partition the key and reader have in common. If a button on the remote-control is pressed, the user will be allowed access only to the partitions the device is assigned to.
- Up to 4 **Shortcuts**.
- A **Timer** can be set up to restrict the use of a key. A key associated with a timer will only be accepted by the system during the timeframe set for the timer involved.
- The **Patrol** option is usually enabled on keys used by security personnel or night watchmen who must patrol the protected premises at regular intervals. This type of key does not allow the user to select the "Arm Type". When a key with this attribute is recognized, the system will perform the following operations:

1. Disarm the partitions common to the key and reader concerned.
2. Activate the respective Patrol Time for the partitions concerned.
3. Re-arm the partitions (as before) when the Patrol Time expires.

If the patrol key is held in the vicinity of the reader while the Patrol Time is still running (for example, if the inspection ends ahead of time), the Patrol Time will end immediately and the partitions will arm as before.

- The **Service** (maintenance) option allows keys to deactivate instantly any outputs associated with zone and partition alarm/tamper events (on the Partitions the key and reader have in common). This type of key can select the reader shortcuts and its customized (personal) shortcuts.



Air2-KF100 Wireless keyfobs

2-6-1

The KF100 remote-control has 4 buttons which can each be programmed with a shortcut (ask yo ur installer for details). The graphic-choice feature allows you to identify the buttons by numbers or icons.



The remote-control also provides 4 button-associated LEDs and a confirmation LED. As a result of two-way communications with the BS100 transceiver, the KF100 remote-control imparts audible and visual feedback signals (beep and LED signals) which notify the user of the outcome of requested operations.

Table 12: **Feedback signals provided by KF100 wireless remote-control**

Key	Icon	LED 1	LED 2	LED 3	LED 4	Buzzer signal	Operation
F1		1 flash				beep	Shortcut activation 1
F2			1 flash			beep	Shortcut activation 2
F3				1 flash		beep	Shortcut activation 3
F4					1 flash	beep	Shortcut activation 4
F2 + F3			1 flash	1 flash		beep	Block/Unblock remote-control device
Any				4 flashes	4 flashes		Remote-control device blocked

If an operation is successful, but the corresponding LED fails to light, it is an indication that the battery is low. The battery must be replaced before it runs out completely.

Note

Table 13: **Control panel signals over wireless keyfob**

Feedback from panel	Confirmation LED - green	Confirmation LED - red	Buzzer signal
Command not received		1 flash	
Operation not done		4 flashes	bop (audible error signal)
Operation done	3 flashes		long beep

Multi-system access

2-7

Users can access several systems using the same code/key/remote-control device. The user code, key or remote-control device must be enrolled separately on the control panels concerned, and can be programmed with different attributes and functions in accordance with the requirements of each specific system.

The keys and codes provide the systems with random codes (for keys) or PINs (for codes) which the system associates with the respective attributes and functions programmed by the installer. For example, a user key/code may be enabled on partitions 1 and 2 on system A, on partitions 7, 8 and 9 on system B and on partitions 4 and 5 on system C.

This operating method is possible for all keys and codes.

Telephone functions

2-8

The SmartLiving control panel events can be programmed to trigger report calls to an Alarm receiving Centre (via digital dialer) and also voice calls and SMS messages to contact numbers.

The SmartLiving control panel also accepts commands over-the-phone. Shortcut commands can be sent during calls to/from the control panel, after valid PIN entry on the telephone keypad.

The commands can be activated by keys "0" to "9" on the telephone keypad, which the system associates with various shortcut actions. Each code can be programmed with customized shortcuts, such as: arm, disarm, activate/deactivate outputs, delete alarm memory, etc.

If the system is equipped with a SmartLogos30M voice board, the code shortcuts assigned to keys "0" to "9" will be announced over-the-phone, in order to facilitate operations.

Additionally, the Listen-in function allows you to eavesdrop on the protected premises by means of the keypad microphones.

When a user requests an operation, via a correctly formatted SMS message or voice call to the SIM card of the Nexus, the control panel will activate the respective shortcut and send confirmation (feedback) of the successfully implemented command.

WEB / e-mail functions

2-9

All SmartLAN/G equipped SmartLiving control panels are capable of sending event associated e-mails (SmartLAN/G is an optional accessory board).

The e-mail text, subject, attachments and recipients must be edited by your installer. No changes whatsoever should be made to the e-mail structure. Each e-mail text is capable of containing a direct link to a website or to an IP addressable device such as an IP camera, and an attachment document/file.

For a description of a typical e-mail format, refer to *paragraph 5-20-1 e-mail*.

In addition to e-mails, the SmartLAN/G board allows you to interface with the control panel from any computer or mobile phone device (PDA, mobile phone, etc.) via any Internet browser. The SmartLAN/G board integrates a web-server which allows users to operate the control panel from remote locations without the need of authentication.

For further details regarding the web-server, refer to *paragraph 5-20-2 Access to and use of the Web interface*.



AlienMobile Application

2-10

Ness Corporation now offers SmartLiving control panel users the Alien Mobile application for smartphones and Android or Apple tablets, in two different versions:

- **AlienMobile** - free App with basic functions
- **AlienMobile+** - purchasable App with advanced functions

The application, which can be downloaded online from Play store and Apple app store, provides a complete user-interface similar to that described in this manual for Alien keypads, or for interfacing the web browser of the SmartLAN/G board.

It is the installer's task to prepare the control panel for direct connection to the devices which use the Alien Mobile application and to configure the application for use with the system to be monitored and, finally, to provide end-users with all the necessary access data.

For instructions for use and access to the system via Alien Mobile refer to *paragraph 5-21 Using AlienMobile application*.



Arming scenarios

2-11

A scenario is a pre-set arming configuration which applies various operating modes to the SmartLiving system partitions (the scenarios are programmed by the installer in accordance with user requirements).

For example, if all the occupants are leaving the building, you can apply a scenario that arms all the partitions and activates the outputs which closes the rollerblinds and switches off the lights. On returning to the building, you can apply a scenario that disarms some of the partitions (those required) and activates an output which switches on the garden lights.

The installer will set up the and make available the scenarios which best suit user requirements. Users can activate the scenarios via keypads, readers, remote-control devices and over-the-phone by means of shortcut commands (refer to *Chapter 3* -

Shortcuts). Scenarios can also be activated via a Web server with an interface for mobile phones or PCs, or through the Alien Mobile application by accessing the "Scenarios" section (*paragraph 5-2 Arming and disarming partitions*).

If the "Show scenario" control panel parameter is active, the left side of the second line on the screen will display the current scenario.

"SHOW SCENARIO"

If you are using an Alien keypad, the "View partition status" option (refer to *paragraph 3-3-3 Remote-control shortcuts*) will allow you to select the visualization mode of the operating status on the bottom bar of the display:

"VIEW PARTITION STATUS"

- Single partition - the characters relating to the operating status of the partitions will be shown, as described in *Table 3: Display visualization*
- Single scenario - the description of the active scenario will be shown

After the entry of a valid user code, tapping the bottom bar on the home page will open (for 3 seconds) a window containing a list of the active scenarios.

SHORTCUTS

Keypad shortcuts

3-1


The installer can programme each Joy, nCode and Concept keypad with up to 12 shortcuts associated with 4 function keys **F1** **F2** **F3** **F4**. The shortcuts are identified by icons which appear on the lower part of the display. Arrows to the right and left of the icons indicate that keys **←**, **→**, will allow you to view and use other shortcuts (if programmed).

The 12 keypad shortcuts can be activated in 4 different ways, as follows.

1. **By ALL.** Pressing the respective key **F1** **F2**, ..., **F4** will activate the shortcut instantly without code entry. The shortcut will affect all the keypad partitions.
2. **By ALL with confirmation request.** Pressing the respective key **F1** **F2**, ..., **F4** will prompt the system to ask you if you want to continue or not. If you press **OK** the shortcut will activate instantly, if you press **CE** or **Esc** the operation will be abandoned. This method protects against accidental operations. The shortcut will affect all the keypad partitions.
3. **Code users only.** Press the respective key **F1** **F2**, ..., **F4**, then enter a valid code, the shortcut will activate after code recognition. The shortcut will affect the partitions common to both the keypad and code.
4. **Code users only when activation of the shortcut lowers system security.** If a shortcut involves a scenario that completely disarms a partition, or switches a partition from Away mode to Stay mode, the security of your system will obviously be at risk, therefore, the system will request code entry. The shortcut will affect the partitions common to both the keypad and code.

To activate a shortcut, press the key which corresponds to the shortcut icon: **F1** **F2**, ..., **F4**. The system will either activate the shortcut instantly (case 1.) or will request confirmation (case 2.) or code entry (cases 3. and 4.) before carrying out the operation.

Alien user interfaces do not have function keys **F1** **F2** **F3** **F4**, nor do they provide access to certain functions via shortcuts. However, the screen provides buttons which, with a single tap, activate functions and applications. For further details refer to *paragraph 5-19 Alien function keys*.

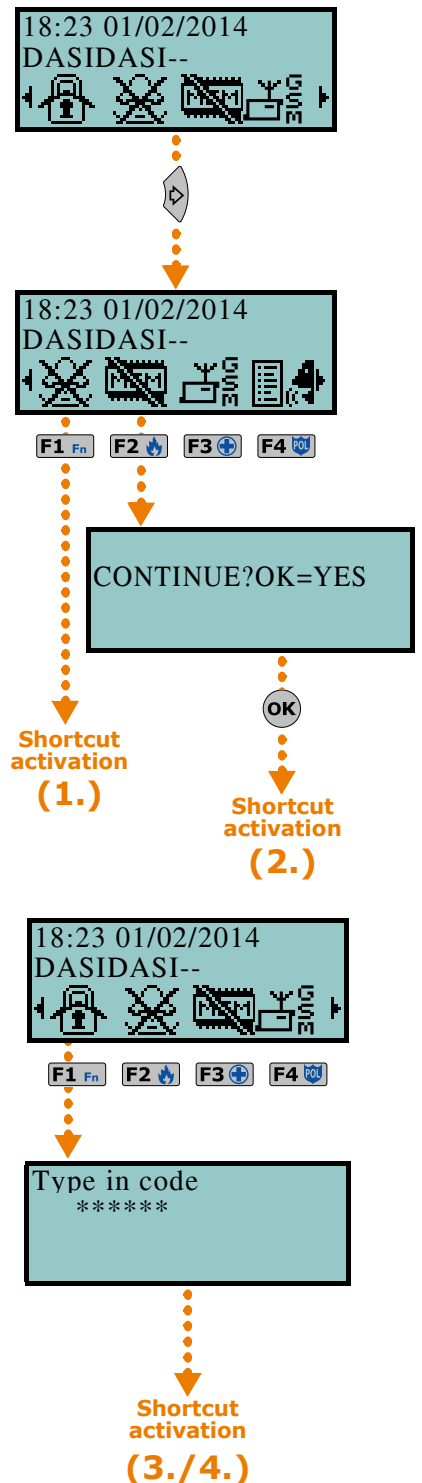


Shortcut with code

3-2

Besides the shortcuts provided by keys **F1** Fn, **F2** Fn, **F3** Fn, **F4** Fn, each user code can have as many as 22 customized (personal) shortcuts.

Users will be able to access their code-shortcuts only after validating their PINs (refer to *paragraph 2-5-1 Ways of accessing the user menu*). Each code can be programmed to manage:

- Up to 12 shortcuts can be activated by keys **F1** Fn, ..., **F4** Fn and identified by explicit icons.
- Up to 10 shortcuts can be activated by keys **0** key, ..., **9** wxyz. If a code is enabled to operate the system over-the-phone, these shortcuts will also be available on the telephone number-keys.

Entry of a code associated with shortcut no.9:  at a Joy/MAX keypad, prompts the voice announcement of all the shortcuts assigned to the number keys.

Via Keypad

1. Validating your PIN
2. Access the user menu, using the method described in *paragraph 2-5-1 Ways of accessing the user menu* at point 2.
3. Press the key **F1** Fn, ..., **F4** Fn which corresponds to the shortcut icon or press the key **0** key, ..., **9** wxyz which is assigned to the shortcut.

If the installer has enabled the "Fixed length" option on a user code, the shortcut assigned to **F12** will activate as soon as the user types-in their PIN without need of touching any other key.

"FIXED LENGTH"

Over-the-phone

1. Establish communication with the control panel.
2. Type in your code followed by "#".
3. Listen to the voice prompts regarding the available shortcuts.
4. Press the number key which corresponds to the required shortcut.

Key and Reader shortcuts

3-3

nBy/S and nBy/X Reader shortcuts

3-3-1

Hold a valid key in the vicinity of the reader, as soon as the reader accepts the key, a series of visual signals on the reader LEDs will indicate the various shortcuts.

When the required shortcut is indicated, remove the key to activate the corresponding shortcut action.

The visual signals on the Reader LEDs are as follows (refer to *Table 11: Reader LEDs with key at reader*).

1. **Red LED on for 3 seconds** - shortcut associated with the red LED of the reader or first shortcut of the key
2. **Blue LED on for 3 seconds** - shortcut associated with the blue LED of the reader or second shortcut of the key
3. **Green LED on for 3 seconds** - shortcut associated with the green LED of the reader or third shortcut of the key
4. **Yellow LED on for 3 seconds** - shortcut associated with the yellow LED of the reader or fourth shortcut of the key
5. **All LEDs on for 3 seconds** - first shortcut associated with the user key
6. **All LEDs off for 3 seconds** - disarm all the partitions.
7. If the key is not removed, the reader will run through the entire sequence again starting from the red LED. Selection of the desired shortcut (indicated by a specific LED) will not occur until the key is removed.


If, during this phase, any of the partitions are armed, the LED sequence will start at point 6.

If the installer has enabled option "50131ReadLedOFF", the reader LEDs will be off, therefore, if you wish to activate a shortcut, you must:

"50131READERLEDOFF"

1. Wave the key across the sensitive area of the reader: the LEDs will signal the respective status for 30 seconds.
2. During this 30 second period, hold a valid key in the vicinity of the reader in order to generate the visual signals on the reader LEDs. Remove the key when the required operation or pre-set scenario is indicated on the LEDs.

Shortcuts on the built-in readers of Joy/MAX and Alien keypads **3-3-2**


Users must hold their digital keys in the vicinity of the built-in reader (on the Joy/MAX keypad, the position of the reader is indicated by ) instead, on the Alien keypad it is positioned on the lower right-hand corner of the frontplate).

The key and reader shortcuts will flash one-by-one at 3 second intervals on the keypad display. When the required shortcut is indicated, remove the key to activate the corresponding action.

The shortcuts appear on the display in the following order:

1. Description of the first reader shortcut for 3 seconds
2. Description of the second reader shortcut for 3 seconds
3. Description of the third reader shortcut for 3 seconds
4. Description of the fourth reader shortcut for 3 seconds
5. Description of the fourth reader shortcut for 3 seconds
6. "Disarm" (disarms all the partitions) for 3 seconds
7. Then back to point 1. if the key is not removed.

If, during this phase, any of the partitions are armed, the LED sequence will start at point 6.

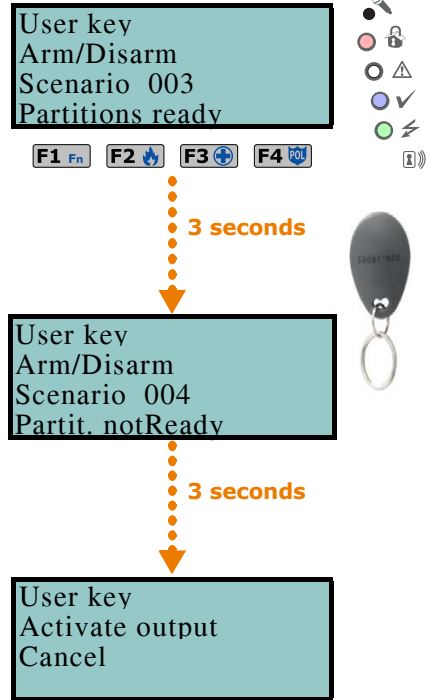



Remote-control shortcuts **3-3-3**

To activate the installer-programmed shortcuts assigned to the 4 keys **F1**, ..., **F4** on the remote-control device, simply push the button which corresponds to the desired command. The successful outcome of the operation will be signaled by audible and visual feedback (refer to *Table 12: Feedback signals provided by KF100 wireless remote-control*).

Shortcut list **3-4**

For the complete list of shortcuts refer to the table in *Appendix B, Shortcuts at default*. Shortcuts 0 to 8, shown in the table, carry out the specified actions instantly.

Shortcut 9  can be activated over-the-phone only (telephone shortcut).

Shortcut 17  can be activated over-the-phone or at a keypad.

All other shortcuts (from 10 to 16 and from 18 to 37) provide direct access to specified sections in the user menu, therefore, can be activated at keypads only.

Chapter 4

VOICE FUNCTIONS

If the SmartLiving control panel is equipped with a SmartLogos30M voice board, you will be able to take advantage of all the voice functions provided by the JOY/MAX and Alien keypads, including the over-the-phone voice guide.

Your installer will program the voice messages you require:

- for event-associated calls
- for event-associated announcements on the keypad at address 1

All keypads with voice functions provides a voice memo-box for the recording and playback of messages. This handy function will allow you to leave messages for other users who have access to the keypad; refer to *paragraph 5-3 Voice box and intercom functions*. You can record, play and delete messages at your own discretion.

The presence of a new memo in the memo-box will be indicated on the blue LED on the keypad, as described in *Table 7: Keypad LEDs*.

The SmartLogos30M voice board provides a total of 60 seconds memo time (shared by all the voice-capable keypads in the system).

15 memo slots are available.

Note

USING THE SYSTEM

This chapter describes all the operations users can carry out with or without authorization (user PIN entry). The tools and methods which allow access the system operations are as follows.

The system can be accessed:

- via **Keypad - Joy/GR, Joy/MAX, nCode/G, cCode/G**
in which case the user can operate the system in two ways:
 1. by means of shortcuts (refer to *paragraph 3-1 Keypad shortcuts*);
 2. by means of access codes via the user menu (refer to *paragraph 2-5 User Codes* and *paragraph 3-2 Shortcut with code*). Users have various ways of viewing their personal menus (refer to *paragraph 2-5-1 Ways of accessing the user menu*). However, this chapter describes only the procedures starting from the menu with visual information relating to the sections described at point 1 in *paragraph 2-5-1 Ways of accessing the user menu*.
- via **Keypad Alien/S, Alien/G**
in this case, users are provided with buttons, displayed on the screen, that with a single tap activate functions and applications. For further details refer to *paragraph 5-19 Alien function keys*.
- via **Reader (nBy/X, nBy/S, built-in reader on Joy/MAX and Alien)**
The proximity-key reader provides users with only one way of accessing the system, as described in *paragraph 3-3 Key and Reader shortcuts*.
- **Over-the-phone**
During a call from/to the control panel after valid code (PIN) entry.
- Via **Command Zone**
After violation of a duly-programmed zone which sends a command to the control panel.
- Via **Wireless remote-control device**
by means of keys **F1**, ..., **F4**, as described in *paragraph 2-6-1 Air2-KF100 Wireless keyfobs*.
- Via **Web**
by means of the integrated web-server on the SmartLAN/G (if installed) via any browser (refer to *paragraph 5-20-2 Access to and use of the Web interface*).
- Via **AlienMobile Application**
In this case, users are provided with buttons, displayed on the screen of their smartphones, which activate functions and applications from remote locations (refer to *paragraph 5-21 Using AlienMobile application*).

Managing alarms

5-1







This paragraph describes the actions users can take during typical alarm and tamper conditions:

- **Stop alarms** - deactivates instantly the outputs activated by zone/partition alarm and tamper events and system tamper events.
The system tamper events are:
 - Open panel
 - Dislodged panel
 - Peripheral tamper (expansion, keypad, reader)
 - Peripheral loss (expansion, keypad, reader)
- **Clear call queue** - clears the outgoing call queue and stops any ongoing calls.
- **DeleteAlarm mem.** - implements a "Stop alarms" operation and, at the same time, deletes memory of system and partition alarm and tamper events.

Via Keypad

Method 1

Activate the shortcuts associated with keys **F1**, ..., **F4** shown on the display, with or without code entry:

- The shortcut which is assigned to "Alarm menu" menu operations (shortcut n.13: ) allows you to view the respective section. You can select one of the following options, using keys  and  and activate it by means of the **OK** key:
 - **Stop alarms**
 - **Clear call queue**
 - **DeleteAlarm mem.**
- The following shortcuts activate the associated commands:
 - Shortcut n.2:  "Stop alarms"
 - Shortcut n.3:  "Clear call queue"
 - Shortcut n.4:  "DeleteAlarm mem.";

Method 2

Access the "Alarm management" section (user menu) by means of a valid PIN. Follow the instructions described in **Method 1**.

Via Alien touch screen

Access the "Menu" section by pressing , type-in the user code and then access the "Actions" section.

This section contains a list of control panel commands which can be activated by pressing **ON**, commands such as:

- **Stop alarms**
- **Clear call queue**
- **Clear alarm memory**

Via Reader

Hold a valid key in the vicinity of the reader until the reader LEDs or display indicates "Stop alarms" (shortcut n.2), "Clear call queue" (shortcut n.3) or "DeleteAlarm mem." (shortcut n.4).

Over-the-phone


Type-in the PIN of a user code followed by **#** (the user code must be enabled to operate the system over-the-phone), then press the key (from **0** to **9**) which the installer has programmed to activate "Stop alarms" (Shortcut n.2), "Clear call queue" (shortcut n.3) or "DeleteAlarm mem." (shortcut n.4).


Via Wireless remote-control device

Push the respective button on the remote-control device and verify the outcome of the requested operation, as described in *paragraph 2-6-1 Air2-KF100 Wireless keyfobs*.

Via Web and AlienMobile

First access the "Intrusion" section, then the "Partitions" section.

This section contains the list of partitions the user can control, the **SET** button opens a window containing a list of commands for the partition. The **RESET** button  deletes the alarm memory and, if allowed, also tamper memory.

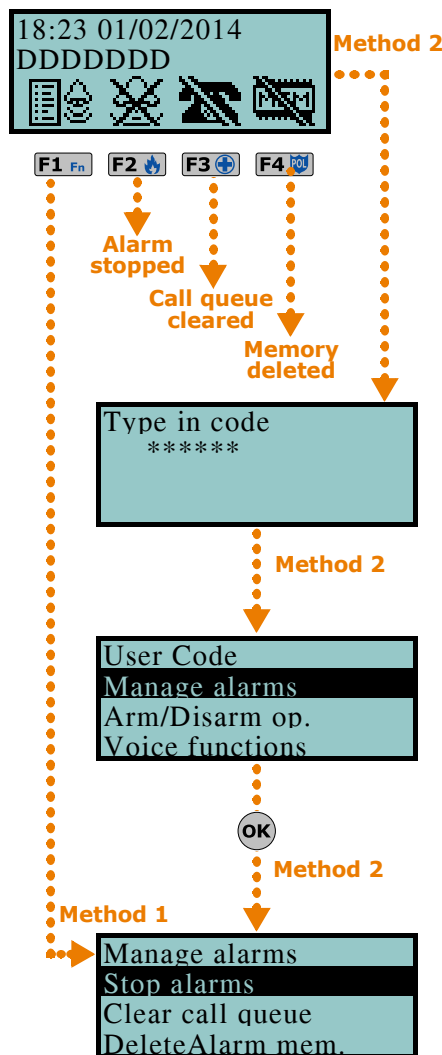


Arming and disarming partitions

You can arm/disarm the system partitions via keypad, reader, over-the-phone, zone command, wireless command, Internet, as follows.


If you request an arm-partition command at a keypad (for one or more partitions) and not all the zones involved are in standby status (thus execution of the command would generate an instant alarm), the keypad will provide a list of the zones concerned.

You can scroll the list and check the zones which are not in standby status (open zones). If you wish to implement the command, the visualized zones will generate an instant alarm.

5-2

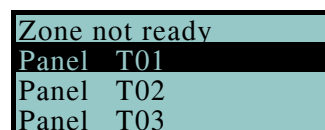

If you request an arm-partition command at a keypad (for one or more partitions) and conditions (programmed by the installer) which lower the security of the system are present, the keypad will provide a list of the conditions concerned, as shown in the figure opposite.

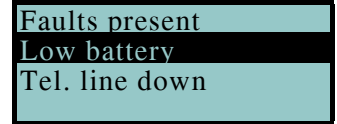


You can scroll the list and view the conditions which lower the security of the system.

If you wish to implement the command, you must use a Joy, nCode or Concept keypad and press **OK**. Arming the system under such circumstances will generate a "Forced arming" on partition event. This event highlights the fact that partitions were armed when conditions which lowered the security of the system were present (for example, "Low battery" or "Mains failure"). If, however, the installer included the "LossTamp.ongoing" event in the list of conditions which lower security, and this condition is active, you can cancel the operation by pressing **OK**.


Via Keypad





Method 1

Activate the shortcuts associated with keys **F1 Fn**, ..., **F4 Fn** (shown on the display) with or without code entry:

- The shortcut which is assigned to "Arm/Disarm" operations (shortcut n.1: ) applies the pre-set scenario.

If the shortcut is activated by the entry of a code PIN with the "Fixed Length" attribute, and if all the partitions the user controls are disarmed, they will switch status and arm; likewise, if all the partitions the user controls are armed they will switch status and disarm.

- The shortcut assigned to "Arm/Disarm Menu" (shortcut n.12: ) allows you to view the respective section and arm (in Stay or Away mode) or disarm each partition separately.

- Select the desired partition, using keys  and .
- Select the required operating mode for the selected partition, using keys  and .
- Once you have set up the required operations for all the partitions, press **OK**.

Method 2



Access the "Arm/Disarm" section of the user menu by means of a valid code PIN. Follow the instructions described in **Method 1**.

Method 3

While the entry time is still running (refer to "Entry time" in *Appendix A, Technical terminology and Glossary*), type in a valid code (the code must have access to the "Arm/Disarm" section of the user menu), the partitions the code and keypad concerned have in common will disarm instantly.

Via Alien touch screen

The Alien keypad allow users to activate the programmed scenarios and also set up the arming mode of the partitions they control (have access to):


- Access the "Scenarios" section by pressing . This section provides a list of the scenarios which can be activated by means of the **ACTIVATE** button.
- Access the "Intrusion" section by pressing , type-in the user code and then access the "Partitions" section. This section displays the partitions separately. You can scroll and select a partition by means of the right/left scroll keys and then select the arming mode by means of up/down keys. To apply the selected arming mode press **OK**.

Via Reader

Hold a valid key in the vicinity of the reader and remove it when "Arm/Disarm" (shortcut n.1) is indicated on the LEDs (the system will apply the pre-set scenario).

Over-the-phone

Type in a valid code PIN followed by "#". Press the number key (from "0" to "9") associated with the "Arm/Disarm" shortcut (shortcut n.1) in order to apply the pre-set scenario.

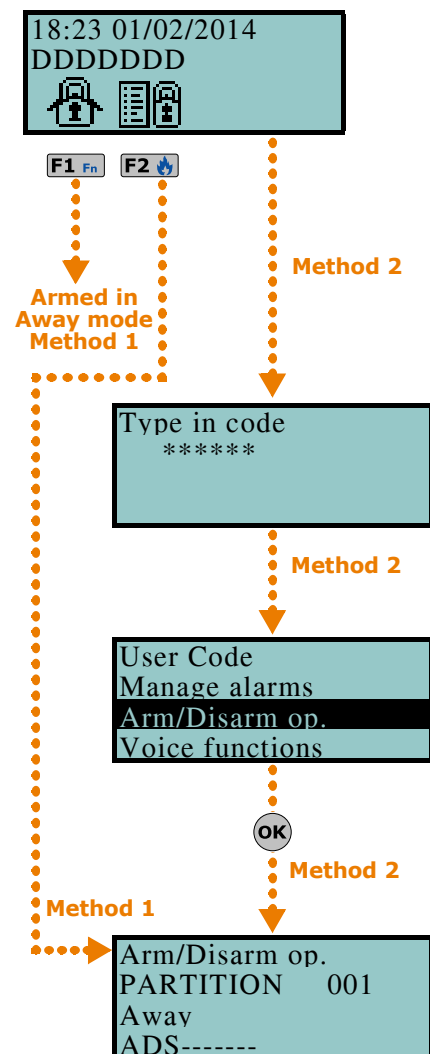

Via Command Zone

Under normal circumstances, a command zone comprises a mechanical key-lock or call point which activates an electrical contact wired to the command zone. In accordance with how the command zone is configured, it is possible to:

- arm the partitions the zone belongs to
- disarm the partitions the zone belongs to
- switch the status of the partitions (arm any disarmed partitions and disarm any armed partitions, refer to "Switch Zone" in *Appendix A, Technical terminology and Glossary*)
- arm the partitions the zone belongs to when the command zone is violated, and disarm the partitions the zone belongs to when it restores to standby

Via Wireless remote-control device

Push the respective button on the remote-control device and verify the outcome of the requested operation, as described in *paragraph 2-6-1 Air2-KF100 Wireless keyfobs*.

Via Auto-arm operations

If a partition is associated with a timer which controls automatic-arming operations, it will arm when the timer switches ON and disarm when the timer switches OFF. Users who are enabled to control Auto-arm operations (refer to *paragraph 5-4 Activations*) must:





- activate the timer associated with the Auto-arm operations
- enable the Auto-arm option for the partitions concerned

Via Web and AlienMobile

This method of access allow users to activate the programmed scenarios and also set up the arming mode of the partitions the users can control (have access to):

- Access "Scenarios" section This section provides a list of the scenarios which can be activated by the **ON** button. The description of the current scenario is displayed on the bar on the bottom left of the screen.
- First access "Intrusion" the section and then the "Partitions" section. This section contains the list of partitions the user can control, the **SET** button opens a window containing the buttons for the arming mode settings.



- **AWAY** arming mode arms the perimeter and internal zones and the icon becomes 
- **STAY** arming mode arms the perimeter zones of the partition and the icon becomes 
- **INSTANT** arming mode arms the partition in instant mode and the icon becomes 
- **DISARM** switches off the perimeter and internal zones and the icon becomes 

The button indicating the selected arming mode will be highlighted by a different colour to the other buttons.

Voice box and intercom functions

Voice communication during keypad-to-keypad intercom calls is one-way, therefore, only one person should speak while the other listens. The user who wishes to speak must activate the intercom function on the keypad they are using.

The voice functions are:

- **Record** - starts the recording phase of the memo in the memo-box of the keypad you are working on.
- **Playback** - starts the playback phase of the message in the memo-box of the keypad you are working on.
- **Delete** - deletes the memo in the memo-box of the keypad you are working on.
- **Intercom** - allows voice communication with another voice-capable keypad.

Via Keypad

Method 1


Activate the shortcuts associated with keys **F1 Fn**, ..., **F4 Fn** (shown on the display) with or without code entry:

5-3













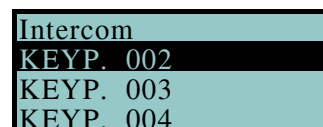
F1 Fn

Caller keypad "KEYP.001" 1

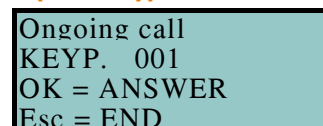

Recipient keypad "KEYP.002" 1




- The shortcut assigned to the "Voice functions menu" (shortcut n.14: ) allows you to view the "Voice functions" section. Select the required function by means of  and  then press **OK**.
- **Record/Playback** - the operation time-out (expressed in seconds) will be signaled by a counter and a progress bar on the display. If you wish to interrupt the record/playback operation manually, press **OK**, otherwise, it will end automatically when the pre-set time-out expires. You can adjust the volume during the playback phase using keys  and .
- **Delete** - this operation must be confirmed by pressing **OK**.
- **IntercomCall** - the display provides the list of keypads you can call. Use  and  to select the keypad you wish to contact, then press **OK** to start the call. The recipient keypad will emit an audible signal to indicate the incoming call and the display will appear as shown in the figure. The recipient can press **OK** to answer the call or **Esc** to reject it. Both the caller and the call recipient can end the call by pressing **Esc**. The volume can be adjusted during the listen phase by pressing keys  and .
- The "IntercomCall" shortcut (shortcut n.11: ) allows you to view the previously described "Intercom call" section.

Method 2


Access the "Voice functions" section of the user menu by entering a valid PIN code. Follow the instructions described in **Method 1**.

Via Alien touch screen

When accessing voice functions via the Alien touch screen, first access the "Apps" section by pressing the  button then access the "Voice functions" section. Following is a list of the sections relating to each function which can be activated by pressing the respective **ON** button:

- **Record**
- **Play**
- **Delete**

The sections accessed through the touch screen reproduce the same voice functions as those previously described for keypads with keys.

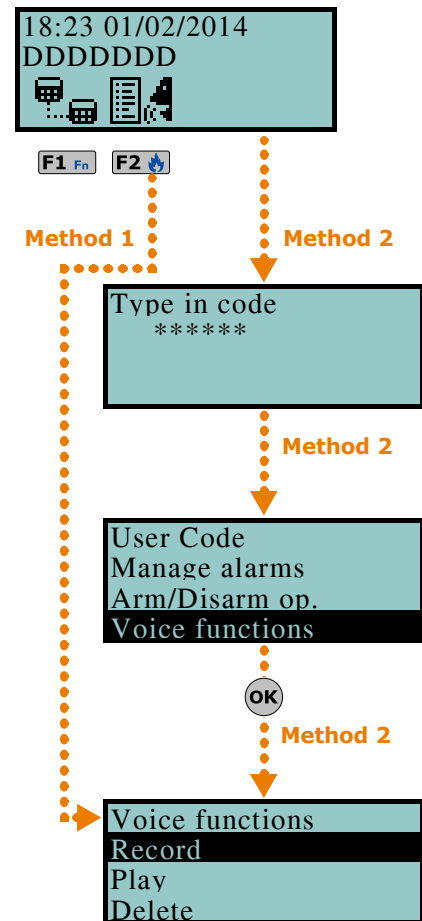

Activations

5-4

The activation/deactivation of the SmartLiving system peripherals and elements (described in the following section) enables them to operate in accordance with their settings (activation) or disables their functions completely (deactivation). The user has full control over activation/deactivation of the SmartLiving system peripherals and elements.

The following section describes the consequences of activation/deactivation.

- **Zone** - disabled zones cannot generate alarms (bypassed).
- **Auto-arm operations** - can be activated/deactivated separately on each single partition. If this option is enabled on a partition, it will arm and disarm in accordance with the On/Off settings of the respective timer.
- **Codes** - deactivated (disabled) codes cannot access the system. Activation/Deactivation can be achieved only on hierarchically inferior codes (refer to *paragraph 2-5 User Codes*).
- **Keys** - deactivated (disabled) keys cannot access the system.
- **Keypads** - deactivated (disabled) keypads do not permit code entry (or access to the menu), therefore, they cannot manage shortcuts. However, the LEDs and display will be refreshed.
- **Readers** - deactivated (disabled) readers cannot provide access to the system, therefore, cannot accept keys or generate commands. However, the LEDs will indicate the current status of the system.
- **Timers** - activated timers (On) manage their associated elements (partitions, codes, keys) in accordance with their settings. Deactivated timers cannot time-manage their associated elements, therefore, they will function in accordance with Timer Off status.

All the timers will be activated automatically when you exit the programming session. You must deactivate timers which are not used for system control purposes.

Note

- **Dialer** - a deactivated (disabled) dialer cannot send voice or digital calls. However, if duly programmed, it will be able to manage incoming calls.

- **Answerphone function** - if activated (enabled), the control panel will answer incoming calls with the pre-recorded voice message ("Answerphone message").
- **InternetTeleser.** - if activated when the Answerphone option is enabled, the control panel will answer incoming calls with the pre-recorded voice message.
- **Teleservice** - if activated (enabled), the installer will be able to access the system via modem. The teleservice call allows the installer to work on the control panel parameters. Teleservice operations involve a request from you and the installers acceptance, therefore, this option needs to be enabled only when required.

















If the "Answerphone" and "Teleservice" functions are both enabled, the control panel will give incoming-call priority to the teleservice call. After picking up the call, the control panel will allow the installer-company modem 30 seconds to establish communication. If the modem fails to communicate within this period, the control panel will play the pre-recorded "Answerphone" voice message.

- **Internet access** - if this option is enabled, and the system is equipped with a SmartLAN/G board, the control panel will allow user-authorized access to the system via LAN/Internet. If this option is disabled, the control panel will allow user-authorized access to the system via teleservice (if authorized).
- **Enable install.** - if enabled, the Installer PIN will be accepted by the system and the installer will have access to the Installer menu. If disabled, entry of the installer PIN will generate an "Invalid Code" event and the installer will be denied access to the respective menu.
- **Sync IP2RX** - if activated, the control panel will send a specific string to the IP2RX software in order to allow its identification.

Note

Method 1


Activate the shortcuts associated with keys **F1 Fn**, ..., **F4 Fn** (shown on the display) with or without code entry:

- The shortcut assigned to the "Activations menu" (shortcut n.15: ) allows you to view the respective section in the user menu, where you can:
 1. Use keys  and  followed by  to select the category of elements you wish to activate/deactivate (zones, codes, etc.).
 2. Use keys  and  followed by  to select the single element you wish to activate/deactivate.
 3. Use  to activate the selected element or  to deactivate it.
- Other shortcuts which provide direct access to sub-sections of the "Activations" section are:
 - Shortcut n.19 () accesses "Activations/Zones"
 - Shortcut n.22 () accesses "Activations/Answerphone"
 - Shortcut n.23 () accesses "Activations/Teleservice"
 - Shortcut n.24 () accesses "Activations/Codes"
 - Shortcut n.25 () accesses "Activations/Keys"
 - Shortcut n.26 () accesses "Activations/Timers"
 - Shortcut n.27 () accesses "Activations/Auto-arm"


Method 2

Access the "Activations" section of the user menu by means of a valid code PIN. Follow the instructions described in **Method 1**.

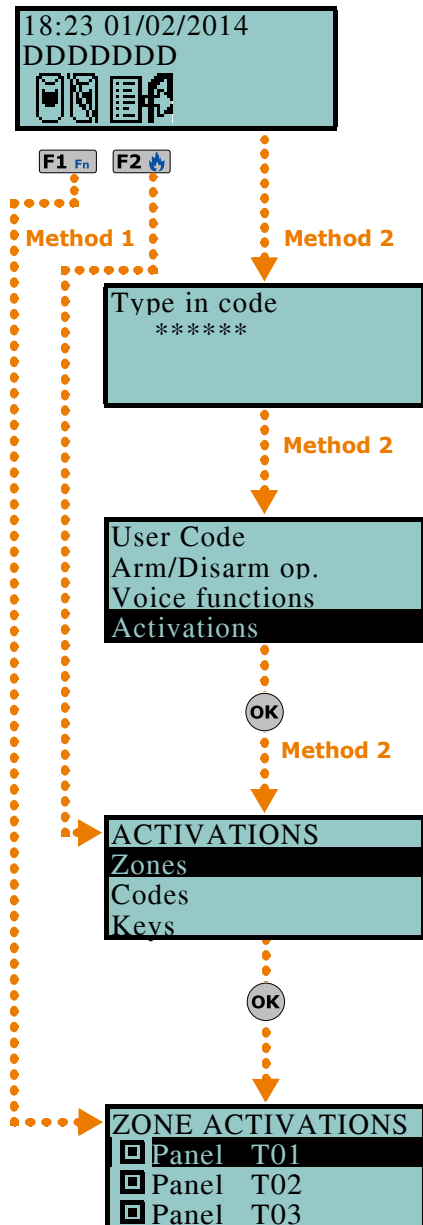

Via Keypad



Via Alien touch screen

Access the "Menu" section by pressing , type-in the user code and then access the "Activations" section.

Following is a list of the sections relating to the elements you can activate by pressing the **ACTIVATE** button. Each section presents its own elements arranged in list form. Each element is associated with two buttons - **ON** for activation and **OFF** for inhibition, and an icon which changes in accordance with the status:

-  - activated/enabled
-  - deactivated/disabled

Via Web and AlienMobile

First access the "Intrusion" section, then the "Zones" section.

"Zones" section contains a list of the zones available to the user, and each zone provides the following keys:

- **ON** - enables the zone and the corresponding icon becomes
- **OFF** - inhibits the zone and the corresponding icon becomes



View

5-5

This section allows you to view the events log and the current status of some of the system peripherals and elements.

The "Events log", "Alarms log", "Faults log" and "Arm/Disarm op." allow you to view the start and end of the corresponding events in chronological order.

The "Nexus status" section shows (on the display) some of the parameters of the Nexus dialer.

The "System voltage" section allows you to view the respective voltage panel.

The "Zone Status" section shows the status of the zone (**Standby, Alarm, Shorted, Tamper**) and its inhibited status (**Unbypassed** - capable of generating alarms, or **Bypassed** - incapable of generating alarms).



The "Faults" section allows you to view current faults only (refer to *Appendix C, Fault signals*).

The "Panel version" section allows you to view the firmware version and model of your SmartLiving control panel.

When viewing the wireless zones, the last line on the display indicates the level of signal strength on a scale of 0 to 7; the higher the value the better the signal.

If you access the control panel via browser, it will be possible to view the status of:

- Partitions
- zones
- outputs
- timer
- events log

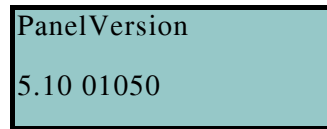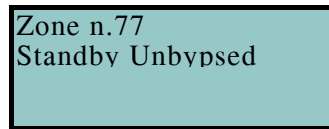

Via Keypad

Method 1


Activate the shortcuts associated with keys **F1 Fn**, ..., **F4 P00** (shown on the display) with or without code entry:


- Shortcut n.28 () accesses "View/Events log"
- Shortcut n.29 () accesses "View/Alarms log"
- Shortcut n.30 () accesses "View/Faults log"
- Shortcut n.31 () accesses "View/Arm/Disarm op."


User access to the information in the "Logs" is filtered. For example, a user can view only the zone alarms relating to the partitions the code and keypad concerned have in common.


Use key or to scroll the chronological events list.

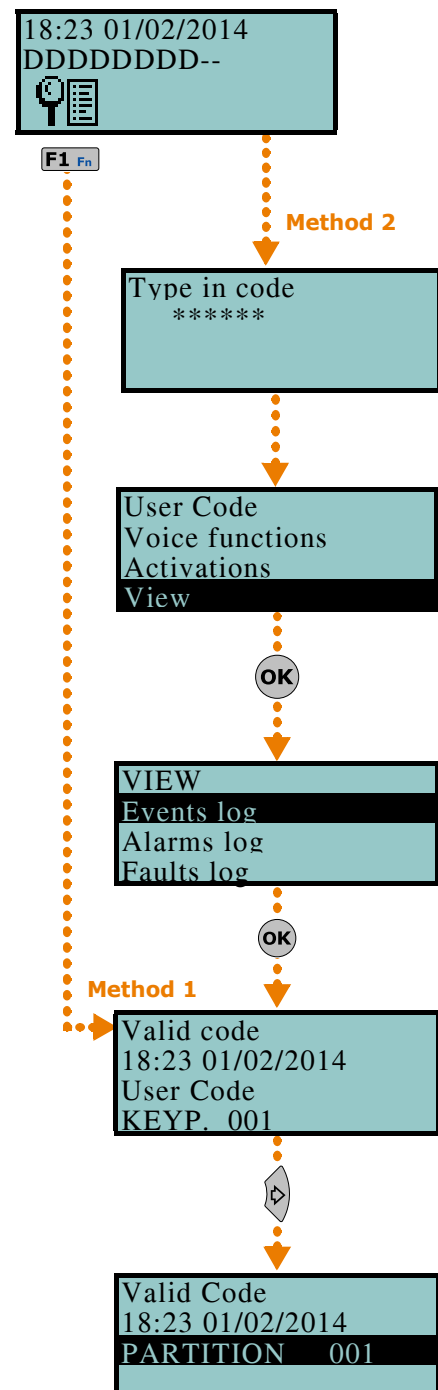

For some events, key allows you to view the partitions details. For example, the details of an "Arm" command will show the code and keypad concerned and, if you press , the list of partitions involved.



- Shortcut n.16 () accesses "View/NexusStatus":
 - 1° line: GSM network provider (Wind, Tim, Vodafone, etc.), on the left side and BUS connections on the right side of the string:
 - if nothing appears, it means that the Nexus/G is connected to the BUS
 - if the letter "G" appears, it means that the Nexus/G is connected to the BUS and that the GPRS service is available
 - if the letter "C" appears, it means that the Nexus/G is connected to the BUS and that a teleservice request (TCP connection) or SIA-IP event report is being sent
 - if "--" appears, it means that the Nexus is connected to the BUS
 - 2° line: GSM signal reception (value between 1 and 100)
 - 3° line: balance, at the last operation (expressed in the local currency)
 - 4° line: faults present - access the "View-Faults" section for details.

- Shortcut n.32 () accesses "View/System voltage"

- Shortcut n.33 () accesses "View/Zone status"

Use keys  and  to scroll the list of accessible zones. The display shows the following zone parameters:

- 1° line: zone description
- 2° line: zone status ("Standby", "Alarm", "Short", "Tamper"), its activation status ("un-bypassed" - capable of generating alarms, or "bypassed" - incapable of generating alarms)
- 3° line: various indications depending on the device type:
 - wireless zone; wireless signal reception level
 - level of smoke present in the smoke detection chamber of the Air2-FD100 smoke detector, expressed in mdB/m
- 4° line: level of contamination present in the smoke detection chamber of Air2-FD100 smoke detector (%)

It is advisable to clean the detector when the value exceeds 90%.

Note








- Shortcut n.36 () accesses "View/Faults"

Method 2

Access the "View" section of the User menu by means of a valid PIN. Follow the instructions described in **Method 1**.

Via Alien touch screen

It is possible to view the status of the system elements through the various section the user has access to:

- Access the "Intrusion" section by pressing the  button, enter the user code. The following sections will be available:
 - "Zones" - the zones are listed in this section along with their status icons (positioned to the left of each zone description):
 -  - green spot - standby status
 -  - red spot - alarm status
 -  - yellow triangle - fault/tamper
 Each zone is associated with two buttons, **ON** for activation and **OFF** for inhibition, and an icon which changes in accordance with the status:
 -  - activated/enabled
 -  - deactivated/disabled
 - "Events Log" - all the events saved to the log are displayed one at a time. However, the up/down keys will allow you to scroll the entire list of events. Each event shows the relative details and, where possible, allows you to view the partitions involved by means of the **PARTITIONS** button.
- Access the "System" section by pressing the  button, enter the user code. The following sections will be available:
 - "Faults" - this section allows you to view all the faults present on the system and, where possible, the fault details by means of the **DETAILS** button.
 - "Voltage" - this section allows you to view the control panel power-supply voltage.
 - "GSM info" - this section allows you to view the parameters of the Nexus GSM communicator.





















Via Web and AlienMobile

The web server and Alien Mobile application will allow you to view other system elements through the respective sections:

- **Partitions**
- **Zones**
- **Outputs**
- **Timers** (via Web server only)
- **Camera** (via Alien mobile application only)

Following is a table showing the meaning of the various icons positioned at the side of the description of the element displayed:

Table 14: **Viewing via web server and Alien mobile application**

Section		Icon			Section	Icon		
	Partitions/ Zones		Disarmed	Armed/Disarmed status of partition/zone			Activated	Output status
			Armed in Away mode				Deactivated	
			Armed in Stay mode				Activated	Timer status
			Armed in instant mode				Deactivated	
			Disarmed				Play	Streaming commands
		Standby		Stop				
		Alarm						
	Zones		Tamper or fault	Partition/Zone alarm status				
			An alarm or tamper event in memory					
			Zone shorted					
			Zone active	Zone activation status				
			Zone deactivated					

- **Events log** - first access the "Intrusion" section then the "Events log". A window will appear containing buttons which allow you to view the events, starting from the last. Each event shows the relative details and allows you to view the partitions involved by means of the **PARTITIONS** button.
- **System info** - the "System" section provides the following sub-sections:
 - "Faults list" - a window showing a list of the faults present on the system.
 - "Voltage" - this window allows you to view the control panel power-supply voltage.
 - "GSM info" - this window allows you to view the parameters of the Nexus GSM communicator.



Activating/Deactivating outputs








5-6

This section allows you to activate/deactivate manually the outputs the code is enabled to work on.

Via Keypad

Method 1


Activate the shortcuts associated with keys **F1 Fn**, ..., **F4** (shown on the display) with or without code entry:

- The shortcut assigned to "Output control" (shortcut n.21: ) allows you to view the "Outputs ON/OFF" section of the user menu where you can:
 - Use keys  and  to select the output you wish to activate/deactivate.
 - Press  to activate the selected output or  to deactivate it.
- The shortcut assigned to the "Activate outputs" operation (shortcut n.5: ) will activate the output when the respective button is pressed.
- The shortcut assigned to the "Deactiv. outputs" (shortcut n.6: ) will deactivate the output when the respective button is pressed.

Method 2



Access the "Outputs ON/OFF" section of the user menu by typing-in a valid PIN. Follow the instructions described in **Method 1**.

Via Alien touch screen

Access the "Commands" section by pressing the  button, then select the required sub-section:

- "Domotics" - accesses the outputs of the home automation system without the need of code entry.
- "Intrusion" - accesses the outputs of the intrusion control system after typing-in a valid user code.

Both sub-sections provides lists of the available outputs, each of which is associated with two buttons, **ON** for activation and **OFF** for deactivation, and an icon which changes in accordance with status:

-  - output activated
-  - output deactivated

Via Reader

Hold a valid digital key in the vicinity of the reader until the reader LEDs or display indicates "Activate outputs" (shortcut n.5) or "Deactiv. outputs" (shortcut n.6).

Over-the-phone

Type-in the PIN of a user code followed by "#" then press the key (from "0" to "9") which the installer has programmed to trigger "Activate outputs" (shortcut n.5) or "Deactiv. outputs" (shortcut n.6).



Via Wireless remote-control device


Push the respective button on the remote-control device and verify the outcome of the requested operation, as described in *paragraph 2-6-1 Air2-KF100 Wireless keyfobs*.

Via Web and AlienMobile

Access the "Commands" section.

This section provides a list of the control panel outputs. Each output is associated with two buttons:

- ON** to activate the output, when activated the corresponding icon becomes 
- OFF** to deactivate the output, when deactivated the corresponding icon becomes 

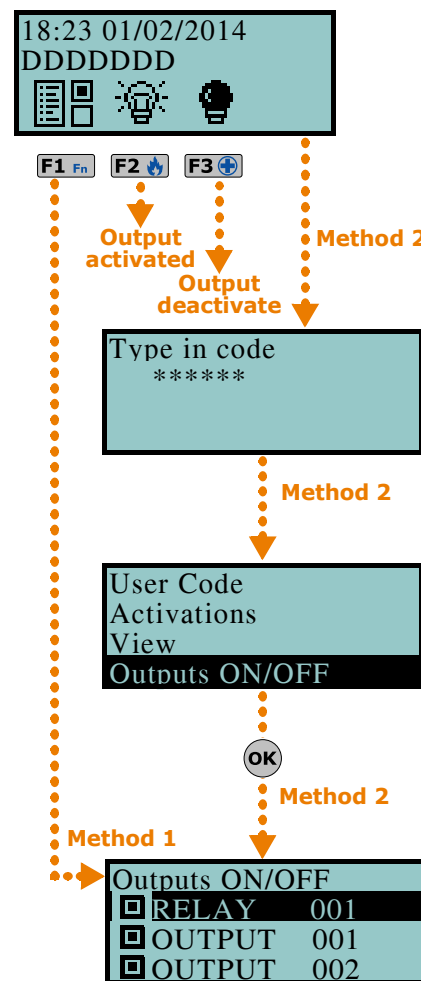


Change date and time






5-7

This option allows you to set the date and time in accordance with the selected format.

Via Keypad

Method 1

Activate the "Date/Time" shortcut (shortcut n.35 ) , associated with one of the keys **F1 Fn**, ..., **F4 Fn** shown on the display, with or without code entry, to access the user menu at the "Set date/time" section.

1. Use keys  and  to select the programming field you wish to change (hour, minutes, etc.).
2. Use keys  and  to make any changes in the selected field.
3. Press  to save the setting.


Method 2

Access the "Keypad date/time" section on the User menu by means of a valid PIN. Follow the instructions described in **Method 1**.

Via Alien touch screen

Access the "Settings" by pressing the  button, type-in a valid user code , then access the "Date/Time - Change PIN - Tel. Numbers" section.

This section allows you to access and change the date and time of the control panel clock. Changes can be made using the left/right and up/down scroll keys and confirmed by the **OK** key.

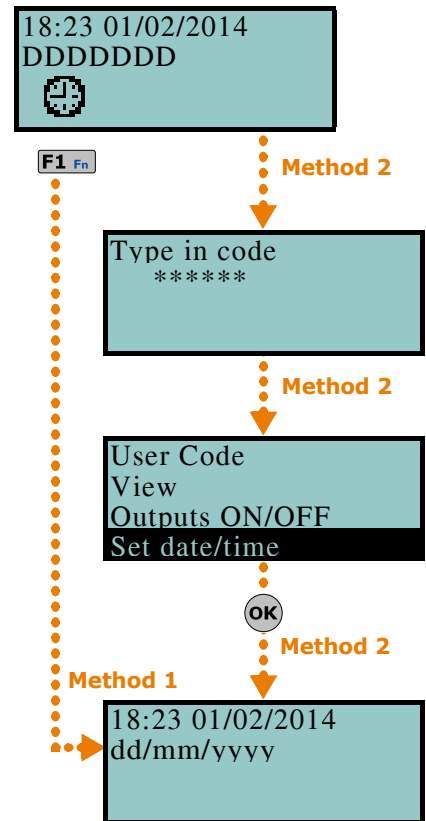

Keypad settings

5-8

This option allows you to configure the displays and buzzers of the keypads which access to the SmartLiving system.




The parameters which are available depend on the type of keypad.









- **Brightness** - for the adjustment of the brightness of the display backlight and key LEDs when any key is pressed (duration 20 seconds).
- **Standby brightness** - for the adjustment of the brightness of the display backlight and key LEDs when the keypad is in standby status.
- **Contrast** - for the adjustment of the black/white contrast.
- **Volume** - for the adjustment of the buzzer volume (3 levels available).
 - Off
 - Low volume
 - High volume
- **Keypad options:**
 - **Temperature off** - if enabled, the temperature value read by the built-in temperature sensor will not be shown (only on temperature-sensor equipped keypads).
 - **NoExitTimeSignal** - if enabled, the buzzer will not emit audible signals during partition Exit time.
 - **NOEntryTimeSignal** - if enabled, the buzzer will not emit audible signals during partition Entry time.
 - **Beep on output** - if enabled, the buzzer will emit audible signals during partition Exit time.
 - **Disable chime** - if enabled, the buzzer will not emit audible signals when a bell zone is violated.

These settings apply only to the keypad you are working on, and will be saved even in the event of panel shutdown.

Via Keypad

Method 1


Activate the shortcut assigned to "Keypad settings" (shortcut n.18: ) , associated with one of the following keys **F1** , ..., **F4**  (shown on the display), with or without code entry, to access the "Keypad settings" section of the user menu.

1. Use  and , followed by **OK**  to select the parameters to be programmed.
2. Use keys  and  to increase or decrease the value of the selected parameter. To activate the selected option press , to deactivate it press .
3. Press **OK**  to save.

Method 2

Access the "Keypad settings" section of the user menu by typing-in a valid code PIN. Follow the instructions described in **Method 1**.

Via Alien touch screen

Access the "Settings" section by pressing the button , type-in a valid user code in order to access the "Alien" section.

This section will allow you to view the firmware version of the keypad in use on the connected control panel and change the parameter settings of the keypad you are working on.


The settings will be saved even in the event of control-panel shutdown.

- **Transparency** - for the adjustment of the transparency effect
- **Brightness** - for the adjustment of screen brightness when touched (duration 45 seconds)
- **Standby brightness** - for the adjustment of screen brightness when the keypad is in standby status
- **Volume** - for the adjustment of buzzer loudness
- **Volume voice** - for the adjustment of the speaker loudness
- **Skin** - for the selection of one of the skins for the Alien touch screen
- **Delay photof.** - waiting time before the automatic startup of the photoframe application during standby status
- **Photo int.** - interval between the display of photos used by the photoframe application
- **Language** - for the selection of the language used by the Alien touch screen interface
- **Temperature adjustment** - for the adjustment of the temperature shown on the display
- **View partitions** - for the visualization of the operating status of the partitions on the bottom bar of the display
- **Exit time** - enables/disables the audible signal during exit time
- **Entry time** - enables/disables the audible signal during entry time
- **Bell** - enables/disables the audible signal for the bell function
- **Temperature** - enables/disables the visualization of the temperature on the display
- **Tamper** - enables/disables the device tamper function (Alien/G only)

If the SmartLiving control panel is in maintenance status, a list of the following parameters will be shown:

- **Keypad address**
- **Keypad address** - this is the address of the Alien keypad and its integrated reader
- **Tamper** - enables/disables the device tamper function (Alien/S only)

You can select the parameter by means of "+" and "-". To confirm changes and exit the section press **SAVE**.

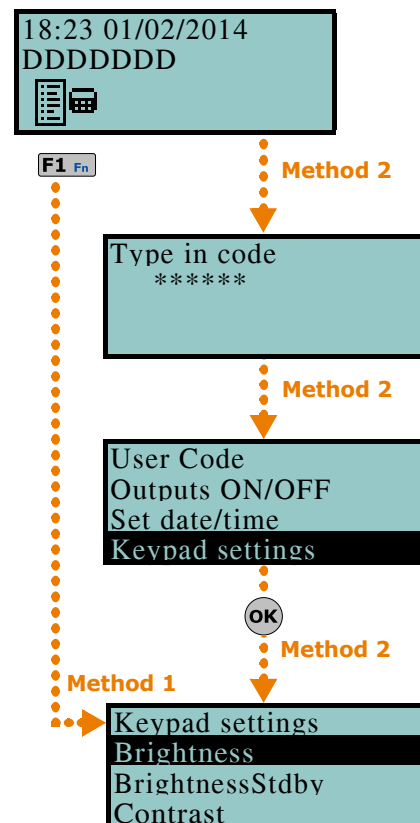

English is the default language of the Alien keypad.

Note

Change PIN

5-9

This section allows you to change the User Code PIN you used for access and also the PINs of other users with a lower rank in the system hierarchy (refer to *paragraph 2-5*)

User Codes).

In order to be EN50131 compliant, all PINs must have 6 figures.

Via Keypad


Method 1

Activate the shortcut assigned to the "Change PIN" (shortcut n.34: **3) and associated with one of the following keys F1 Fn, ..., F4 P0L (shown on the display), with or without code entry, to access the "Change PIN" section of the User Menu.

1. Use keys and followed by to select the user code you wish to change.
2. Type-in the new PIN (4, 5 or 6 digits) using keys 0 -, ..., 9 wxyz then press .
3. Type-in the new PIN again using keys 0 -, ..., 9 wxyz and press to save.

Method 2

Access the "Change PIN" section of the user menu by typing-in a valid code PIN. Follow the instructions described in Method 1.

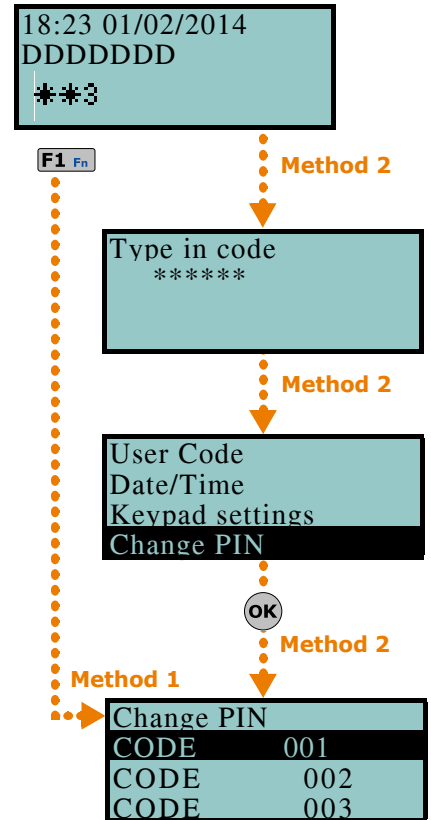

Via Alien touch screen

Access the "Settings" section by pressing , enter a valid user code, then go to "Date/Time - Change PIN - Tel. Numbers" section, then select "Tel.Numbers".

Select the code you desire from those available on the list. The next step is to change the code using the screen buttons, press **OK** to confirm.

Change telephone numbers

Users can change the contact numbers used by the dialer of the SmartLiving control panel.

Only contact numbers with at least one partition in common with the entered PIN and keypad in use will be shown.

Via Keypad

Access the phonebook:


1. Use keys and to select the required phone number then press ; each programming field accepts a 20 digit phone number.
2. Use keys and to select the field you wish to change, then use the number keys (1 .., etc.) to edit the number. The following characters are also accepted: "," (= 2 second pause), "*" and "#".
3. Press to confirm and exit.

Via Alien touch screen

Access the "Settings" section by pressing , enter a valid user code, then go to "Date/Time - Change PIN - Tel. Numbers", then to the "Tel. Numbers" section.

Select the telephone number you desire from those available on the list. The next step is to change the number using the screen buttons, press **OK** to confirm.

5-10

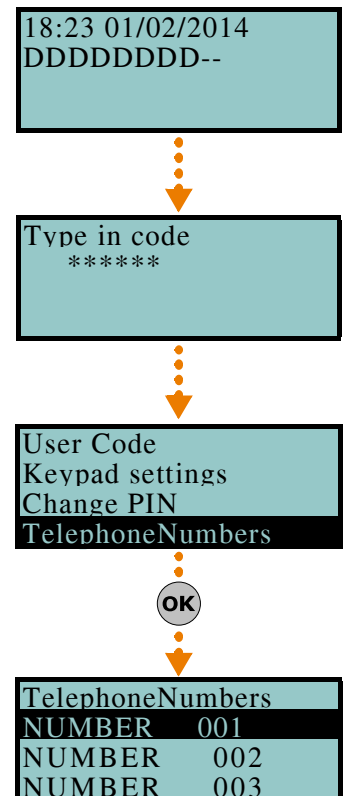

Teleservice request


5-11

This command sends a call to the installer company.

Your installer must enable control panel option "Num15ForTeleserv", otherwise this function will not be available.

Via Keypad


Method 1

Activate the shortcut assigned to the "Teleservice req." (shortcut n.8: .

Method 2

Access the "Teleservice request" section of the user menu by typing-in a valid code PIN.


Via Alien touch screen

Access the "Menu" section by pressing , type-in the user code and then access the "Actions" section.

This section contains a list of control panel commands which can be activated by pressing **ACTIVATE**, among them is the "Teleservice".


Via Reader

Hold a valid digital key in the vicinity of the reader until the reader LEDs or display indicates "Teleservice Request" (shortcut n.8).

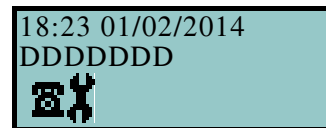


F1 Fn

Method 2

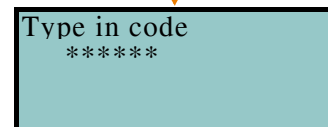

Method 2

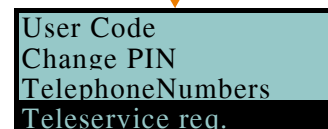

OK

Method 1

Service call activated

Overtime request

5-12


This operation can be carried out under the following conditions only.

- The partition concerned must be timer-controlled.
- The auto-arm option must be enabled (refer *paragraph 5-4 Activations*).

Each overtime request postpones the auto-arming operation by 30 minutes.

Via Keypad


Method 1

Activate the shortcut assigned to the "Overtime" (shortcut n.7: .

Method 2

Access the "Overtime req." section of the user menu by typing in a valid code PIN.

Via Alien touch screen

Access the "Menu" section by pressing , type-in the user code and then access the "Actions" section.

This section contains a list of control panel commands which can be activated by pressing **ACTIVATE**, among them is the "NEXUS".

Via Reader


Hold a valid digital key in the vicinity of the reader until the reader LEDs or display indicates "Overtime" (shortcut n.7).

Over-the-phone

Type-in the PIN of a user code followed by "#", then press the key (from "0" to "9") which the installer has programmed to activate "Overtime" (shortcut n.7).


Via Wireless remote-control device

Push the respective button on the remote-control device and verify the outcome of the requested operation, as described in *paragraph 2-6-1 Air2-KF100 Wireless keyfobs*.

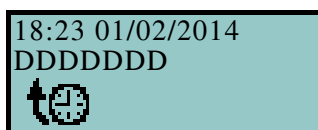


F1 Fn

Method 2

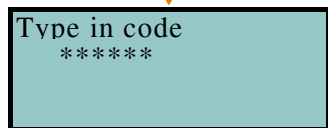

Method 2

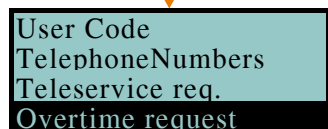

OK

Method 1

Auto-arming postponed

The "Thermostat" function, provided by JOY/MAX and Alien keypads, manages the heating or air-conditioning system in accordance with its setting.

- - **Summer/Cooling**: when the sensor detects that the temperature has risen above the value set by the user, the output connected to the air-conditioning system will activate (indicated on the display by).
- - **Winter/Heating**: when the sensor detects that the temperature has fallen below the value set by the user, the output connected to the heating system will activate (indicated on the display by).

This function provides 5 operating modes for the user to choose from:

- **Off** - the thermostat is off; the output associated with the heating or air-conditioning system is deactivated.
- **Manual** - the temperature set by the user is valid for 24 hours per day, for 7 days per week.
- **Daily** - the temperature set by the user is valid during the selected hours for 7 days per week.
- **Weekly** - the temperature set by the user is valid during the selected hours on specific days of the week.
- **Antifreeze** - this is a forced operation. If the temperature drops below 5°C, the output connected to the heating system will activate.

Via Keypad

Method 1

Activate the shortcut assigned to the "Thermostat" (shortcut n.37:), associated with one of the following keys **F1 Fn**, ..., **F4 Fn** (shown on the display), with or without code entry, to access the "Thermostat" section of the user menu.

1. Use the number keys to select the operating mode of the thermostat:
 - **1** ., - thermostat Off
 - **2** abc - "Manual"
 - **3** def - "Daily"
 - **4** ghi - "Weekly"
 - **5** jkl - "Antifreeze"

The display will show the:

- 1° line: operating mode of the thermostat and day of the week
- 2° line: pre-set temperature gauge and the "Summer/Winter" operating mode icon
- 3° line: temperature setting and operating hours
- 4° line: temperature reading and the status of the heating system/air-conditioning system (ON/OFF)

2. Select the operating mode ("Summer/Winter") of the thermostat using **6 mno**.
3. Select the temperature, using keys and .
4. Select the timeframe, using and .
5. Select the day of the week, using ***** and **#**.
6. Press **OK** to confirm and exit.


Method 2

Access the "Thermostat" section of the user menu by typing-in a valid code PIN. Follow the instructions described in **Method 1**.

Via Alien touch screen

Access the "Climate" section by pressing .

The "CLIMA" option will be displayed and the current operating mode of the thermostat. The 5 setting options will be shown below the "CLIMA" title.

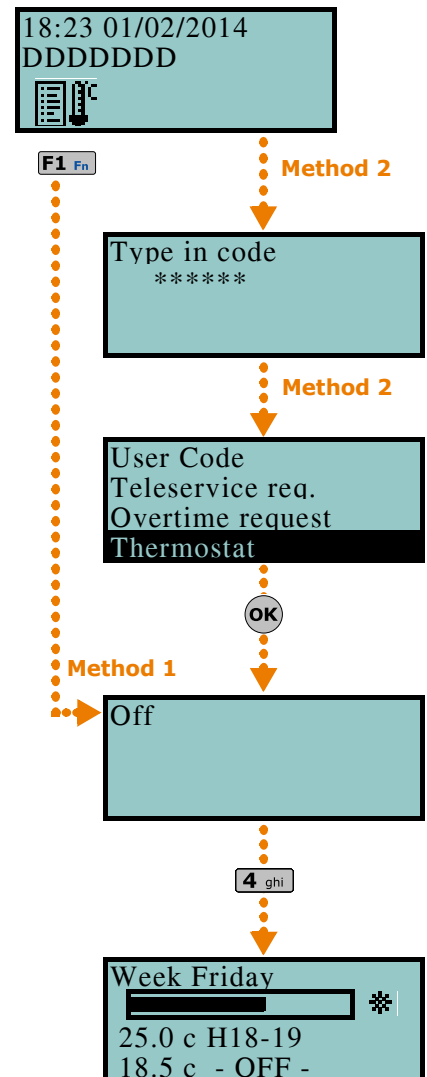

Select the button which corresponds to the section you require, then set the parameters of the selected operating mode. You can change the temperature using "+" and "-", and also the timeframe and day (where available) by means of the arrow keys.

Options for **Heat/Cool** operations can also be selected for the winter and summer operating modes.

The icons corresponding to the thermostat options are displayed of the upper bar on the home page.

Teleservice via Nexus 5-14

Requests for teleservice can be made over the GSM network by means of the "Nexus Teleserv." option.

This option allows the installer to carry out remote programming operations over the GPRS network.

This is a service provided by the installer company with the user's collaboration.

Note

User Code
Overtime request
Thermostat
Teleservice Nexus

Via Keypad

Access the "Nexus Teleserv." section of the user menu by typing-in a valid code PIN.

Via Alien touch screen

Access the "Menu" section by pressing , type-in the user code and then access the "Actions" section.

This section contains a list of control panel commands which can be activated by pressing **ACTIVATE**, among them is the "Nexus teleserv." option.

Codes 5-15












The user menu provides a section for the programming of the parameters of hierarchically lower user codes (refer to *paragraph 2-5 User Codes*).

The parameters which can be changed in this section are also available in other sub-sections.

Via Keypad


Access the "Codes" section of the user menu by typing-in a valid code PIN.

User Code
Thermostat
Teleservice Nexus
Codes

1. Use keys  and  followed by  to select the user code you wish to change.
 2. Use keys  and  followed by  to select the parameter you wish to change.
 3. Change the parameter then press  to save the changes.
- **Description:** edit field for the code description.
 - **Partitions** - select the partitions the user code is assigned to. Press , to enable the partition and  to disable it.
 - **Options** - use  and  to enable/disable the code options.
 - **Partition filter** - if this option is enabled, the code will be able to change the parameters only of codes with a lower rank in the system hierarchy whose partitions are amongst the partitions assigned to the code being programmed. For example, if a code is configured as "Master" with "Partition filter" and is assigned to partitions 1, 3, 5 and 7, it will be able to enable/disable or change the PIN of a "User" code assigned to partitions 1 and 5 but not the PIN of a "User" code assigned to partitions 1, 2, and 3.

- **Text menu and User menu** - the combination of these two options allows immediate visualization of the menu screens on the keypad displays after acceptance of a valid user PIN. Refer to the following table.

Case	Text menu	User menu	Description
A	Disabled	Enabled	Accesses the user-menu (shown as a list of operations the user is enabled to perform); at this point the user can scroll the list using and and select the required option.
B	Disabled	Disabled	Visualization of the user-icons associated with function keys F1 , ..., F4 ; at this point the user can press the required function key and activate the associated shortcut.
C	Enabled	Disabled	Shows the descriptions of the personalized user-icons associated with function keys. The shortcut descriptions will be shown instead of the shortcut icons, at this point the user can use and to scroll the list of shortcut descriptions and select the shortcut, which can be activated by means of the OK key.
D	Enabled	Enabled	The same as "C"

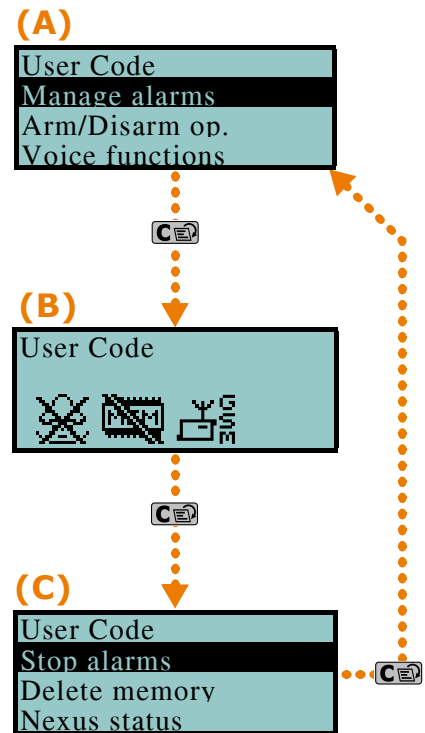

Note

In all methods of access (A, B or C), the key allows you to access/view the other cases via a circular buffer, see figure.





- **AnnounceShortcut** - if enabled on a voice capable keypad, the descriptions of all the shortcuts assigned to the code and associated with the number keys will be announced after acceptance of the entered PIN.
- **Remote access** - if enabled, the code PIN can be used to operate the system from any remote telephone.
If the code PIN is entered on a remote telephone keypad, only the shortcuts associated with keys 0 to 9 can be used to:
 - Arm/Disarm
 - Stop alarms
 - Clear call queue
 - Delete memory
 - Activate output
 - Deactiv. outputs
 - Listen-in
 - Arming status
 Any other type of command will have no effect.
- **Patrol** - if enabled, the code will be able to disable the system for the pre-set "Patrol time".
- **Fixed length** - if enabled, after typing in a PIN and without pressing the **OK** key, the user will be able to activate the shortcut associated with function key "F12", programmed via the "F1/4KeyShortcuts", described later.
If this shortcut is number 1 ("Arm/disarm") and all the partitions assigned to the user code in question are disarmed, the command will arm them, otherwise it will disarm them.
A user code with this option enabled has access to its own menu only after pressing the **OK** key and PIN entry.
- **F1/4KeyShortcuts** - this section allows you to configure up to 12 shortcuts associated with keys **F1** , ..., **F4** . After valid PIN entry the keypad will show the icons that correspond to keys **F1** , ..., **F4** and which are associated with these shortcuts. The respective shortcut will activate when the corresponding key is pressed.
- **0/9 Key shortcuts** - this section allows you to configure up to 10 shortcuts associated with keys **0** , ..., **9** . After PIN acceptance, the code user can activate the shortcut by pressing the respective number key.

To assign the shortcuts to the function keys, work through the following steps.

1. Use keys and to select the key you wish to associate with the shortcut then press **OK**.
2. Press **OK** then, using keys and , select from the "Type" list the shortcut you wish to associate with the function key.

3. Press **OK** to confirm and exit.
 4. If the shortcut is associated with "Arm/Disarm" operations, the application will ask you to select a scenario. If the associated shortcut is "Activate output" or "Deactiv. output", the application will ask you to select the output.
- **ActivatableOutputs** - this section allows the user to enable/disable the outputs the code is allowed to control manually:

User menu, Outputs ON/OFF **OK**.

1. Use keys  and  to select the desired output.
 2. Use keys  and  to enable/disable manual control of the output for the code concerned.
 3. Press **OK** to confirm and exit.
- **Timers** - this section allows you to assign a timer to the code. The code will be operative only at the pre-set times.
 - **Type** - this section allows you to assign a level (rank) in the system hierarchy to the selected code.
 - **Enablements** - this section allows you to enable/disable access to the various sections of the user menu.
The programming steps are identical to those of "Outputs ON/OFF".

Listen-in 5-16

This function can be activated over-the-phone only.

Users communicating with the control panel over-the-phone can activate the Listen-in function and eavesdrop on the protected premises. This is made possible by the microphones on voice-capable keypads which have at least one partition in common with the entered telephone code.



Shortcut n.10 must be assigned (by your installer) to one of the number keys relating to the code that generates this operation.

Over-the-phone

Type-in the PIN of a user code followed by "#", then press the key (from "0" to "9") which the installer has programmed to activate "Listen-in" (shortcut n.10). The control panel will open a listen-in channel between the users telephone and the first voice-capable keypad with at least one partition on common with the entered code. During the listen-in phase, the user can open a voice-communication channel with another keypad by pressing the number key which corresponds to the address of the selected keypad. Also in this case, the selected keypad must have at least one partition in common with the entered code.

Press "*", to end the listen-in phase and step back to the voice-announced Shortcut menu.



Partition status enquiry 5-17

This function can be activated over-the-phone only.

The Partition status enquiry function allows users to listen to voice announcements regarding of the armed/disarmed status of the partitions during telephone communications with the control panel, or by activating the corresponding shortcut from a voice-capable keypad. The control panel will announce the armed/disarmed status of the partitions the entered PIN is assigned to.

If you activate this shortcut from a keypad, the control panel will announce the armed/disarmed status of the partitions the entered PIN is assigned to, regardless of the partitions assigned to the keypad.

Note

The user code must be enabled (by the installer) to activate shortcut n.17 via keys **F1** , ..., **F4**  or the number keys relative to the code.



Over-the-phone

Type-in the PIN of a user code followed by "#" then press the key (from "0" to "9") which the installer has programmed to activate "Arming status" (shortcut n.17). The control panel will announce (in order) the descriptions of the partitions the entered PIN is assigned to and their current armed/disarmed status.

Press “*”, to step back to the main menu to listen to all the voice announcements relating to the shortcuts assigned to the entered PIN.

Via Keypad

After entering a valid user-code PIN, press the key which is assigned to the “Arming status” shortcut (shortcut n.17). The control panel will announce (in order) the descriptions of the partitions the entered PIN is assigned to and their current armed/disarmed status.

Commands over-the-phone 5-18

Panel to user calls 5-18-1

Your installer will instruct you as to which events generate voice calls. Event report calls will be sent to the programmed contact numbers of your choice when the event occurs and, in most cases, also when it ends.

During the call, the call recipient can:

- press “*” to go to the next message or, if there is only one message, end the successful call.
- Type-in a valid PIN followed by “#” and access the customized shortcuts assigned to the code. The control panel will activate the voice guide which will announce the available shortcuts and the number keys to press. The respective shortcut will activate when the key indicated by the voice guide is pressed.

User to panel calls 5-18-2

If the “Answerphone” function (refer to *paragraph 5-4 Activations*) is enabled, users can call the control panel from any remote telephone and send commands to the system (refer to *paragraph 3-2 Shortcut with code*) and/or activate Listen-in sessions (refer to *paragraph 5-16 Listen-in*) in the following way.

1. Dial the control panel telephone number.
2. Allow the phone to ring for the pre-established number of rings. The control panel will answer and will play message n.216.
3. Type in your PIN followed by “#”.
4. The control panel will activate the voice function which will announce the available shortcuts and the number keys to press.
5. As soon as the selected number is pressed on the telephone keypad, the control panel will activate the corresponding shortcut.

If the system is equipped with a Nexus dialer, the user can operate on the control panel via voice call to the SIM card of the Nexus. If duly configured (by the installer), the user will receive feedback (SMS text message or ring) from the Nexus relating to successfully implemented commands.

SMS text message to the user 5-18-3

If the system is equipped with a duly programmed Nexus dialer, the user may receive SMS text messages signaling that events have occurred.

If an event (which has been duly configured by the installer) occurs or restores, the control panel will send notification to the programmed users via SMS.

SMS text message to the control panel 5-18-4

If the system is equipped with a duly programmed Nexus dialer, the user can operate on the control panel by sending SMS text commands to SIM card of the Nexus.

Users who wish to activate a command via SMS text must enter the command details as follows:

<xxxxxx> <SMS Text>

where:

- <xxxxxx> stands for the PIN of a control panel user
- a blank space must be keyed in after PIN entry
- <SMS Text> which is the command identifier - this parameter must be provided by your installer.

If duly configured (by the installer), the user will receive feedback (SMS text message or ring) from the Nexus relating to successfully implemented commands.

The SmartLiving control panel is programmed with five predefined default commands:

SMS TEXT AT DEFAULT

- Balance enquiry relating to the SIM card of the Nexus

If the following SMS text message is sent:

<xxxxxx> CREDIT BALANCE

where <xxxxxx> stands for the user's PIN - the user will receive an SMS text message indicating the remaining credit (balance).

- Status enquiry relating to the Nexus

If the following SMS text message is sent:

<xxxxxx> STATUS

where <xxxxxx> stands for the user-access PIN - the user will receive an SMS text message indicating the:

- device name and firmware revision
- GSM network provider
- GSM signal reception level
- device tamper status
- BUS status
- Balance (remaining credit)

- Inhibition (using the "EXC" or "ESC" command) or activation (using the "INC" command) of the control panel zones

If the following SMS text message is sent:

<xxxxxx> EXC <zone description>

where:

- <xxxxxx> is the PIN of a control-panel user coded, followed by a blank space
- "EXC" (or "ESC" or "INC") is the command to be implemented on the zone, followed by a space
- <zone description> is the name zone to be inhibited or activated
-

Alien function keys 5-19

The Alien touch screen user interface provides a function key menu similar to that of the web server of the SmartLAN/G board and the Alien Mobile application. The keys are visualized as icons which, when tapped, activate the respective functions on the Alien touch screen and Alien Mobile application or, in the case of the web server, when clicked by means of the mouse.

The following table provides a description of the function keys displayed on the home page. The home page of the Alien/S, coincides with the page that is displayed when the user has not activated any function or application, or has simply not touched the display for at least 45 seconds. The keys coincide with those present in the section on the right-hand side of the display of the Alien/G.

Some of these keys activate their assigned functions after entry of a user code that opens a session, which is closed by pressing "Logout" button on the top right of the Home page or after 45 seconds inactivity on the keypad.

In the case of the web browser and the Alien Mobile application, this page is displayed after the user access is achieved via a valid login operation.

Table 15: Alien menu



Icon/key		Function		
		Alien keypad	Web browser	AlienMobile
	Scenarios	Accesses the section containing the list of programmed scenarios which can be activated. <i>Refer to paragraph 5-2 Arming and disarming partitions.</i>		
		No code required for access. Depending on programming, the activation of scenarios may require code entry.	/	Available for AlienMobile+ only
	Com- mands	Accesses a section containing the list of outputs which can be activated. <i>Refer to paragraph 5-6 Activating/Deactivating outputs.</i>		
		The outputs are divided in two sections: • "Domotic" outputs for the management of home automation No code requested • "Intrusion" outputs programmed through the intrusion-control system User code required.	/	Available for AlienMobile+ only

Table 15: Alien menu











Icon/key	Function			
	Alien keypad	Web browser	AlienMobile	
	Intrusion	<p>Accesses a section which allows you, where possible, to view and change the status of parts of the intrusion-control system:</p> <ul style="list-style-type: none"> • "Partitions" - where it is possible to view and change the status of the partitions. • "Zones" - where it is possible to view and change the status of the zones. • "Events Log" - where it is possible to view the events saved to the events memory (after indicating the number of events you wish to view). <p>Refer to paragraphs 5-1, 5-2 and 5-5.</p>		
		User code required.	<ul style="list-style-type: none"> • The "Partitions" section allows you to reset the partition alarm memory. • The "Events log" section allows you to indicate the number of events you wish. 	
	Menu	<p>Accesses two sections:</p> <ul style="list-style-type: none"> • "Actions" - containing a list of the control panel commands in the event of alarm or tamper events or requests for teleservice and overtime. Refer to paragraphs 5-1, 5-11, 5-12 and 5-14. • "Activations" - where it is possible to view and enable the activations described in <i>paragraph 5-4 Activations</i>. <p>User code required.</p>	Not present	Not present
	Timer	Not present	<p>Accesses a section where it is possible to view the timers and their status.</p> <p>Refer to <i>paragraph 5-5 View</i>.</p>	Not present
	Camera	Not present	Not present	<p>Accesses a section which allows you to view in real-time the video recording made the camera configured in the "Settings" section of the Alien Mobile application.</p> <p>Refer to <i>paragraph 5-5 View</i>.</p> <p>Available for AlienMobile+ only</p>
	Settings	<p>Accesses the sections for the settings of the keypad and the SmartLiving control panel:</p> <ul style="list-style-type: none"> • "Alien" - provides information regarding the setting-up of the Alien touch screen interface you are using. It shows the model, firmware revision and the address of the keypad and built-in reader. Furthermore, it allows you to modify the screen by means of the + and - keys. Refer to <i>paragraph 5-8 Keypad settings</i>. • "Date/Time", "Change PIN", "Tel.Numbers" - these sections allow you to change the date and time on the control panel clock, the user PINs and the contact phone numbers saved to the memory. Refer to paragraphs 5-7, 5-9 and 5-10. • "Installer" - this section allows access to the installer menu after entry of a valid installer PIN, thus putting the control panel in programming mode. <p>User code required. Installer code required for the "Installer".</p>	<p>Accesses a section where it is possible to:</p> <ul style="list-style-type: none"> • select the language of the web server interface • upgrade the web server interface • open an online guide 	<p>Accesses a section where it is possible to:</p> <ul style="list-style-type: none"> • change the settings of the AlienMobile application • set up a connection with the SmartLiving control panel to be monitored • Set the IP address of the camera viewable in the "Camera" section
	System	<p>Accesses a section where it is possible to view the system parts:</p> <ul style="list-style-type: none"> • List of ongoing faults • Power-supply voltage of the control panel • Information relating the GSM communications board <p>Refer to <i>paragraph 5-5 View</i>.</p>		
		User code required.	/	Available for AlienMobile+ only
	Apps	<p>Accesses the applications of the Alien touch screen interface:</p> <ul style="list-style-type: none"> • "Photo frame" - application that starts a slideshow of the images contained in the inserted SD-card (see <i>paragraph 5-22 Photo frame</i>). • "Voice functions" accesses a section where it is possible to activate the control panel voice board functions or the "Intercom" function. Refer to <i>paragraph 5-3 Voice box and intercom functions</i>. <p>No code requested</p>	Not present	Not present
	Twitter	Not present	Link to the Twitter page of INIM Electronics.	

Table 15: Alien menu

Icon/key		Function		
		Alien keypad	Web browser	AlienMobile
	Climate	Accesses the thermostat functions section Refer to <i>paragraph 5-13 Thermostat</i> . No code requested	Not present	Not present
	Facebook	Not present	Link to the Facebook page of INIM Electronics	

Using the SmartLAN/G 5-20

e-mail 5-20-1

The event-related e-mail sent to the user via the SmartLAN/G board must be programmed entirely by the installer.

Below is an example of an e-mail associated with a "Valid Code" event.

Table 16: E-mail parameters

Option	Example	
Subject	SmartLiving control panel [Valid code]	Text, edited by the installer, associated with the respective event (in square brackets).
Sender	SmartLAN@inim.biz	Parameters set by the installer
Recipient	User1@inim.biz, User2@inim.biz	
Message text	----- 2/1/2014 18:23:00 Valid code CODE 001 KEYP. 005 [PARTITION 001] -----	The first part of the e-mail shows the date and time of the event (when saved to the events log) and any relative details.
	Access with valid code entry saved to log.	Optional text Link to an Internet website or IP address (if applicable).
	http://www.nesscorporation.com	
Attachment	map.pdf	Document/file sent with the e-mail

E-mail client

File Modify View Go Message Tools ?

Download mail Write Address book Reply Reply to all

Subject: SmartLiving control panel [Valid code]
From: SmartLAN@nesscorporation.com
To: user1@ , user2@

 01/02/2014 18:23:00
 Valid code
 CODE 001
 KEYPAD 005
 [PART. 001]

 User granted.

Attach: map.pdf

Access to and use of the Web interface 5-20-2

The security of the connection with the computer is guaranteed by integrated cryptography. The security of the connection of mobile-phone devices is guaranteed by the SSL protocol used for HTTPS connections.

Following is a description of the method of access to the interface which allows remote management of the control panel.

LOGIN

1. Type in the IP address on the navigation bar of the browser.
If you wish to use HTTPS protocol, simply add the letter "s" to the "http" prefix (for example: "http://192.168.1.92" would become "https://192.168.1.92").
2. At this point the control panel will display the access page template which requires the following data (provided by the installer):
 - Username
 - Password
 - Code (user code valid for the control panel)
If the installer code is entered, it will be accepted only if the Teleservice function is enabled (*paragraph 5-4 Activations*).
3. Press "Login" to start the connection.

Access will be denied in the following cases:

- the entered PIN is not recognized
- the entered PIN does not belong to any partition
- the entered PIN is not enabled
- the entered PIN is associated with a timer and the timer concerned is OFF.
- The "Internet Access" option from the Activations section in the User menu is not enabled

If the connection is successful, the browser will show the home page of the web-server interface and the main menu. The menu provides the function keys listed in *Table 15: Alien menu*.

In addition to the keys on the home page, the following buttons will help you navigate through the various sections:

- **HOME** - positioned to the right on the lower bar, takes you directly to the home page
- **MENU** - positioned to the right on the lower bar, opens a list of buttons/links to the sections of the web interface and also the logout button (in the top right corner of the screen)
- **LOGOUT** - present in the "MENU" list, effects user logout operations and returns to the login form fields.

The scenario that is currently active on the control panel is displayed on the left side of the lower bar of every section.

MENU

NAVIGATION

SCENARIO

Using AlienMobile application

5-21

The Alien Mobile application may be utilized by SmartLiving control panel users who have Internet connection.

Once the application has been downloaded to the tablet or smartphone, the user can enter the connection parameters (provided by the installer), in the "Settings - Control panel" section of the application (refer to *Table 15: Alien menu*).

- IP address and connection port of the control panel
- User details (username, password and user code)
- Type of SmartLAN board used for web access
- Encryption data, if present

If you wish, you can enter a password in "Settings - General" section of the application (refer to *Table 15: Alien menu*), that will be requested each time the application starts (the "Request password" option must be enabled).

Once you have started the application and entered the password, the home page will show the main menu with the function keys listed in *Table 15: Alien menu*.

CONNECTING TO THE INTERNET

PASSWORD

MENU

Table 17: AlienMobile - home page

A	Type of SmartLiving control panel and FW revision.	
B	Mobile application connection-type icon: <ul style="list-style-type: none"> • Mobile data • WiFi 	
C	Section for the active functions, with access buttons to the application and the SmartLiving system. The home page of the Alien/G (shown in the figure) shows the function buttons indicated in <i>Table 15: Alien menu</i> .	
D	String showing the arming status of the control panel, in accordance with the active scenario.	
E	If you are inside a section, this field will show the following buttons: <ul style="list-style-type: none"> • Back This button allows you to step back to the previous level of the active function. • Home Button, present only on the Alien/S model, which allows you to go directly to the home page. 	

Photo frame

5-22



"Photo frame" is an Alien keypad application that plays a slideshow of images.

The image files must be stored in the folder "images" under root on the micro SD card which is inserted in the appropriate slot on the Alien keypad. Visualization image file format: JPG, GIF and BMP.

For optimum visualization, it is advisable to keep the size of each file below 500 kbytes.

Note

There are two ways of starting Photo frame:

- From the Alien keypad - access the "Apps" section by pressing the button , then press the "Photo frame" button.
- Automatically, if the value set for the "Delay photo" parameter is different from "Disabled".
In order to change this parameter and others of the Alien keypad and the application, access the "Settings" section by pressing the button , type-in a user code and then access the "Alien" section (see *paragraph 5-8 Keypad settings*).

The slideshow can be stopped by simply tapping the screen, which then returns to the home page.

TECHNICAL TERMINOLOGY AND GLOSSARY

These are 4, 5 or 6 digit PINs which allow the building occupants (users) to access the system. Each code can be programmed to control specific functions only, and to operate the system to suit the requirements of the Main user.

Code types

- **Installer code:** assigned to the installer of the security system
- **User code:** assigned to the end-users of the system

Detection of non-authorized entry into the protected building. More specifically, activation of alarm signaling devices (detectors).

In the event of:

- Zone Alarm
- terminal tamper
- open panel or dislodged panel
- peripheral tamper (keypads, expansions, readers)
- peripheral loss (keypads, expansions, readers)
- false key

The red LEDs on the system keypads and readers go On each time one of the previously-mentioned events occur. This visual warning signal is held even after the event ends (alarm memory), in order to warn you that an event occurred during your absence. This visual warning signal will be held until you clear the event memory (refer to Delete Memory).

This is a private service that monitors premises protected by intrusion control systems equipped with digital or voice dialers.

Alarm Receiving Centres receive alarm reports from monitored systems and take all the necessary actions to protect the occupants of the protected premises.

The "Answerphone" function, if enabled by the user, allows the control panel to answer incoming calls after a pre-set number of rings. The control panel will pick-up and play the recorded answer message.

During the call, the recipient can type-in a valid PIN (enabled for over-the-phone control) and access the authorized functions.

User operations on one or more partitions. These generally indicate also the status of the partitions. Under normal circumstances, the zones of armed partitions can generate alarms. Under normal circumstances, the zones of disarmed partitions cannot generate alarms. The system generates tamper alarms even when partitions are disarmed.

You can enable/disable the Auto-arm function on each separate partition.

If the auto-arm option is enabled on a timer-controlled partition, the partition will arm/disarm in accordance with the ON/OFF settings of the timer.

This is the secondary power source of the system. If primary (230 Vac) power failure occurs, the battery will take over.

A list of outgoing event-associated calls the control panel must send to programmed contact numbers.

Enabled users can clear the call queue manually.

Violation of a zone with this configuration will not generate an alarm but will trigger the associated Timer (Entry time). If the user does not disarm the partition/s within the set "Entry time", the system will generate an alarm.

For example, the zone that monitors the main door of a building is usually configured as a Delayed Entry Zone, in order to give building occupants time to enter the building and disarm the partition without generating an alarm.

Violation of a zone with this configuration will not generate an alarm but will trigger the associated Timer (refer to Exit time).

For example, the zone that monitors the main door of a residence or building is usually configured as a delayed exit zone, in order to give occupants time to leave the partition after an arming operation. If the user does not leave the zone within the set "Exit time", the system will generate an alarm.

ACCESS CODES

ALARM

ALARM OR TAMPER MEMORY

ALARM RECEIVING CENTRE (ARC)

ANSWERPHONE

ARM/DISARM

AUTO-ARM

BACKUP BATTERY

CALL QUEUE

DELAYED ENTRY ZONE

DELAYED EXIT ZONE

This is an explicit user-command which ends signaling on the red keypad/reader LEDs of the following events:

- Zone Alarm
- terminal tamper
- open panel or dislodged panel
- peripheral tamper (keypads, expansions, readers)
- peripheral loss (keypads, expansions, readers)
- false key

If you delete the alarm/tamper memory, the visual signals on the red reader/keypad LEDs will clear.

This device allows the control panel to send report calls to Alarm Receiving centres (ARC). SmartLiving control panels provide a built-in digital dialer which supports all the most widely used protocols.

The time (expressed in minutes or seconds) that the system allows the user to disarm the partition after zone violation. If the system is not disarmed within the set time it will generate an alarm.

Each partition can be programmed with its own Entry time.

An operative status recognized by the system.

For example: detector alarm, mains failure, blown fuse, user-code recognition, etc., are all events recognized by the control panel.

Each event (e.g. mains failure) can be associated with an activation event (when the event occurs) and a restoral event (when the event ends).

Each event can be programmed to generate the following actions:

- activation of one or more outputs
- transmission of one or more e-mails
- send one or more SMS messages
- activation of one or more voice calls
- activation of one or more digital calls

This is the non-volatile portion of the memory the panels saves events to. The events are saved in chronological order with the following details:

- event description - with details regarding new events and restorals
- information regarding the user or the cause of event
- event location
- event date and time

The events log can be viewed by the system users and the installer.

Partition events (zone alarms, partition alarms, arm/disarm operations, recognized codes and keys, etc.) can be viewed by users with at least one partition in common with the event element.

For example, if a user arms several partitions from a keypad, the events log will show:

- description of the event - "Arm request"
- description of the code and partitions involved
- description (label) of the keypad involved
- date and time of the request

A short period (expressed in minutes or seconds) during which the user must disarm the partition after violation (for example, after opening the front door) otherwise the system will generate an alarm.

Each partition can be programmed with its own Exit time.

These boards can be used to increase the number of terminals (zones or outputs) and/or the size of the system (in order to extend it over a larger area). Expansion boards can be connected to the system via the I-BUS.

A condition which indicates that a system component is not working properly.

Some faults can jeopardize the performance of the entire system. Mains failure (230V a.c.), telephone line-down and low battery are typical faults.

A device which allows the control panel to make telephone calls over the GSM network and also allows users to interact with the control panel over-the-phone or by means of SMS text messages.

This is the two-way communication line (4 wires only) which connects the peripheral devices (keypads, readers, expansions, etc.) to the control panel.

The 4 easily identifiable wires, on the control panel motherboard and on the expansions, are:

- "+" power 12 Volt
- "D" data
- "S" data
- "-" Ground

A bypassed (disabled) zone cannot generate alarms. Activation/Deactivation of zones can be carried out manually by users or, under certain circumstances, automatically by the control panel.

The Installer code is generally a 4, 5 or 6 digit PIN that allows the installer to access the system Programming Menu either from a keypad or via the respective software programme, on condition that all the system partitions are disarmed.

DELETE ALARM/TAMPER MEMORY

DIGITAL DIALER

ENTRY TIME (OR ENTRY DELAY)

EVENT

EVENTS LOG (OR EVENTS MEMORY)

EXIT TIME (OR EXIT DELAY)

EXPANSION BOARDS

FAULT

GSM DIALER

I-BUS

INHIBITION - DEACTIVATION OF A ZONE

INSTALLER CODE

List of system functions and respective parameters accessed via keypad.

This menu allows the installer to program, check and change nearly all of the system parameters. The installer menu can be accessed from any keypad after entry of a valid installer PIN, and on condition that all the system partitions are disarmed, or can be accessed via a computer equipped with the SmartLeague software.

A zone that monitors the inside of the protected building.

For example, the interior zones of a n office building are the zones that monitor offices and entrance points.

If a partition that a zone belongs to is armed in Stay mode, it will be unable to generate alarms.

A portable control device (card or keyfob) which allows the authorized user to access the system. The key must be held in the vicinity of the reader in such a way to allow the system to read it and permit access to authorized operations.

Each key is programmed with:

- A random code selected from over 4 billion possible combinations.
- A label (usually the name of the user).
- The partitions it controls (arms, disarms, etc.).
- A group of pre-set parameters which allow the key user to operate the system in accordance with the authorized access level (for example, a key can be programmed to arm or disarm the system only at certain times of the day).

This device allows users to access and control the system . Keypads can be connected to the system via the I-BUS.

The keypad allows users to access and control the partitions which are common to both the code and keypad in use. The user can arm/disarm partitions, view the status of the zones, stop visual and audible signaling devices.

A generic magnetic-contact is a detector/sensor based on an magnet which, when placed near the sensor, provokes the mechanical closure of an electrical contact.

An electrical output point connected to a signaling or control device activated/deactivated by the control panel in response to programmed events.

Signaling that may be associated with a state of emergency perceived by the user and signaled to the intrusion control panel by means of a button or the activation of a shortcut.

This type of signaling generates an event which activates the programmed outputs and calls. This type of signaling does not activate the red LEDs on the keypads and readers nor is it visualized on the keypad displays.

A group of zones.

A partition identifies a group of zones that belong to a spatial or logical portion of the protected premises. For example, a partition may comprise all the zones that protect the downstairs partition of a house (spatial partition), or all the entrances of an office building (logical partition).

This refers to the status of a partition as requested by the user.

The user can carry out the following operations.

- **Disarm** - this operation disables the partition completely. In this way, none of the zones belonging to the partition can generate alarms.
- **Away mode** - this operation enables the interior and perimeter zones of the partition. In this way, all of the zones of the partition can generate alarms.
- **Stay mode** - this operation enables only the perimeter zones of the partition. In this way, only the perimeter zones of the partition can generate alarms.
- **Instant mode** - this operation enables the partition perimeter zones only and annuls delays. In this way, violation of the perimeter zones of the partition will generate instant alarms.
- **Hold** - this operation forces the partition to hold its current status.

A periodic inspection of the protected premises carried out by authorized security staff.

A zone that monitors the entrance points of the protected building.

Perimeter zones are usually direct entrance points such as doors and windows. For example, the front door of an apartment and windows that allow access from outside.

Devices connected to the control panel via the I-BUS.

SmartLiving control panels manage the following peripherals:

- Keypads (Joy, nCode, cCode, Alien)
- Proximity Readers (nBy)
- Expansions (Flex5)
- Transceiver (Air2-BS100)
- Sounderflashers (Ivy)
- Isolators (IB100)
- GSM dialer (Nexus)

The period (expressed in minutes) before an automatic arming operation.

For example, if a partition is set to arm automatically at 10:30 with a Pre-arm time of 5 minutes, all the partition keypads and readers will initiate an audible countdown at 10:25 in order to warn users of the forthcoming arming operation.

Each partition can be programmed with its own Pre-arm time.

The installation site.

Identifies the building or part protected by the intrusion control system, generally, a house or office.

INSTALLER MENU

INTERIOR ZONE

KEY

KEYPAD

MAGNETIC CONTACT

OUTPUT

PANIC

PARTITION

**PARTITION ARM/
DISARM OPERATIONS**

PATROL

PERIMETER ZONE

PERIPHERALS

PRE-ARM TIME

PREMISES

Under normal circumstances, the mains power supply (230Vac) 50 Hz (110V a.c. 60Hz in some countries).

Usually connected to a switching power supply or transformer (depending on the model) that provides the stabilized voltage to the system and the charge source to the batteries.

This device allows users to access and control the system. The system readers are connected to the control panel via the I-BUS.

The readers allow users to arm/disarm the partitions which are common to both the reader and key in use (refer to Shortcuts). The key (TAG) must be held in the vicinity of the reader in such a way to allow the system to read it and permit access to authorized operations. Although readers provide a more limited access to the system, they are the easiest way of carrying out day-to-day operations (arm, disarm, etc.).

A pre-set arming configuration which applies various operating modes to the system partitions.

The shortcuts allow direct access to the user menu sections and various operations which normally require several steps inside the user menu.

Optical smoke detectors are equipped with sampling chambers (based on light scattering mass - Tyndall effect). They are capable of sensing the presence of smoke particles and thus detecting a fire in its early stages.

These detectors have low power absorption during standby. The current absorption increases during alarm status and thus signals the danger of fire to the control panel.

The "supervision time" is the interval during which the wireless-system devices (in general wireless detectors in permanent placements) must signal to the control panel that they are operating in the network. If a wireless device fails to signal before the "supervision time" expires, it will be classified as "Lost" and the control panel will trigger a "peripheral-loss" fault event.

Detection of a serious condition that jeopardizes the operating capacity of the device concerned and thus puts the system at risk.

Tamper conditions are detected by tamper switches connected to the system zones, keypads, readers, expansions and control panel. Generally, these events are triggered by system violation such as unauthorized opening of a keypad cover.

These are calls sent to programmed contact numbers when specific events start and end (restoral).

This is a service provided by the installer company with the user's collaboration. The installer connects to the control panel over-the-phone or via a GPRS or Internet connection and, in this way, can check and/or change the control panel programming data.

A zone with this attribute cannot generate alarms (activate audible and visual signaling devices). However, any alarm events that occur will be saved to the events memory.

If zones are not operating properly, the "Test" option will allow the installer to check them without the risk of generating false alarms

A logical entity for automatic time-management of programmed peripherals or elements. SmartLiving control panels provide 10 timers.

Transceiver-equipped devices

In two-way wireless systems, all the devices are equipped with transceivers. In one-way wireless systems, the main unit is equipped with a receiver module whereas the peripheral devices are equipped with transmitters.

Each code is programmed with:

- A 4, 5 or 6 digit PIN which allows access to the system.
- A label which identifies the user (usually the user's name).
- The group of partitions it controls (arms, disarms, etc.).
- A group of pre-set parameters which allow the operator to work on the system in accordance with its authorized access level (for example, a code can be enabled to consult the events log but not to change the date and time).
- A hierarchical level, that may allow the user to change to parameters of codes on a lower level in the system hierarchy.
 - User (the lowest level)
 - Manager
 - Master

List of functions available to the user after entry of a valid code at the keypad.

This device allows the control panel to send voice calls to programmed contact numbers.

In SmartLiving control panels the voice dialer function is provided by the SmartLogos30M board (accessory item).

If the system is equipped with a SmartLogos30M voice board, all keypads with voice functions present in the system configuration will allow users to record memos. Messages can be recorded, played and deleted as required.

An intrusion control system whose devices (detectors, keypads, keyfobs) communicate with the control panel over radio waves.

Usually, only the control panel of wireless-systems is mains powered (220Va.c.) while, the wireless devices are battery powered. The battery life is of utmost importance in the design layout and operational capacity of these systems.

An electrical input point used for the management/supervision of signals coming from an intrusion detection device.

PRIMARY POWER SOURCE

READER

SCENARIO

SHORTCUTS

SMOKE DETECTORS

SUPERVISION

TAMPER

TELEPHONE ACTIONS

TELESERVICE

TEST ZONE

TIMER

TRANSCEIVER

USER CODE

USER MENU

VOICE DIALER

VOICE MEMO

WIRELESS


ZONE

SHORTCUTS AT DEFAULT

n.	Icon	description	function	parameter
1		Arm/Disarm	Applies a pre-set scenario	which scenario
2		Stop alarms	Immediately deactivates the outputs relative to zone/partition alarm and tamper events and system tamper events.	
3		Clear call queue	Cancels the entire call queue and stops ongoing calls (if any).	
4		Delete memory	Carries out a "Stop alarms" operation and, at the same time, deletes memory of system and partition alarm and tamper events.	
5		Activate output	Activates one of the programmed outputs.	Output
6		Deactiv. outputs	Deactivates one of the programmed outputs.	Output
7		Overtime	Delays auto-arming time of partitions by 30 minutes.	
8		Teleservice req.	Sends a call to the Installer company number (Teleservice number).	
9		Voice menu	Plays a recorded voice message which announces the shortcuts assigned to the number keys.	User code
10		Listen-in	Allows eavesdropping over-the-phone by means of a microphone located on suitably placed keypad.	Keypad
11		Intercom Call	Accesses the user menu section: Voice functions/intercom Call	
12		Arm/disarm menu	Accesses the user menu section: Arm/Disarm	
13		Alarm menu	Accesses the user menu section: Manage alarms	
14		Voice func. menu	Accesses the User Menu section: Voice functions	
15		Activations menu	Accesses the user menu section: Activations	
16		View Nexus status	Accesses the user menu section: View/Nexus status	
17		Arming status	Provides voice information regarding the armed/disarmed status of the partitions.	
18		Keypad sett. menu	Accesses the user menu section: Keypad settings	
19		Zone Bypass menu	Accesses the user menu section: Activations/Zones	19

n.	Icon	description	function
20		Voice memo	Accesses the user menu section: Voice functions
21		Output control	Accesses the user menu section: Outputs ON/OFF
22		Enab. answerphone	Accesses the user menu section: Activations/Answerphone
23		Enab. teleservice	Accesses the user menu section: Activations/Teleservice
24		Enable codes	Accesses the user menu section: Activations/Codes
25		Enable keys	Accesses the user menu section: Activations/Keys
26		Enable timers	Accesses the user menu section: Activations/Timers
27		Enab. auto-arm	Accesses the user menu section: Activations/Auto-arming
28		View events log	Accesses the user menu section: View/Events log
29		View alarm log	Accesses the user menu section: View/Alarms log
30		View faults log	Accesses the user menu section: View/Faults log
31		View arm ops log	Accesses the user menu section: View/Arm/Disarm op.
32		View System Status	Accesses the user menu section: View/System status
33		View zone status	Accesses the user menu section: View/Zone status
34		Change PIN	Accesses the user menu section: Change PIN
35		Time/Date	Accesses the user menu section: Time/Date
36		View faults	Accesses the user menu section: View/Faults
37		Thermostat menu	Accesses the user menu section: Thermostat
38		Panic	Activates a "Panic" event

FAULT SIGNALS

The following table shows the system faults which are signaled on the yellow LED on the keypad  :

FAULT	Message on the User menu, "View/Faults"	Probable cause	Note
Zone fuse blown	Zone fuse fault	Excessive current draw on the "+AUX" terminals of the control panel	
BUS fuse blown	IBUS fuse fault	Excessive current draw on the "+" terminal of the control panel	
Backup battery inefficient or not connected	Low battery	The backup battery of the control panel is almost empty or disconnected.	
Primary power-source loss	Mains failure	The primary power source voltage (230 Vac) has failed or has been disconnected	
The PSTN landline is unavailable	Tel. line down	Trouble on the PSTN landline	
Interference	Jamming	Wireless transmission is poor	
Wireless detector battery low	Low battery WLS	The battery of at least one wireless detector is running out	To view "LowBatt. battery WLS" and "WLS zone loss" signaling, access the user menu, go to "View/Faults", press OK to view the list of devices involved.
Wireless detector not operative	WLS zone loss	At least one wireless detector is not operating	
Nexus GSM dialer faults	Nexus fault / Low signal	The GSM network signal is insufficient	Press OK on "Nexus fault" to access the list of current faults.
	Nexus fault / GSM module fault	The GSM module of the Nexus dialer is not operating properly. Call your Installer company	
	Nexus fault / SIM commun.fault	The SIM card does not respond or is not present. The SIM card PIN is not disabled.	
	Nexus fault / Low Credit	The credit left on the SIM card is below the minimum credit threshold.	
	Nexus fault / ProviderUnavailable	The GSM network provider of the SIM in use is unavailable.	
Nexus fault /GPRS conn. lost	NEXUS/G detects problems on GPRS network communications		
IP connection loss	IP conn. lost	The verification of the IP connection fails.	
Device loss or tamper in progress	LossTamp.ongoing	One of the following events has occurred: <ul style="list-style-type: none"> • Control panel open • Dislodged panel • Expansion tamper • Keypad tamper • Reader tamper • Sound.flash.Tamp • Expansion loss • Keypad loss • Reader loss • Sound.flash.Loss 	
Faults on IVY-BUS sounderflasher	Sounder faults / Horn fault	A defect/damage has been detected on the horn/sounder.	Press OK on "Sounder faults" to access the list of devices which have at least one fault present. Press OK on the selected sounderflasher to access the list of current faults on the device concerned.
	Sounderflasher faults / Low-Batt.Soundfl.	A low-voltage value has been detected on the sounderflasher battery. If the voltage drops below 10V, the device will inhibit the sounder and activate only the flasher (in the event of an alarm). If the voltage drops below 8V, the device will inhibit both the sounder and the flasher.	
	Sounderflasher Faults / Battery resist.	An excessive internal resistance has been detected on the sounderflasher battery. This type of deep fault indicates corrosion inside the battery, therefore, the battery must be replaced.	
Violation of zones with faults	Faults on zones	Violation has occurred on one or more zones with the "Fault zone" option enabled.	
Contaminated smoke sensor	Detector dusty	The smoke chamber of at least one of the Air2-FD100 smoke detectors is contaminated by dirt or dust.	Press OK to access the list of zones involved.

