

EN**


CODE: **EN54-7A40** v.1.1/V TYPE: **EN54 27,6V/7A/2x40Ah**

power supply for fire alarm systems







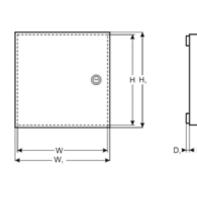

 ϵ

"This product is suitable for the systems designed in compliance with the standards EN 54-4 and EN 12101-10"

Requirements	Requirements according to standards	PSU EN54-7A40
External Power Supply failure indication	YES	YES
Two independent power supply outputs protected against short-circuit	YES	YES
Temperature-compensated battery charging	YES	YES
Measurement of the resistance of the battery circuit	YES	YES
Low battery indication	YES	YES
Deep discharge battery protection	YES	YES
Protection against short-circuit of the battery terminals	YES	YES
Blown battery fuse indication	YES	YES
Charging circuit failure indication	YES	YES
Low output voltage indication	YES	YES
High output voltage indication	YES	YES
Indication of power supply failure	YES	YES
Overvoltage protection	YES	YES
Short-circuit protection	YES	YES
Overload protection	YES	YES
Output of collective failure ALARM	YES	YES
EPS technical output	YES	YES
APS technical output	YES	YES
PSU technical output	-	YES
Input of an external failure indication EXTi	-	YES
Controlled relay output EXTo	-	YES
Remote battery test	-	YES
~230 V mains supply voltage measurement	-	YES
LED optical indication	-	YES
Tamper indicating enclosure opening	-	YES



PSU features:

- In accordance with standards: EN 54-4, EN12101-10
- 27,6 V DC/ 7 A uninterruptible power supply
- battery housing for two 40 Ah/12 V batteries
- independently protected outputs AUX1 and AUX2
- high efficiency 82%
- low level of voltage ripple
- · microprocessor-based automation system
- intelligent PSU overload protection
- · measurement of the resistance of the battery circuit
- · automatic temperature-compensated charging
- battery test
- · two-stage battery charging process
- · accelerated battery charging
- monitoring of the continuity of the battery circuit
- · monitoring of the battery voltage
- · monitoring of the battery fuse
- monitoring of charging and maintenance of the batteries
- deep discharge battery protection (UVP)
- · battery overcharge protection
- battery output protection against short-circuit and reverse connection
- · monitoring of the load current
- · output voltage control
- fuse monitoring of AUX1and AUX2 outputs
- ~230 V mains supply voltage measurement
- "SERIAL" communication port with implemented MODBUS RTU protocol
- Power Security" is a free application for remote monitoring of power supplies (for PC and Android Phones)

- remote monitoring (options: WiFi, Ethernet, RS485, USB)
- remote battery test (additional modules required)
- cooperation with optional EN54-LB4 or EN54-LB8 fuse modules
- optical indication of PSU overload OVL
- · acoustic indication of failure
- adjustable delay for ~230 V power loss indication
- · relay output of collective failure ALARM
- input of collective failure EXTi
- controlled relay output EXTo
- technical inputs/outputs with galvanic isolation
- EPS technical output indicating ~230 V power loss
- PSU technical output indicating PSU failure
- APS technical output indicating battery failure
- internal memory of PSU operating status
- optical indication LED panel
 - · output current readings
 - output voltage readings: AUX1, AUX2
 - · resistance of the battery circuit
 - ~230 V mains voltage readings
 - · failure codes with history
- · protections:
 - SCP short-circuit protection
 - · OLP overload protection
 - · OHP overheat protection
 - OVP overvoltage protection
 - Surge protection
 - Antisabotage protection Tamper
- · closing the enclosure lock
- convection cooling
- warranty 5 years from the production date

General description

The buffer power supply has been designed for an uninterrupted supply of fire alarm systems, smoke and heat control systems, fire protection equipment and fire automatics requiring stabilized voltage of 24 V DC (± 15%). The PSU is fitted with two independently protected outputs AUX1 and AUX2, which supply voltage of **27,6 V DC** with a total output current:

Continuous operation
Output current Imax a=5 A

Instantaneous operation
Output current Imax b=7 A

In case of power loss, the PSU switches to battery power, providing uninterruptible power supply. The PSU is enclosed in a metal casing (RAL 3001 - red) with battery housing for two 40 Ah/12 V batteries. The PSU works with maintenance-free lead acid batteries made with AGM technology or gel technology.




Functional class EN 42404 40:2007		
Functional class EN 12101-10:2007	A ~220 V	
Mains supply Current consumption	~230 V 1.36 A	
	· ·	
PSU's power	50 Hz 193 W	
Efficiency	82%	
Output voltage at 20 °C	22,0 V÷ 27,6 V DC – buffer operation	
	20,0 V÷ 27,6 V DC – battery-assisted operation	
Output current	Continuous operation: Imax a=5 A Instantaneous operation: Imax b=7 A	
Maximal resistance of the battery circuit	300m Ohm	
Ripple voltage	100mV p-p max.	
Current consumption by the PSU	I = 78mA	
during battery-assisted operation	Caution! If the power supply is connected with the communication interface or	
	fuse module, additional current consumption should be considered.	
Battery charging current Coefficient of temperature compensation of the	2 A	
battery voltage	-40mV/ °C (-5 °C ÷ 40 °C)	
Low battery voltage indication	Ubat < 23 V, during battery mode	
	U>30,5 V, disconnection of the output voltage (AUX+ disconnection), automatic	
Overvoltage protection OVP	return	
Short-circuit protection SCP	F8 A – current limit, F _{AUX} melting fuse (failure requires fuse replacement)	
Overload protection OLP	Hardware - Software	
Battery circuit protection SCP and reverse	F10 A- current limit, F _{BAT} melting fuse (failure requires fuse replacement)	
polarity connection Deep discharge battery protection UVP	, and a , , , , , , , , , , , , , , , , , ,	
TAMPER output indicating enclosure opening	U<20 V (± 2%) – disconnection (+BAT) of the batteries, Microswitch TAMPER	
Technical outputs:	- type – electronic, max 50mA/30 V DC, galvanic isolation 1500 V _{RMS}	
- EPS FLT; indicating AC power failure	- delay time approximately 10s/1m/10m/30m (+/-5%) – configured from the LED	
- APS FLT; indicating battery failure	panel - type – electronic, max 50mA/30 V DC, galvanic isolation 1500 V _{RMS}	
- PSU FLT; indicating PSU failure	- type – electronic, max 50mA/30 V DC, galvanic isolation 1500 V _{RMS}	
- ALARM; indicating collective failure	- type – relay: 1 A@ 30 V DC/50 V AC	
,	CAUTION! In Fig.2 the set of contacts shows a potential-free status of the relay, which corresponds to power supply failure.	
	Voltage "ON" – 10÷30 V DC	
EXTi technical input	Voltage "OFF" – 0÷2 V DC	
	Level of galvanic isolation 1500 V _{RMS}	
EXTo relay output	1 A@ 30 V DC /50 V AC	
•	- LEDs on the PCB of the power supply unit,	
	- LED panel	
	output current readings	
Optical indication:	 output voltage readings: AUX1, AUX2 	
	 resistance of the battery circuit 	
	mains supply voltage	
	failure codes and history	
Acoustic indication:	- piezoelectric indicator ~75dB /0,3m	
Fuses:	T 0 0 A / 050 V	
- F _{MAINS} - F _{BAT}	T 6,3 A / 250 V F 10 A / 250 V	
_	F 8 A / 250 V	
- F _{AUX1} - F _{AUX2}	F 8 A / 250 V	
· MUAZ	- USB-TTL "INTU" interface; USB-TTL communication	
	- RS485 "INTR" interface; RS485 communication	
Additional equipment	- USB-RS485 "INTUR" interface; USB-RS485 communication	
(not included)	- Ethernet "INTE" interface; Ethernet communication	
(not moraded)	- WiFi "INTW" interface; WiFi wireless communication	
	- RS485-Ethernet "INTRE" interface; RS485-Ethernet communication	
O	- RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication	
Operating conditions	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C	
Enclosure Enclosure dimensions	Steel plate DC01 1,2mm, color: RAL 3001 (red) W=420 H=420 D+D ₁ =182 + 8 [+/- 2mm]	
Life of the control o	W ₁ =425 H ₁ =425 [+/- 2mm]	
Net/gross weight	11,8/13,3 kg	
	2x40 Ah/12 V (SLA) max. H↑	
Net/gross weight Fitting battery	2x40 Ah/12 V (SLA) max. 400 x 180 x 175mm (WxHxD) max	
Fitting battery	2x40 Ah/12 V (SLA) max. 400 x 180 x 175mm (WxHxD) max H	
	2x40 Ah/12 V (SLA) max. 400 x 180 x 175mm (WxHxD) max Key lock	
Fitting battery	2x40 Ah/12 V (SLA) max. 400 x 180 x 175mm (WxHxD) max Key lock Certificate of constancy of performance CNBOP-PIB No 1438-CPR-0385, certificate of approval CNBOP-PIB No 2174/2014,	
Fitting battery Closing	2x40 Ah/12 V (SLA) max. 400 x 180 x 175mm (WxHxD) max Key lock Certificate of constancy of performance CNBOP-PIB No 1438-CPR-0385,	



Parameters remote control system.

(additional modules required)

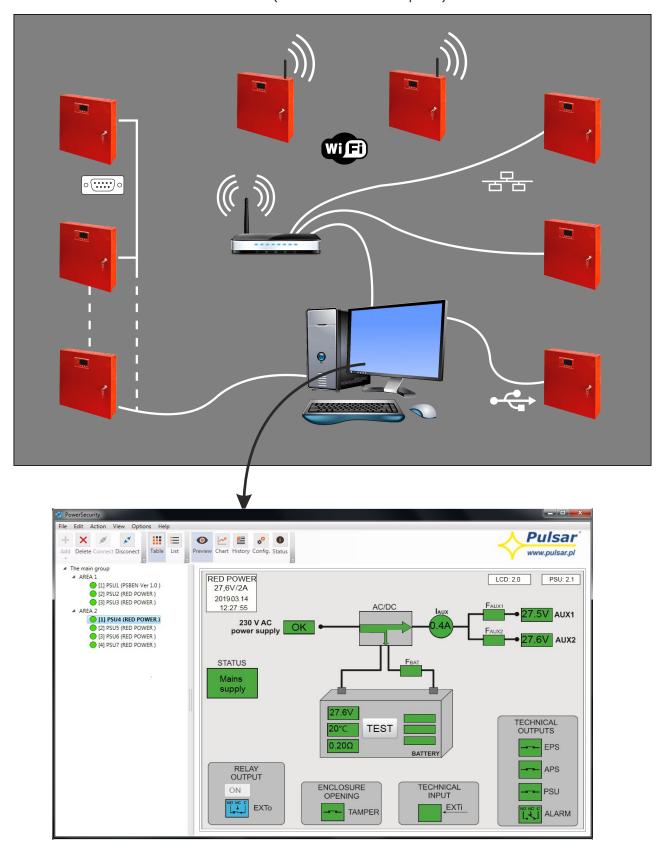




Remote monitoring (options: Wi-Fi, Ethernet, RS485, USB).

The PSU has been adjusted to operate in a system that requires a remote control of the parameters in a monitoring centre. Transmitting data concerning PSU status is possible due to an additional, external communication module responsible for communication in Wi-Fi, Ethernet or RS485 standard. It is possible to connect the PSU and the computer via the USB –TTL interface.

Different connection topologies, presented later in this chapter, are only a part of possible communication schemes. More examples can be found in the manuals dedicated to individual interfaces.

Communication via the USB-TTL interface.


The easiest way of communication between the PSU and the computer is provided by the USB-TTL "INTU" interface. This interface allows direct connection between the computer and the PSU and is recognizable by the operating system as a virtual COM port.

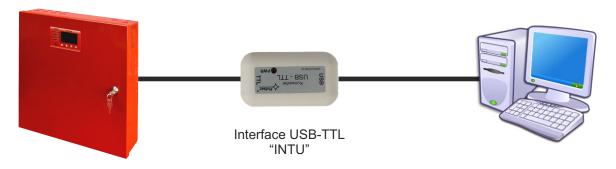

USB-TTL communication using the USB-TTL "INTU" interface.

RS485 network communication.

Another type of network communication is the RS485 communication using two-wire transmission path. To achieve this kind of data exchange, the PSU should be equipped with the additional RS485 TTL "INTR" interface, converting data from the PSU into the RS485 standard and the USB-RS485 "INTUR" interface, converting data from the RS485 network to the USB. Offered interfaces are galvanically isolated and protected against surges.

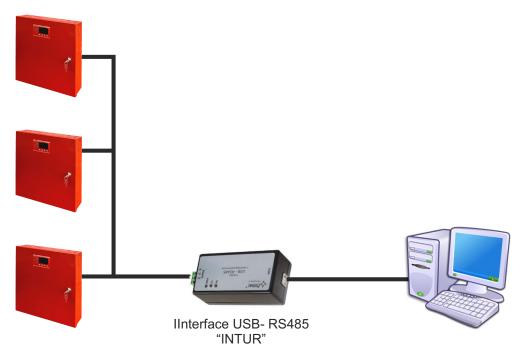


RS485 communication using the "INTR" and "INTUR" interfaces.




ETHERNET network communication.

Communication in the Ethernet network is possible due to the additional interfaces: Ethernet "INTE" and RS485-ETH "INTRE", according to the IEEE802.3 standard.

The Ethernet "INTE" interface features full galvanic isolation and protection against surges. It should be mounted inside the enclosure of the PSU.

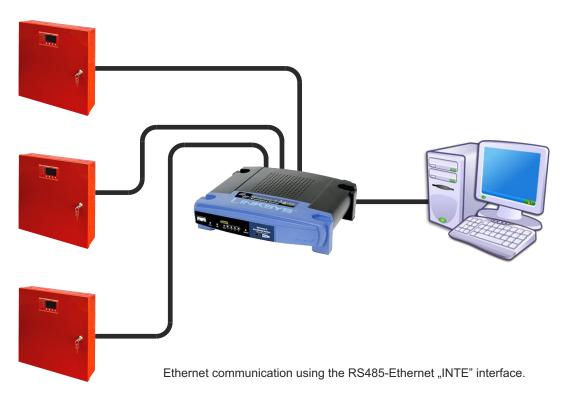

The RS485-ETHERNET "INTRE" interface is a device used to convert signals between the RS485 bus and the Ethernet network. For proper operation, the unit requires an external power supply in the range of 10÷30 V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

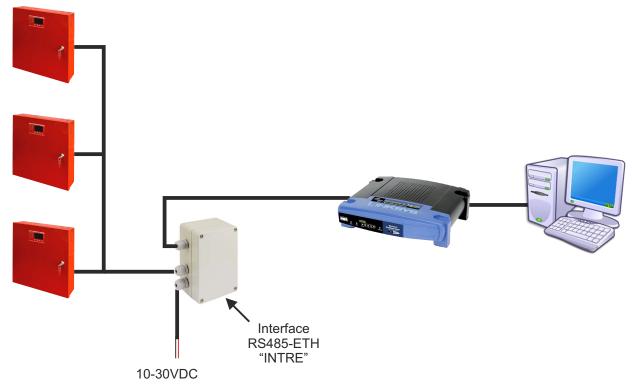


Ethernet communication using the RS485-Ethernet "INTRE" interface.




The Wi-Fi wireless communication.

The Wi-Fi wireless communication can be implemented on the basis of additional interfaces: WI-Fi 'INTW' and RS485-WiFi, operating within 2,4GHz frequency band, according to the IEEE 802.11 bgn standard. The WiFi 'INTW' interface shall be mounted in a selected location inside the enclosure so that the antenna is exposed to the outside.

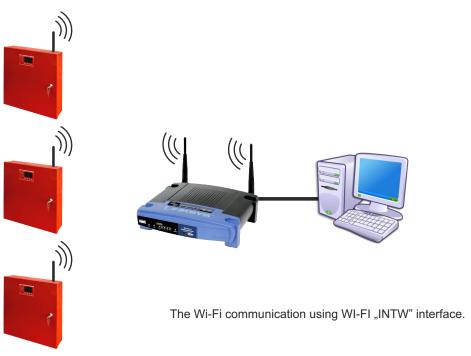

The RS485-WiFi "INTRW" interface is a device used to convert signals between the RS485 bus and the WiFi network. For proper operation, the unit requires an external power supply in the range of 10÷30 V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

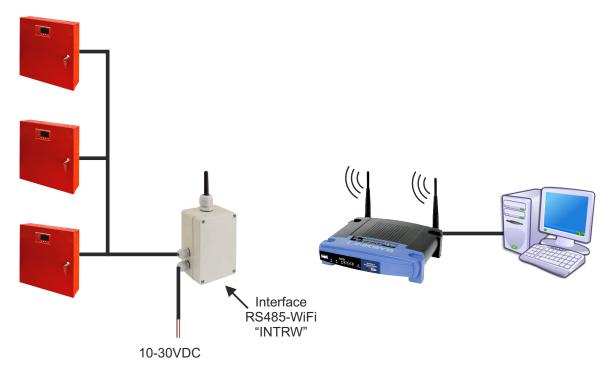


The The Wi-Fi communication using the RS485-WIFI "INTRW" interface.




Fuse modules EN54-LB4 and EN54-LB8

Fuse modules EN54-LB4 and EN54-LB8 allow to connect 4 or 8 receivers to the PSU. Output state is indicated by green LEDs.

Blown fuse signal is transmitted to the input of collective failure EXTi (ALARM) and saved in the internal memory of PSU. The PSU's relay output can also be used for remote control, including external optical indication.

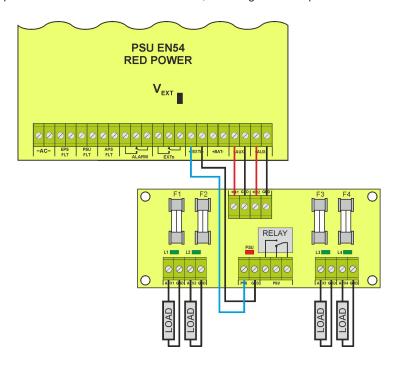

The connection of fuse module: EN54-LB4.

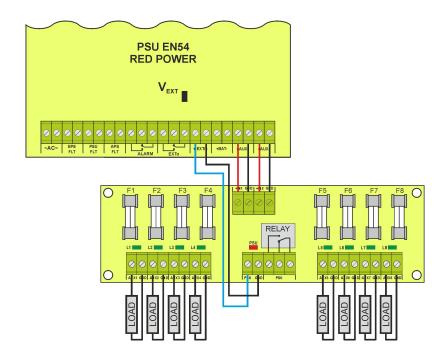

The connection of fuse module: EN54-LB8.