

Hochiki Addressable Wall Beacon Installation Instructions

Product Covered: CHQ-WB/WL, CHQ-WB(RED)/WL, CHQ-WB(WHT)/WL, CHQ-WB/RL, CHQ-WB(RED)/RL, CHQ-WB(WHT)/RL,
Compatible Bases: YBN-R/3, YBO-R/SCI, YBN-R/3(SCI), YBO-BS, YBO-BSB, YBO-BSB2/WL and YBO-BSB2/RL



Introduction

The CHQ-WB is a wall mounted visual alarm device. The following settings are controllable through the CIE*1

1. Flash rate 0.5Hz, 1Hz
2. Light output level (3 settings)
3. Loop Power or External Power

NOTE: For further details of coverage volume and voltage, current and power consumption please see application note AP131.

Factory Default Settings

CHQ-WB/WL	W-2.4-5.5 (0.5Hz)
CHQ-WB/RL	W-2.4-5 (0.5Hz)

For information on essential characteristics please refer to the relevant Declaration of Performance available at www.hochikieurope.com

IP Ratings

TYPE A (indoor) IP21
TYPE B (outdoor) IP33*2,3

Factory default is Loop Powered

Caution

The addressable beacon and base combination should be installed to the following guidelines:

- Ensure the Addressable Wall Beacon and Base are installed in accordance with Local Standards or Regulations.
- Addressable Wall Beacon and Base combinations should only be installed where ambient temperatures are between -10°C to +50°C and where the condensation and moisture levels are between 10% to 95% RH - Non condensing (at 40°C).
- Only install in suitable environments, the following should be avoided:
 - Situations in which condensation exists (unless CHQ-WPK is utilised).
 - Situations in which corrosive gases exist.
 - Situations in which obstacles exist, which could impede visual indication of the Addressable Beacon.
 - Hazardous areas.
- Only use the specified Hochiki mounting bases (or CHQ-WPK Weather Proofing Kit) with this wall beacon.
- Do not use a high voltage tester on the Addressable Beacon, the YBO-R/SCI Isolator Base, the YBN-R/3(SCI) Isolator Base, the YBO-BS Base Sounder and the YBO-BSB/BSB2 Base Sounder Beacons.

Certain actions can cause permanent damage to the Addressable Beacon. If the Beacon is subjected to any of the following it should not be used:

- Dis-assembly and re-assembly.
- Impact or shock.

If damage is suspected after a fire has occurred, the Addressable Beacon should be replaced. After installation, all Addressable Wall Beacons on the fire alarm system should be tested to confirm correct operation. Installation and maintenance should only be carried out by suitably trained engineers.

The Addressable Wall Beacon must be subject to periodic maintenance during regular service visits. This period should be outlined in the appropriate standards or recommendations. If there are no such standards existing, Hochiki recommend that the minimum period of maintenance should be 1 year and that the following should be taken into account:

- A regular operation test should be performed.
- A visual check for contamination and mechanical damage should be made.

*1 Panel compatibility required.

*2 Dependent on the utilisation of the CHQ-WPK Weather Proofing Kit.

*3 Only use the CHQ-WPK Weather Proofing Kit in conjunction with a YBN-R/3 mounting base.

Setting the Address

The CHQ-WB must have its address set before system operation. Using an installation plan that shows the proper location for each device, find the address for the CHQ-WB to be installed. Check that the address and location on the plan match correctly. Address is any number from 1 to 127. For address setting, use the Hochiki TCH-BXXX¹ Hand Held Programmer and write the address number on the beacon after setting. When address changing, renew the number on the label. See the TCH-BXXX¹ instructions (2-3-0-237) for further details of the setting method.


(¹ See www.hochikieurope.com for latest model no.)

Wiring and Locking Mechanism

The bases used with the beacon should be wired as shown in Fig 2 below. The CHQ-WB can also be locked onto the relevant base by removing a plastic lug on the underside of the beacon, please refer to Fig 1. The beacon can only then be removed by using a special Removal Tool (TSC-SRT) which is available from Hochiki Europe (UK) Ltd.

Remove tab carefully using a pair of pliers

Fig 1

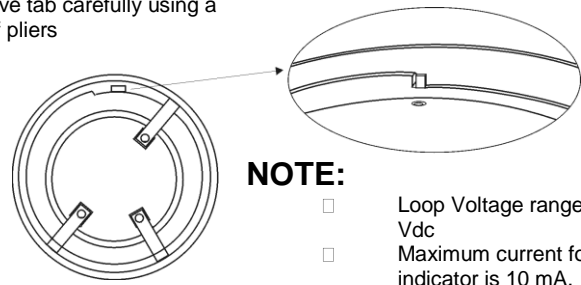


NOTE:

- Loop Voltage range 17 – 41 Vdc
- Maximum current for remote indicator is 10 mA.
- Base fixing centres are 48 mm to 74 mm
- Maximum wire thickness is 2.5 mm²/terminal
- If external power is used it must be 20-28 Vdc
- If external power is used, remote indicator is not available

NOTE: For further details of external power requirements please see application note AP131

A: Loop (+) B: Loop (-) C: Cable Screen D: EXT Power+ (if used) E: EXT Power- (if used)

Fig 2.

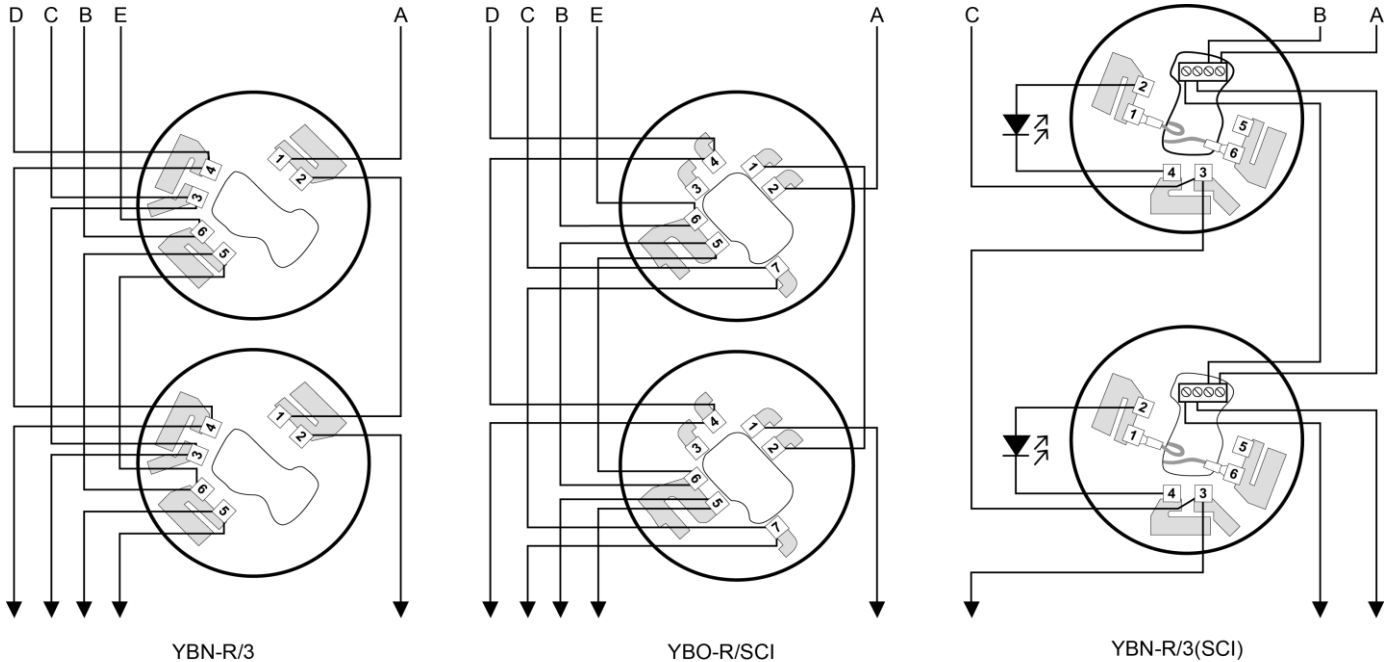

This wiring example does not show power connected

	CHQ-WB/WL CHQ-WB(WHT)/WL CHQ-WB(RED)/WL CHQ-WB(WHT)/WL-HFP CHQ-WB(RED)/WL-HFP	0832-CPR-F0902/15	15	EN54-23
	CHQ-WB/RL CHQ-WB(WHT)/RL CHQ-WB(RED)/RL CHQ-WB(WHT)/RL-HFP CHQ-WB(RED)/RL-HFP	0832-CPR-F0903/15	15	EN54-23

HOCHIKI

Hochiki Europe (UK) Ltd
Grosvenor Road, Gillingham Business Park,
Gillingham, Kent, ME8 0SA, England
Telephone: +44(0)1634 260133
Facsimile: +44(0)1634 260132
Email: sales@hochikieurope.com
Web: www.hochikieurope.com

Hochiki Europe (UK) Ltd. reserves the right to alter the specification of its products from time to time without notice. Although every effort has been made to ensure the accuracy of the information contained within this document it is not warranted or represented by Hochiki Europe (UK) Ltd. to be a complete and up-to-date description. Please check our web site for the latest version of this document.