



# Single-door Controller Board

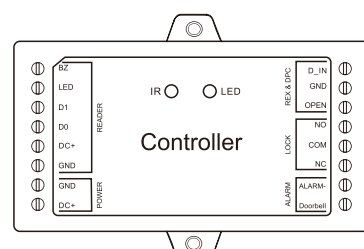

**Controller**

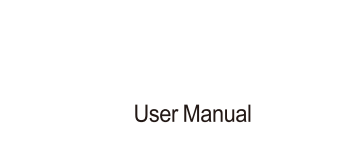

**User Manual**

### INTRODUCTION

The controller is a mini single door controller panel, can work with any Wiegand 26-44, 56, 58bits output reader. It uses Atmel microcontroller to assure stable performance, and equips with an infrared remote control for easy operation. The device supports 1,000 users, all user data can be transferred.

**Two versions available:**  
Standalone Controller  
WiFi Controller with Tuya APP

### FEATURES

**Controller:**

- > 12V DC power input
- > One relay, 1000 users
- > Multi access modes: Card, Card or PIN, and multi Cards/PINs
- > Wiegand 26-44, 56, 58bits input
- > Can connect with any keypad with Wiegand 26-44, 56, 58bits output
- > Can connect with any keypad reader with 4bits, 8bits (ASCII), or 10bits virtual number output
- > User data can be transferred (except fingerprint users)
- > 2 devices can be interlocked for 2 doors
- > Can connect with external alarm and door contact
- > Support Master Card and Authorized User

**APP Feature: (Only available for WiFi version)**

- > 500 APP users
- > iOS and Android available
- > Add / Delete users by APP (Only available for card users)
- > Can set Time Restriction for users
- > Temporary Code (One-time Or Period Code)
- > Support checking Opening Record
- > Remotely Access (Support 3G/4G/5G)
- > Multiple Access Modes: Smartphone, Card, PIN, Fingerprint
- > Doorbell Call Notice (Support External Door Bell)

### Specifications

<b>User Capacity</b>	<b>Hardware User: 1000</b>	<b>APP User: 500</b>
Common User	987	
Visitor User	10	
Panic User	2	
Authorized User	1	

### Operating Voltage

12V DC
Idle Current ≤ 100mA
Active Current ≤ 150mA

### Wiring Connections

**Relay output, exit button, alarm, door contact, Wiegand input, Door Bell (for WiFi version only)**

**Relay**  
Adjustable Relay Output Time: 0-99 Seconds (5 seconds default)  
Lock Output Load: 2 Amp Maximum

**Wiegand interface Input**  
Wiegand 26-44, 56, 58bits

### Environment

Indoor  
0-90%RH


### Physical

Colour: Black  
Dimensions: L91 x W48 x D20 (mm)  
Unit Weight: 63g  
Shipping Weight: 73g

### Carton Inventory

- 1 x Controller
- 1 x Panic Card
- 1 x Infrared Remote Control
- 1 x Infrared keyboard receiving window
- 1 x Status Indicator
- 1 x Diode M4004 (For relay circuit protection)
- 1 x Self-Tapping Screws 0.7\*25mm
- 1 x Wall Anchors
- 1 x Screw Driver
- 1 x Infrared
- 1 x Master Card

### INSTALLATION

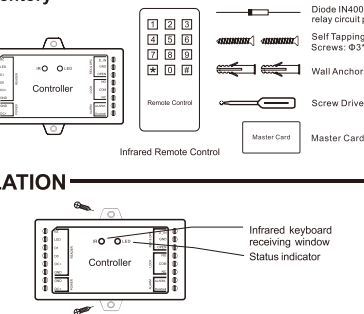

### Wiring


Name	Notes
<b>The Left Side</b>	
BZ	Buzzer Control
LED	LED Light Control
D1	Wiegand Input Data 1
D0	Wiegand Input Data 0
DC+	Positive Pole of Power Output
GND	Negative Pole of Power Output
DC+	Positive Pole of Power Input
<b>The Right Side</b>	
D_IN	Door Status Detecting
GND	Negative Pole of Door Contact
OPEN	Connect to One Wire of Exit Button
NO	Normally Open Relay Output (install diode provided)
COM	Negative Pole of Lock (Common Connection for Relay Output)
NC	Normally Closed Relay Output (install diode provided)
Alarm	Negative Pole of Alarm
Door bell	External Door bell (Only available for WiFi version)

### Sound and Light Indication

Operation Status	LED	Buzzer
Stand by	Red light bright	-
Enter into programming mode	Red light shines	One beep
In the programming mode	Orange light bright	One beep
Operation error	-	Three beeps
Exit from the Programming mode	Red light bright	One beep
Open lock	Green light bright	One beep
Alarm	Red light shines quickly	Beeps

### Connection Diagram

**Note:** For WiFi version, it's necessary to connect a "Door Contact" for monitoring the door status in the APP.

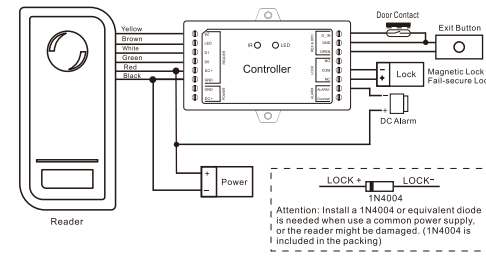

**When Use NO/NC/COM Dry Contact Output**

- 1) Remove the Pin Caps on points 1, 2 and points 3, 4
- 2) Insert one of the Pin Caps on points 1, 3
- 3) Fix the back cover, and keep the other Pin Cap well

**Remark:** The power supply's voltage must be the same with lock's supply voltage, or else, the lock will not work properly or be damaged.

### PROGRAMMING

Programming will be vary depending on access configuration. Follow the instructions according to your access configuration.

**Note:** Remote Control: Please use the Infrared Remote Control to program the Controller, "IR" on the Controller is the infrared receiving window, please direct the Remote Control to it.

**Cards** can be read on the RFID/Keypad/Fingerprint readers only. **PINs** can be input/added on either the remote control or the external Keypad Reader, except when the Keypad Reader is 10 digits virtual card number output, the PIN(s) can only be input/added through the Keypad Reader.

**User ID number:** Assign a user ID to the user in order to track it.  
The Common user ID: 0-996  
Authorized User ID: 987  
Panic User ID: 988-989  
Visitor User ID: 990-999

**IMPORTANT:** User IDs do not have to be processed with any leading zeros. Recording of User ID is critical. PIN. Can be any 4-6 digits

### Enter and Exit Program Mode

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Exit Program Mode	-

### Set Master Code

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New Master Code) # (Repeat New Master Code) # (Master code is any 6 digits)
3. Exit Program Mode	-

### Add Common Users

PIN/Card user ID: 0-986; PIN length: 4-6 digits

### Programming Step

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #

### Add Card User

2. Using Auto ID (Allows the device to assign Card to next available User ID number)  
OR  
2. Select Specific ID (Allows the device to define a specific User ID to associate the card to)

**1 (Read Card) / (Input 8/10 Digits Card Number) #**  
The cards can be added continuously.

**1 (User ID) # (Read Card) / (Input 8/10 Digits Card Number) #**

2. Add Card: Block Enrollment (Allows Master to add up to 987 cards to the Reader in a single step) Takes 2 minutes to program

**1 (User ID) # (Card Quantity) # (The first Card 8/10 Digits Number) #**  
Card's number must be consecutive; Card quantity = numbers of cards to be enrolled

### Add PIN User

2. Using Auto ID (Allows the device to assign PIN to next available User ID number)  
OR  
2. Select Specific ID (Allows the device to define a specific User ID to associate the PIN to)

**1 (PIN) #**  
**1 (User ID) # (PIN) #**

**Tips for PIN Security (Only valid for 6 digits PIN):**  
For higher security we allow you to hide your correct PIN with other numbers up to a max of 9 digits.  
Example PIN 123434  
You could use \*(123434)\* or \*(123434) (\*\* can be any numbers from 0-9)

### The device Connected with Fingerprint Reader:

For example:  
Connect SF1 as the fingerprint reader to the device, two steps to enroll the valid fingerprint.  
(1) Add the same Fingerprint (A) on SF1  
(2) Add the same Fingerprint (A) on the device as below:

1	Enter Program Mode: * (Master Code) #
2	1 (Press Fingerprint A on SF1) (Repeat Fingerprint A on SF1) # (ID auto allocated)
2	1 (User ID) # (Press Fingerprint A on SF1) (Repeat Fingerprint A on SF1) # (Select Specific ID)
3	-

**NOTE: Fingerprint Adding in the APP is not valid for WiFi version.**

### Add Authorized User

(User ID number is 987; PIN length: 4-6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card	1 (User ID) # (Read Card / Input 8/10 Digits Card number) #
OR	1 (User ID) # (0-9) # (PIN) #
2. Add PIN	1 (User ID) # (PIN) #
3. Enter Program Mode	-

**Remark:**  
Authorized user can be card or PIN, read the Authorized Card or input Authorized PIN, then all valid users can't access; read the Authorized Card or input Authorized PIN again, then all valid users can access again.

### Add Panic Users

(User ID number is 988-989; PIN length: 4-6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card	1 (User ID) # (Read Card / Input 8/10 Digits Card number) #
OR	1 (User ID) # (0-9) # (PIN) #
2. Add PIN	1 (User ID) # (PIN) #
3. Enter Program Mode	-

### Add Visitor Users

(User ID number is 990-999; PIN length: 4-6 digits)  
There are 10 groups Visitor PIN/card available, the users can be specified up to 10 times of usage, after a certain number of times, i.e. 5 times, the PIN/card become invalid automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card	1 (User ID) # (0-9) # (Read Card / Input 8/10 Digits Card number) #
OR	1 (User ID) # (0-9) # (PIN) #
2. Add PIN	1 (User ID) # (0-9) # (PIN) # (0-9 means times of usage, 0=10 times)
3. Enter Program Mode	-

### Delete Users

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Delete User - By card/PIN	2 (Read Card) / (Input PIN) #
OR	2 (User ID) #
2. Delete User - By ID number	2 (User ID) #
OR	2 (Input 8/10 Digits Card number) #
2. Delete ALL Users	2 (Master Code) #
3. Enter Program Mode	-

### Set Relay Configuration

The relay configuration sets the behaviour of the output relay on activation.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Pulse Mode	3 (1-99) # (factory default)
OR	The relay time is 1-99 seconds. (Default is 5 seconds)
2. Toggle Mode	3 0 # Sets the relay to ON/OFF Toggle mode
3. Enter Program Mode	-

### Set Access Mode

For Multi user access mode, the interval time of reading can not exceed 5 seconds, or else, the device will exit to standby automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Card Access	4 0 #
2. PIN Access	4 1 #
OR	4 3 # (factory default)
2. Card or PIN Access	4 3 (2-9) # (Only after 2-9 valid users, the door can be opened)
2. Multi User Access	4 3 (2-9) #
3. Enter Program Mode	-

### Set Strike-out Alarm

The strike-out alarm will engage after 10 failed entry attempts (Factory is OFF). It can be set to deny access for 10 minutes after engaging or disengage only after entering a valid card/PIN or Master code/card.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Door Open Detection	6 3 # (factory default)
OR	6 4 #
2. Enable Door Open Detection	6 4 #
Set Alarm Time	5 (0-3) # (factory default is 1 minute)
3. Enter Program Mode	-

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Strike-Out OFF	6 0 # (factory default)
OR	6 1 #
2. Strike-Out ON	6 2 #
OR	5 (0-3) # (factory default is 1 minute)
2. Strike-Out ON(Alarm)	Enter Master Code # or Master Card or valid User card/PIN to silence)
3. Enter Program Mode	-

### Set Door Open Detection

(Users will be suggested to connect a Door Contact on the device. Otherwise, in the mobile APP, the door status will be shown "ON" all the time, Or Connect "D\_IN" and "GND")

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Door Open Detection	6 3 # (factory default)
OR	6 4 #
2. Enable Door Open Detection	6 4 #
Set Alarm Time	5 (0-3) # (factory default is 1 minute)
3. Enter Program Mode	-

The function of **Set Alarm Time** also apply for anti-tamper alarm.

### Set Audible and Visual Response

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Sound	7 0 #
Enable Sound	7 1 # (factory default)
OR	7 2 #
2. LED Always OFF	7 2 #
LED Always ON	7 3 # (factory default)
3. Enter Program Mode	-

### Set Wiegand Format

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand Format Auto-identification	8 0 # (factory default)
OR	8 (26-44, 56, 58) #
2. Specified Wiegand Format	8 (26-44, 56, 58) #
3. Enter Program Mode	-

### Master Card Usage

Using Master Card to add and delete users

Add Card/PIN Users

1. Input (Master Card)
2. Input (Card) or (PIN) #
- Repeat step one for additional users
3. Input (Master Card) again

Delete Card/PIN Users

1. Input (Master Card) Twice within 5s
2. Input (Card) or (PIN) #
- Repeat step one for additional users
3. Input (Master Card) again

### User Operation & Reset to Factory Default

**Open the door:** Read valid user card or input valid user PIN  
**Remove Alarm:** Input Master Code # or read Master Card or valid user card / PIN or valid user card / PIN

**To reset to factory default & Add Master Cards:** power off, press the Exit Button (or connect "OPEN" and "GND" to be short circuit), hold it and power on, there will be two beeps, then release the exit button (or disconnect "OPEN" and "GND"), the LED light turns into yellow, then read any 125KHz EM card or HID cards or 13.56MHz Mifare card, the LED will turn into red, means reset to factory default successfully. Of the card reading, it is the Master Card.

**Remarks:**

- 1) The type of the Master Card is according to the external reader. For example: the external reader is 125KHz HID reader, then the Master Card must be 125KHz HID card.
- 2) If no Master Card added, must press the Exit Button for at least 5 seconds before release. (This will make the previous registered Master Card invalid)
- 3) Reset to factory default, the user's information is still retained.

### Advanced Application


#### Collection Card Mode

After this mode is turned on, all the cards can open the lock, at the same time, all cards are added in the device.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Collection Card Mode OFF	9 2 # (factory default)
OR	9 3 #
2. Collection Card Mode ON	9 3 #
3. Enter Program Mode	-

#### User Information Transfer (Valid for Card/PIN Users)

(Please note: only users added by the device can be transferred and valid for opening; users added by the mobile APP can also be transferred, but are unable to open the lock)  
The enrolled user can be transferred from a "Master" unit to a "Slave" unit. The Master code must be the same in the "Master" and the "Slave" unit.

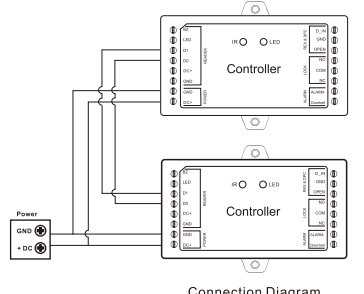

Connection Diagram

**Remarks:**

- > The Master units and Slave units must be same series devices
- > The Master Code of the Master unit and the Slave unit must be set to the same.
- > If the Slave unit is already with the users enrolled, it will be covered after transferring.
- > For full 986 users enrolled, the transfer takes about 30 seconds.

### Set Transferring on Master Unit:

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Set Transferring	9 8 #
3. Enter Program Mode	-

**Interlock**  
Let's name the two devices as "A" and "B" for two doors "1" and "2"  
**Step 1:** Enroll the users on Device A, then transfer the users' information to Device B by "User Information Transfer" function  
**Step 2:** Set both of the two devices (A and B) to Interlock function

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Interlock-OFF	9 0 # (factory default)
OR	9 1 #
2. Interlock-ON	9 1 #
3. Enter Program Mode	-

If enable interlock, when and only door 2 is closed, the user can read the valid users on Reader A, door 1 will open; then when and only door 1 closed, read valid users on Reader B, door 2 will open.